



# **HPE ProLiant DL380 Gen10 Plus Server User Guide**

Part Number: 30-13BA80FB-005

Published: October 2024

Edition: 5

# HPE ProLiant DL380 Gen10 Plus Server User Guide

## Abstract

This document is for the person who installs, administers, and troubleshoots servers and storage systems. Hewlett Packard Enterprise assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Part Number: 30-13BA80FB-005

Published: October 2024

Edition: 5

© Copyright 2024 Hewlett Packard Enterprise Development LP

## Notices

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from Hewlett Packard Enterprise required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Links to third-party websites take you outside the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for information outside the Hewlett Packard Enterprise website.

## Acknowledgments

Intel®, Itanium®, Optane™, Pentium®, Xeon®, Intel Inside®, and the Intel Inside logo are trademarks of Intel Corporation in the U.S. and other countries.

Microsoft®, Windows®, and Windows Server® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

VMware ESXi™ and VMware vSphere® are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.

Red Hat® Enterprise Linux® are registered trademarks of Red Hat, Inc. in the United States and other countries.

microSD® is a trademark or a registered trademark of SD-3D in the United States, other countries of both.

All third-party marks are property of their respective owners.

# Table of contents

Component identification.....	10
Front panel components.....	10
Front panel LEDs and buttons.....	14
UID button functionality.....	19
Front panel LED power fault codes.....	19
Systems Insight Display LEDs.....	20
Systems Insight Display combined LED descriptions.....	22
Rear panel components.....	24
Rear panel LEDs.....	25
System board components.....	27
Heatsink and socket components.....	29
DIMM label identification.....	29
Intel Optane persistent memory 200 series for HPE label identification.....	31
DIMM slot locations.....	32
System maintenance switch descriptions.....	33
Drive box identification.....	33
Drive numbering.....	37
HPE Basic Drive LED definitions.....	41
Fan bay numbering.....	43
DSC-25 2-port SFP28 card ports and LEDs.....	43
HPE NS204i-p NVMe OS Boot Device components.....	45
HPE NS204i-p NVMe OS Boot Device LED definitions.....	46
Operations.....	46
Power up the server.....	47
Power down the server.....	47
Extending the server from the rack.....	48
Secure cables using the cable management arm.....	50
Removing the server from the rack.....	52
Remove the access panel.....	53
Install the access panel.....	53
Removing the fan cage.....	54
Installing the fan cage.....	55
Removing the air baffle or midplane drive cage.....	56
Installing the air baffle.....	58

Removing a riser cage.....	59
Removing a riser slot blank.....	61
Removing the hard drive blank.....	62
Releasing the cable management arm .....	63
Accessing the Systems Insight Display.....	64
Setup.....	65
Optional services.....	65
Set up the server.....	66
Operational requirements.....	70
Space and airflow requirements.....	70
Temperature requirements.....	71
Power requirements.....	72
Electrical grounding requirements.....	72
Connecting a DC power cable to a DC power source.....	73
Server warnings and cautions.....	75
Rack warnings.....	76
Electrostatic discharge.....	77
Server box contents.....	77
Installing hardware options .....	78
Installing the product in a rack.....	78
POST screen options.....	83
Installing or deploying an operating system.....	84
Hardware options installation.....	84
Introduction.....	85
Hewlett Packard Enterprise product QuickSpecs.....	85
Installing a fan filter into the security bezel.....	85
Installing the bezel and bezel lock.....	87
Installing the cable management arm.....	88
Power supply options.....	92
Hot-plug power supply calculations.....	93
Installing a redundant hot-plug power supply.....	93
Installing the HPE 800 W Flex Slot -48 VDC hot-plug power supply.....	95
Installing the HPE 1600 W Flex Slot -48 VDC hot-plug power supply.....	106
Connecting a DC power cable to a DC power source.....	114
Energy pack options.....	115
HPE Smart Storage Battery.....	116
HPE Smart Storage Hybrid Capacitor.....	116
Minimum firmware versions.....	117

Installing an energy pack.....	117
Memory options.....	118
Memory population information.....	119
DIMM-processor compatibility.....	119
Installing a DIMM blank.....	119
Installing a DIMM.....	120
Intel Optane persistent memory 200 series for HPE.....	122
Persistent memory module-processor compatibility.....	123
Persistent memory module population information.....	123
System requirements for persistent memory module support.....	123
Installing persistent memory modules.....	124
Configuring the server for Intel Optane persistent memory 200 series for HPE.....	126
Fan options.....	127
Installing high-performance fans.....	131
Drive options.....	133
Drive guidelines.....	134
Installing a hot-plug SAS, SATA or NVMe drive.....	134
Installing an M.2 drive.....	137
Installing a Universal Media Bay.....	138
Storage controller options.....	142
Installing a storage controller.....	142
Riser and riser cage options.....	143
Installing primary and secondary risers.....	144
Installing tertiary risers.....	146
Installing a secondary riser cage.....	148
Installing a tertiary riser cage.....	151
Expansion slots.....	155
Supported PCIe form factors.....	155
Installing expansion boards.....	157
Accelerator options.....	160
Installing an accelerator or GPU.....	161
Drive cage options.....	167
Installing a front 8 NVMe drive cage.....	168
Installing a front 8 SFF SAS/SATA drive cage in box 1.....	170
Installing a front 8 SFF SAS/SATA drive cage in box 2.....	172
Installing a front/tertiary 2 SFF NVMe/SAS/SATA stackable drive cage.....	175
Installing a midplane drive cage.....	179
Installing a rear 2 SFF SAS/SATA drive cage in the primary or secondary riser.....	184

Installing a rear 2 SFF SAS/SATA drive cage over the power supplies.....	187
Installing a rear 2LFF SAS/SATA drive cage in the primary or secondary riser.....	193
Processor and heatsink options.....	196
Installing a processor heatsink assembly.....	196
Installing a high performance heatsink.....	199
Installing the chassis intrusion detection switch.....	205
Installing an OCP 3.0 adapter card.....	207
Installing the Pensando DSP DSC-25 2p SFP28 card.....	209
Installing the HPE NS204i-p NVMe OS Boot Device option.....	212
Installing a rear serial port interface.....	215
Installing the Systems Insight Display.....	216
HPE Trusted Platform Module 2.0 Gen10 Plus option.....	220
Overview.....	220
HPE Trusted Platform Module 2.0 guidelines.....	220
Installing and enabling the HPE TPM 2.0 Gen10 Plus option.....	221
Installing the Trusted Platform Module board.....	222
Preparing the server for installation.....	222
Installing the TPM board and cover.....	223
Preparing the server for operation.....	226
Enabling the Trusted Platform Module.....	227
Enabling the Trusted Platform Module as TPM 2.0.....	227
Enabling the Trusted Platform Module as TPM 1.2.....	228
Retaining the BitLocker recovery key/password.....	229
Cabling.....	229
Cabling guidelines.....	229
Power cabling.....	231
Cable routing: Front 8SFF power cabling.....	233
Cable routing: Front 12LFF power cabling.....	233
Cable routing: Midplane power cabling.....	236
Cable routing: Front 2SFF side-by-side power cabling.....	238
Cable routing: Rear 2SFF power cabling.....	239
Cabling diagrams.....	239
Cable routing: 2NVMe box 6 to AROC NVMe adapter.....	243
Cable routing: 6NVMe box 3 to 3-port primary riser.....	244
Cable routing: 6NVMe box 3 to 3-port primary riser.....	245
Cable routing: 8NVMe balanced box 2 to system board.....	246
Cable routing: 8NVMe P2 box 1 to system board/secondary riser.....	247
Cable routing: 8NVMe P1 box 3 to system board/primary riser.....	248

Cable routing: 12NVMe BAL P1 box 2+3 to system board/primary riser/OCP NVMe adapter/Type-a controller.....	249
Cable routing: 12NVMe BAL P2 box 1+2 to system board/4-port NVMe secondary riser.....	250
Cable routing: 12NVMe DIFF P1 box 2+3 to system board/4-port NVMe primary riser.....	251
Cable routing: 12NVMe DIFF P1 box 1+2 to system board/4-port NVMe secondary riser.....	252
Cable routing: 24NVMe Balanced.....	253
Cable routing: 24NVMe Differential.....	254
Cable routing: 8NVMe box 3 to 4-port primary riser.....	255
Cable routing: 8NVMe box 1 to 4-port secondary riser.....	256
Cable routing: 8NVMe box 1+2 to type-a controller.....	257
Cable routing: 8SFF box 2 to type-a controller.....	258
Cable routing: 8SFF box 3 to 2-port primary type-p controller.....	259
Cable routing: 8SFF box 2 to 2-port primary type-p controller .....	260
Cable routing: 2SFF side-by-side to primary type-p controller.....	261
Cable routing: 8SFF 4-port box 1 to 4-port secondary type-p controller.....	262
Cable routing: 8SFF 4-port box 2 to 4-port primary type-p controller.....	263
Cable routing: 8SFF 4-port box 3 to 4-port primary type-p controller.....	264
Cable routing: 8SFF box 1+2+3 to 4-port secondary type-p controller.....	265
Cable routing: 8SFF box 1+2+3 to 4-port primary type-p controller.....	266
Cable routing: 8SFF boxes 1, 2, and 3 to MR type-p/a controllers.....	267
Cable routing: 8SFF box 1+2+3 to type-a/p MR controller.....	274
Cable routing: 12LFF box 1+2+3 to type-a MR controller.....	275
Cable routing: 4LFF SAS/SATA box 7 to 4-port type-a controller.....	276
Cable routing: Front I/O cabling.....	276
Cable routing: Serial port.....	284
Cable routing: OCP NVMe enablement.....	286
Configuration resources.....	287
Updating firmware or system ROM.....	288
Configuring the server.....	289
Configuring storage controllers.....	290
Deploying an OS.....	292
Configuring security.....	293
Optimizing the server .....	293
Server management.....	294
Managing Linux-based high performance compute clusters.....	294
Troubleshooting.....	294
NMI functionality.....	295

Troubleshooting resources.....	295
Battery replacement.....	296
Specifications.....	297
Environmental specifications.....	297
Mechanical specifications.....	298
Power supply specifications.....	299
HPE 800 W Flex Slot Universal Hot-plug Low Halogen Power Supply.....	299
HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply.....	300
HPE 800 W Flex Slot Titanium Hot-plug Low Halogen Power Supply.....	301
HPE 800 W Flex Slot -48 VDC Hot-plug Low Halogen Power Supply.....	302
HPE 1000 W Flex Slot Titanium Hot-plug Power Supply.....	304
HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply.....	304
HPE 1600 W Flex Slot -48 VDC Hot-plug Power Supply.....	305
Support and other resources.....	306
Accessing Hewlett Packard Enterprise Support.....	306
Accessing updates.....	307
Remote support.....	307
Warranty information.....	308
Regulatory information.....	308
Documentation feedback.....	309

# Component identification

## Subtopics

[Front panel components](#)

[Front panel LEDs and buttons](#)

[Rear panel components](#)

[Rear panel LEDs](#)

[System board components](#)

[Drive box identification](#)

[Drive numbering](#)

[HPE Basic Drive LED definitions](#)

[Fan bay numbering](#)


[DSC-25 2-port SFP28 card ports and LEDs](#)

[HPE NS204i-p NVMe OS Boot Device components](#)

[HPE NS204i-p NVMe OS Boot Device LED definitions](#)

## Front panel components


### SFF front panel components

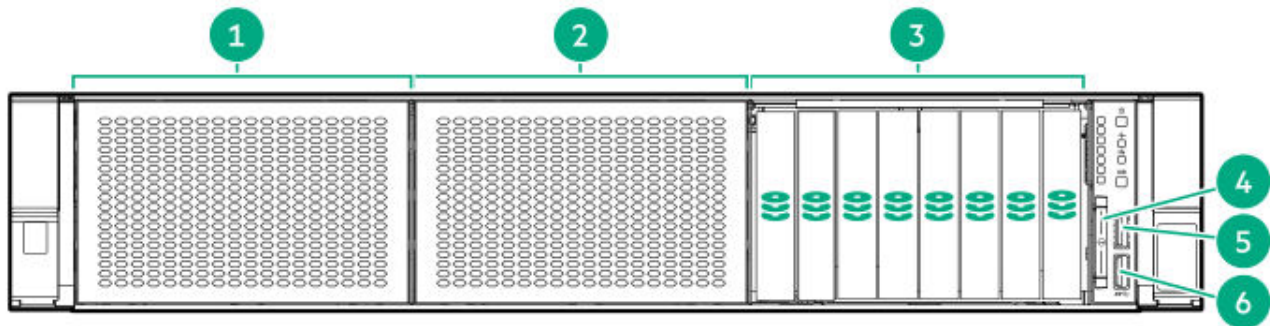

Item	Description
1	Box 1 (optional drives or universal media bay)
2	Box 2 (optional drives)
3	Box 3 Drives 1-8
4	Serial number/iLO information pull tab or optional <a href="#"><u>Systems Insight Display</u></a>

Item	Description
5	iLO Service port
6	USB 3.0 port

### Universal media bay components

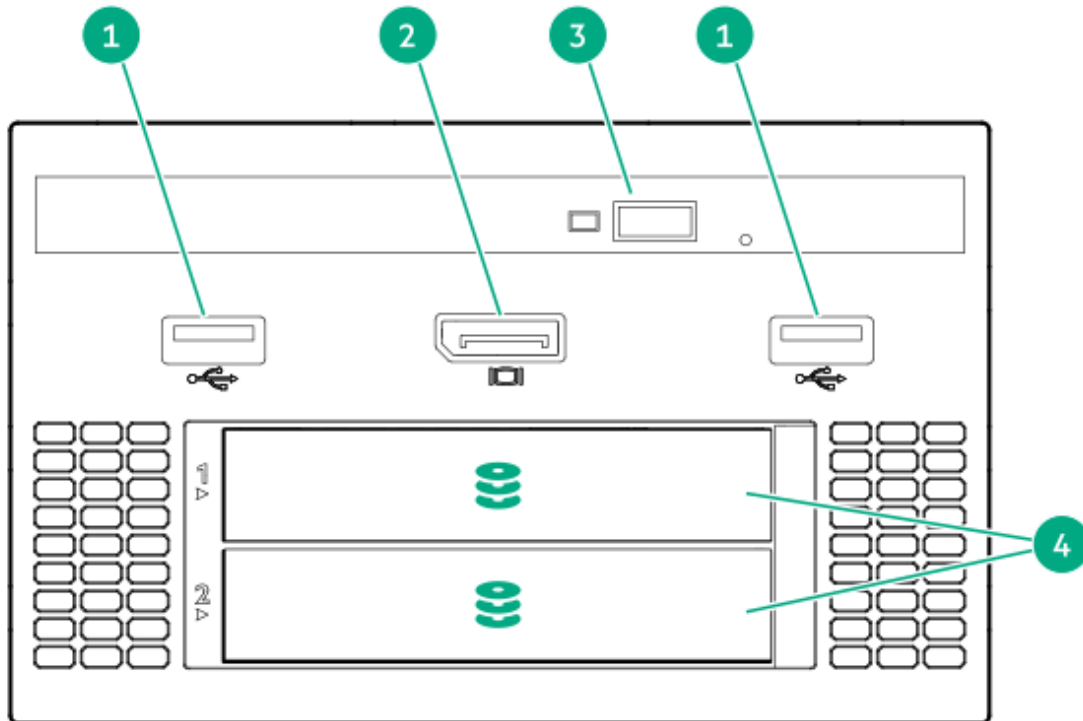


Item	Description
1	USB 2.0 port
2	Video display port
3	Optical disc drive (optional)
4	Drives (optional)

### 12-drive LFF front panel components




Item	Description
1	Drive bays or Optical/video/USB (optional)
2	Drive bays (optional)
3	Drive bays

### 8-drive LFF model front panel components

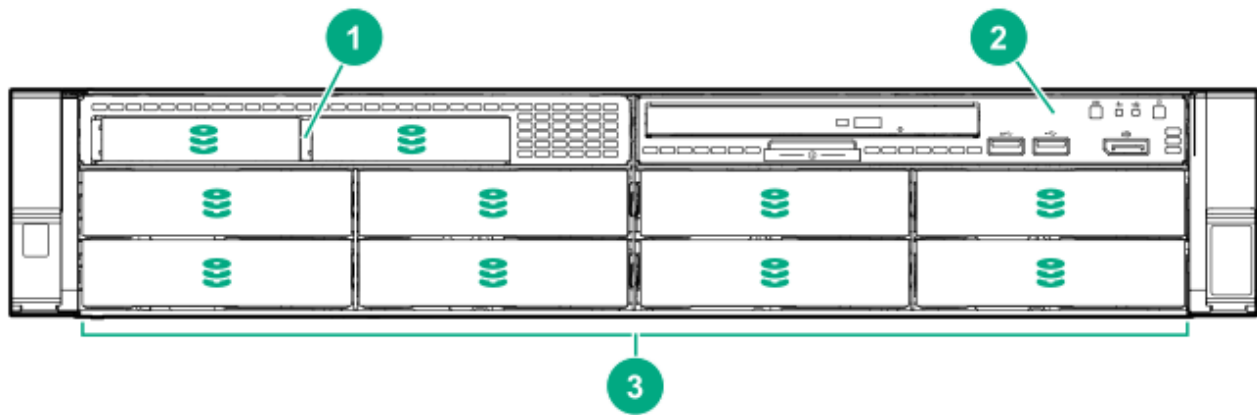

Item	Description
1	2 SFF module (optional)
2	LFF power switch module
3	Drive bays


## LFF power switch module components

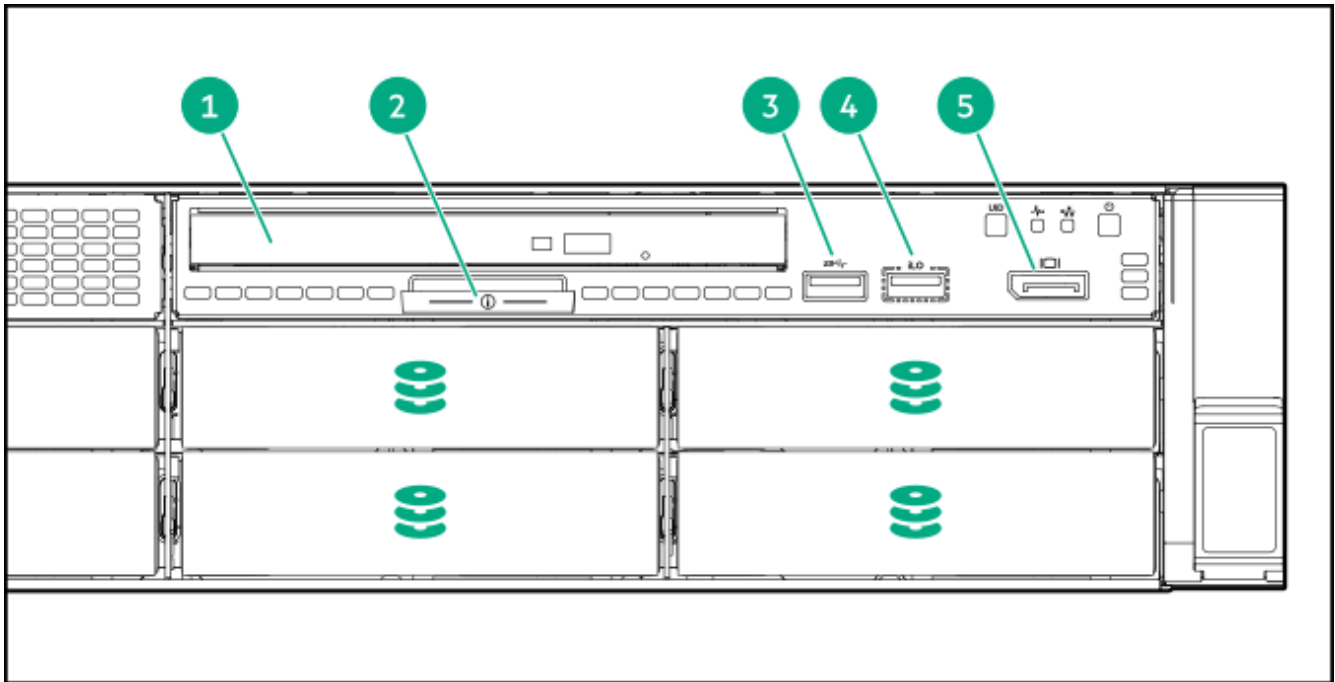

Item	Description
1	Optical disk drive
2	Serial number/iLO information pull tab
3	USB 3.0 port
4	iLO Service port
5	Display port

# Front panel LEDs and buttons

## SFF front panel LEDs and buttons

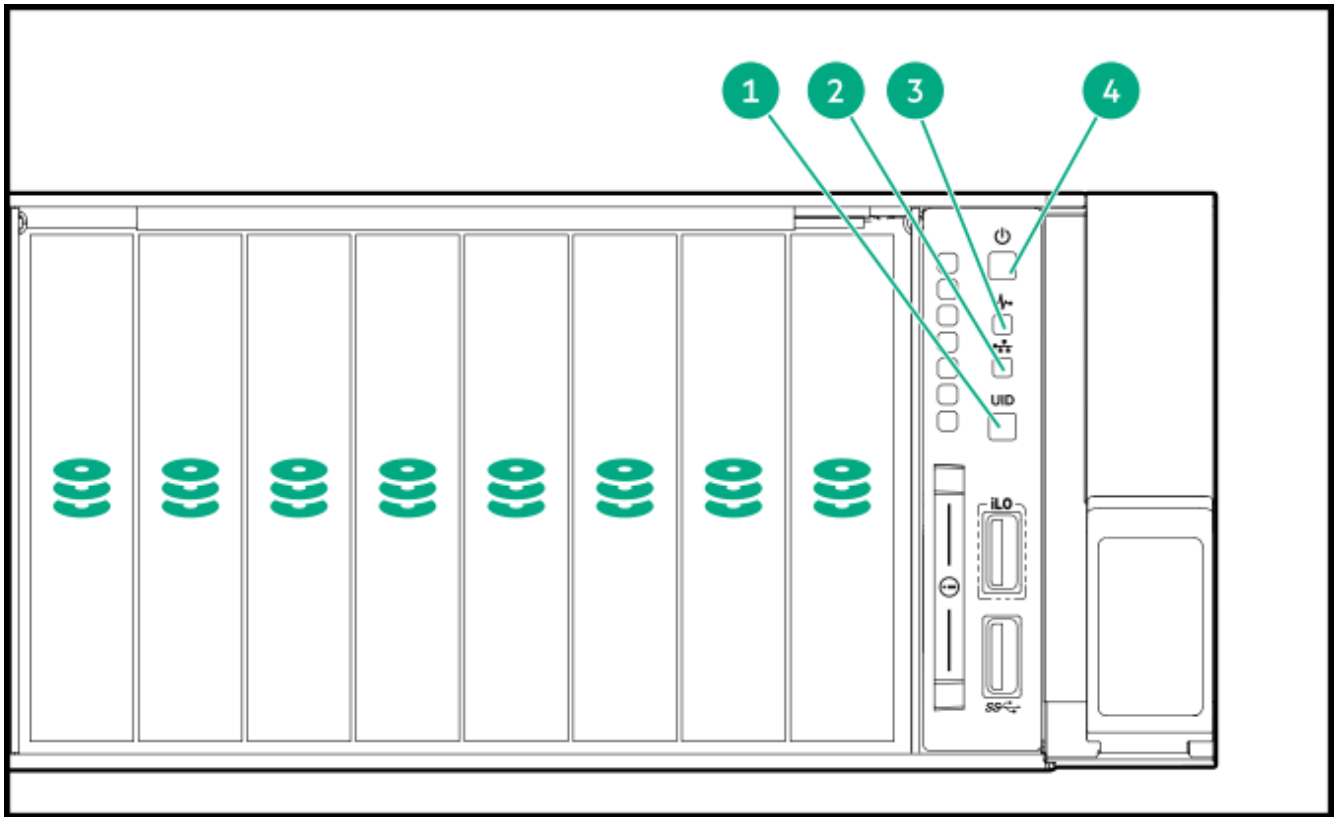

Item	Description	Status
1	UID button/LED $\frac{1}{-}$	<ul style="list-style-type: none"><li>• Solid blue = Activated</li><li>• Flashing blue:<ul style="list-style-type: none"><li>◦ 1 Hz/cycle per sec = Remote management or firmware upgrade in progress</li><li>◦ 4 Hz/cycle per sec = iLO manual reboot sequence initiated</li><li>◦ 8 Hz/cycle per sec = iLO manual reboot sequence in progress</li><li>◦ Off = Deactivated</li></ul></li></ul>
2	NIC status LED $\frac{1}{-}$	<ul style="list-style-type: none"><li>• Solid green = Link to network</li><li>• Flashing green (1 Hz/cycle per sec) = Network active</li></ul>


Item	Description	Status
		<ul style="list-style-type: none"> <li>Off = No network activity</li> </ul>
3	Health LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>Solid green = Normal</li> <li>Flashing green (1 Hz/cycle per sec) = iLO is rebooting</li> <li>Flashing amber = System degraded</li> <li>Flashing red (1 Hz/cycle per sec) = System critical <sup>2</sup><sub>—</sub></li> </ul>
4	Power On/Standby button and system power LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>Solid green = System on</li> <li>Flashing green (1 Hz/cycle per sec) = Performing power on sequence</li> <li>Solid amber = System in standby</li> <li>Off = No power present <sup>3</sup><sub>—</sub></li> </ul>

<sup>1</sup><sub>—</sub> When all four LEDs described in this table flash simultaneously, a power fault has occurred.

<sup>2</sup><sub>—</sub> If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

<sup>3</sup><sub>—</sub> Facility power is not present, the power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

## 12 LFF front panel LEDs and buttons

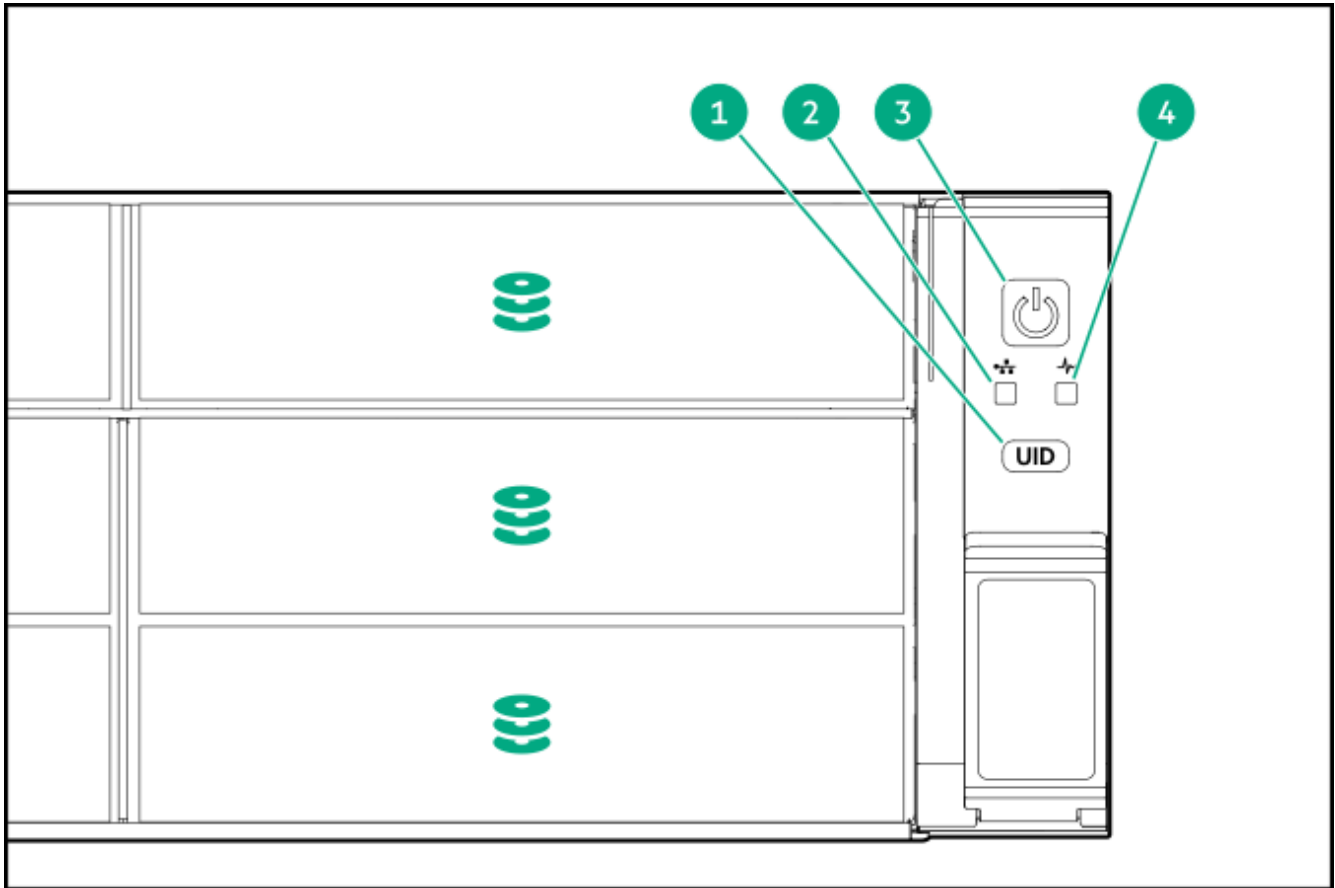

Item	Description	Status
1	UID button/LED <sup>1</sup> / <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid blue = Activated</li> <li>• Flashing blue: <ul style="list-style-type: none"> <li>◦ 1 Hz/cycle per sec = Remote management or firmware upgrade in progress</li> <li>◦ 4 Hz/cycle per sec = iLO manual reboot sequence initiated</li> <li>◦ 8 Hz/cycle per sec = iLO manual reboot sequence in progress</li> </ul> </li> <li>• Off = Deactivated</li> </ul>
2	NIC status LED <sup>1</sup> / <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = Link to network</li> <li>• Flashing green (1 Hz/cycle per sec) = Network active</li> <li>• Off = No network activity</li> </ul>


Item	Description	Status
3	Power On/Standby button and system power LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = System on</li> <li>• Flashing green (1 Hz/cycle per sec) = Performing power on sequence</li> <li>• Solid amber = System in standby</li> <li>• Off = No power present <sup>2</sup><sub>—</sub></li> </ul>
4	Health LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = Normal</li> <li>• Flashing green (1 Hz/cycle per sec) = iLO is rebooting</li> <li>• Flashing amber = System degraded</li> <li>• Flashing red (1 Hz/cycle per sec) = System critical <sup>3</sup><sub>—</sub></li> </ul>

<sup>1</sup> When all four LEDs described in this table flash simultaneously, a power fault has occurred.

<sup>2</sup> Facility power is not present, the power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

<sup>3</sup> If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

#### LFF power switch module LEDs and buttons

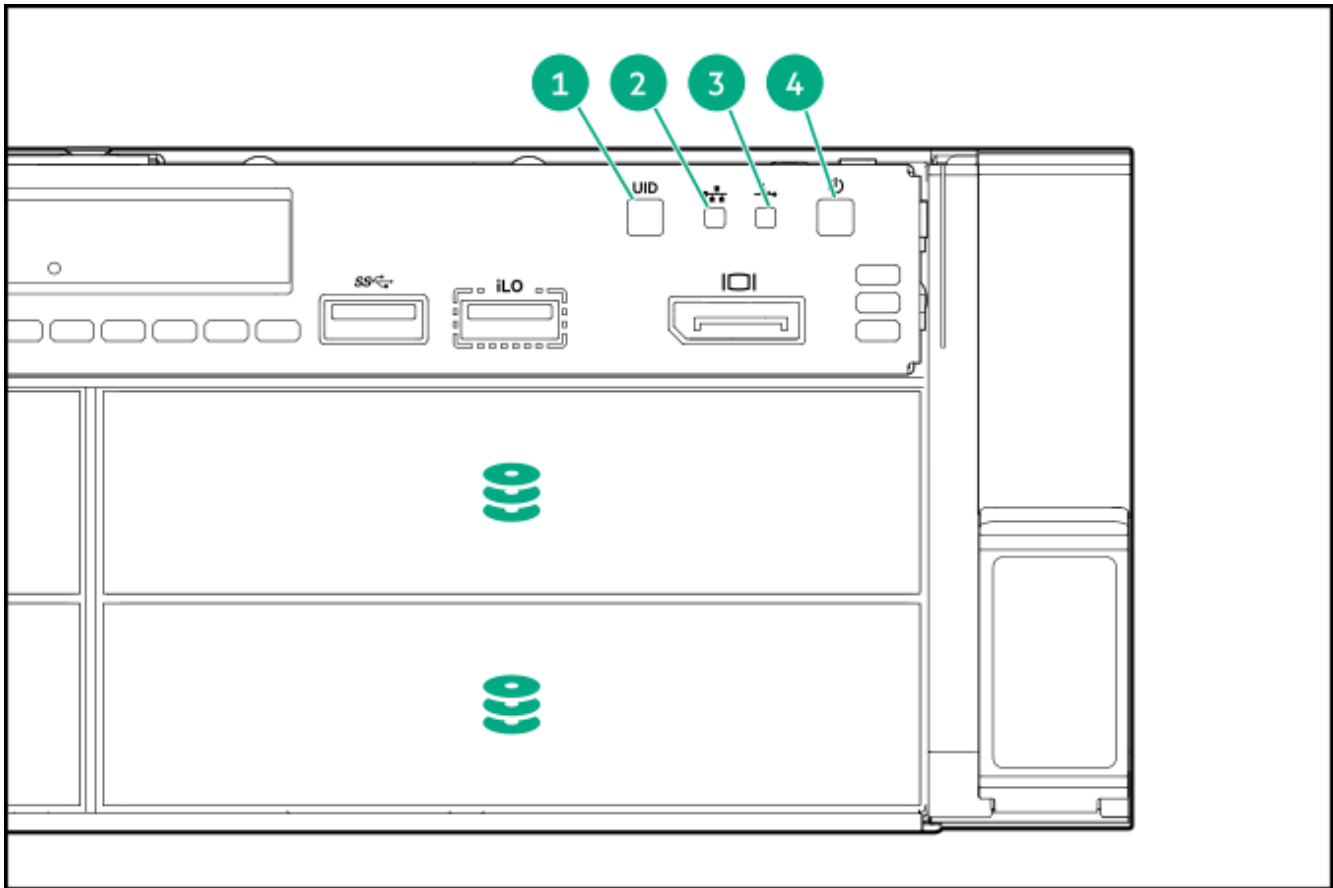

Item	Description	Status
1	UID button/LED <sup>1</sup> / <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid blue = Activated</li> <li>• Flashing blue: <ul style="list-style-type: none"> <li>◦ 1 Hz/cycle per sec = Remote management or firmware upgrade in progress</li> <li>◦ 4 Hz/cycle per sec = iLO manual reboot sequence initiated</li> <li>◦ 8 Hz/cycle per sec = iLO manual reboot sequence in progress</li> </ul> </li> <li>• Off = Deactivated</li> </ul>
2	NIC status LED <sup>1</sup> / <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = Link to network</li> <li>• Flashing green (1 Hz/cycle per sec) = Network active</li> <li>• Off = No network activity</li> </ul>

Item	Description	Status
3	Health LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = Normal</li> <li>• Flashing green (1 Hz/cycle per sec) = iLO is rebooting</li> <li>• Flashing amber = System degraded</li> <li>• Flashing red (1 Hz/cycle per sec) = System critical <sup>2</sup><sub>—</sub></li> </ul>
4	Power On/Standby button and system power LED <sup>1</sup> <sub>—</sub>	<ul style="list-style-type: none"> <li>• Solid green = System on</li> <li>• Flashing green (1 Hz/cycle per sec) = Performing power on sequence</li> <li>• Solid amber = System in standby</li> <li>• Off = No power present <sup>3</sup><sub>—</sub></li> </ul>

<sup>1</sup><sub>—</sub> When all four LEDs described in this table flash simultaneously, a power fault has occurred.

<sup>2</sup><sub>—</sub> If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

<sup>3</sup><sub>—</sub> Facility power is not present, the power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

## Subtopics

[UID button functionality](#)

[Front panel LED power fault codes](#)

[Systems Insight Display LEDs](#)

[Systems Insight Display combined LED descriptions](#)

## UID button functionality

The UID button can be used to display the Server Health Summary when the server will not power on. For more information, see the latest HPE iLO 5 User Guide on the [Hewlett Packard Enterprise website](#).


## Front panel LED power fault codes

The following table provides a list of power fault codes, and the subsystems that are affected. Not all power faults are used by all servers.

<b>Subsystem</b>	<b>LED behavior</b>
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
OCP adapter	5 flashes
Storage controller	6 flashes
System board PCIe slots	7 flashes
Power backplane	8 flashes
Storage backplane	9 flashes
Power supply	10 flashes
PCIe expansion cards installed in riser board	11 flashes
Chassis	12 flashes
GPU card	13 flashes

## Systems Insight Display LEDs

The Systems Insight Display LEDs represent the system board layout. The display enables diagnosis with the access panel installed.

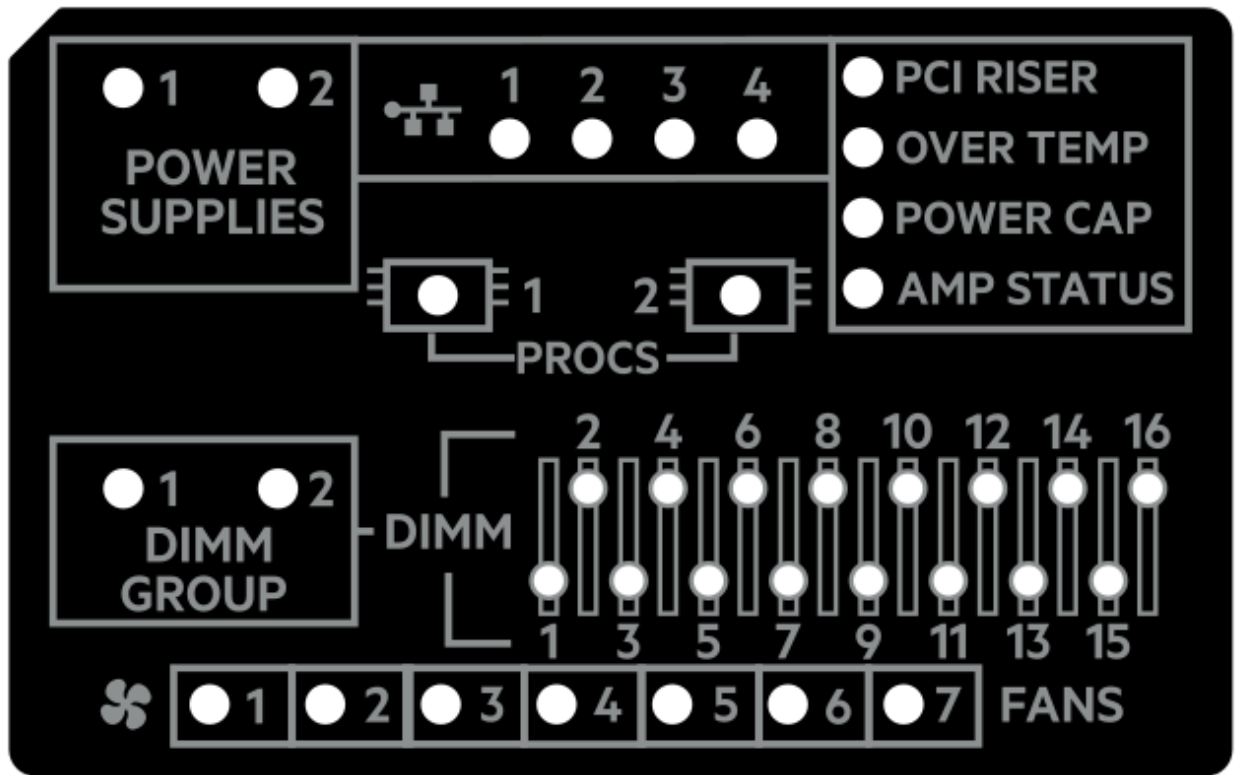

## Description

## Status

Processor LEDs

Off = Normal

Amber = Failed processor

DIMM LEDs

Off = Normal

Amber = Failed DIMM or configuration issue

Fan LEDs

Off = Normal

Amber = Failed fan or missing fan

NIC LEDs 1

Off = No link to network

Solid green = Network link

Flashing green = Network link with activity

If power is off, the front panel LED is not active. For status, see [Rear panel LEDs](#).

Power supply LEDs

Off = Normal

Description	Status
PCI riser LED	Solid amber = Power subsystem degraded, power supply failure, or input power lost.
Over temp LED	Off = Normal Amber = Incorrectly installed PCI riser cage Off = Normal Amber = High system temperature detected
Power cap LED	Off = System is in standby, or no cap is set. Solid green = Power cap applied
Amp Status LED	Off = AMP modes disabled Solid green = AMP mode enabled Solid amber = Failover Flashing amber = Invalid configuration

<sup>1</sup> Embedded NIC ports are not equipped on the server. NIC LEDs on the Systems Insight Display will flash based on the network adapter port activity. In the case of a dual-port adapters, only NIC LED 1 and 2 will illuminate to correspond with the activity of the respective network ports.

When the health LED on the front panel illuminates either amber or red, the server is experiencing a health event. For more information on the combination of these LEDs, see [Systems Insight Display combined LED descriptions](#)).

## Systems Insight Display combined LED descriptions

The combined illumination of the following LEDs indicates a system condition:

- Systems Insight Display LEDs
- System power LED
- Health LED

Systems Insight Display LED and color	Health LED	System power LED	Status
Processor (amber)	Red	Amber	One or more of the following conditions might exist: <ul style="list-style-type: none"> <li>Processor in socket X has failed.</li> <li>Processor X is not installed in the socket.</li> <li>Processor X is unsupported.</li> <li>ROM detects a failed processor during POST.</li> </ul>
Processor (amber)	Amber	Green	Processor in socket X is in a pre-failure condition.
DIMM (amber)	Red	Green	One or more DIMMs have failed.
DIMM (amber)	Amber	Green	DIMM in slot X is in a pre-failure condition.
Over temp (amber)	Amber	Green	The Health Driver has detected a cautionary temperature level.
Over temp (amber)	Red	Amber	The server has detected a hardware critical temperature level.
PCI riser (amber)	Red	Green	The PCI riser cage is not seated properly.
Fan (amber)	Amber	Green	One fan has failed or has been removed.
Fan (amber)	Red	Green	Two or more fans have failed or been removed.
Power supply (amber)	Red	Amber	One or more of the following conditions might exist: <ul style="list-style-type: none"> <li>Only one power supply is installed and that power supply is in standby.</li> <li>Power supply fault.</li> <li>System board fault.</li> </ul>
Power supply (amber)	Amber	Green	One or more of the following conditions might exist: <ul style="list-style-type: none"> <li>Redundant power supply is installed and only one power supply is functional.</li> <li>AC power cord is not plugged into redundant power supply.</li> <li>Redundant power supply fault.</li> </ul>


**Systems Insight Display LED and Health LED System power Status  
d color LED**

Power cap (off)	—	Amber	Standby.
Power cap (green)	—	Flashing green	Waiting for power.
Power cap (green)	—	Green	Power is available.
Power cap (flashing amber)	—	Amber	Power is not available.

- Power supply mismatch at POST or power supply mismatch through hot-plug addition.

**!** **IMPORTANT:** If more than one DIMM slot LED is illuminated, further troubleshooting is required. Test each bank of DIMMs by removing all other DIMMs. Isolate the failed DIMM by replacing each DIMM in a bank with a known working DIMM.

**Rear panel components**

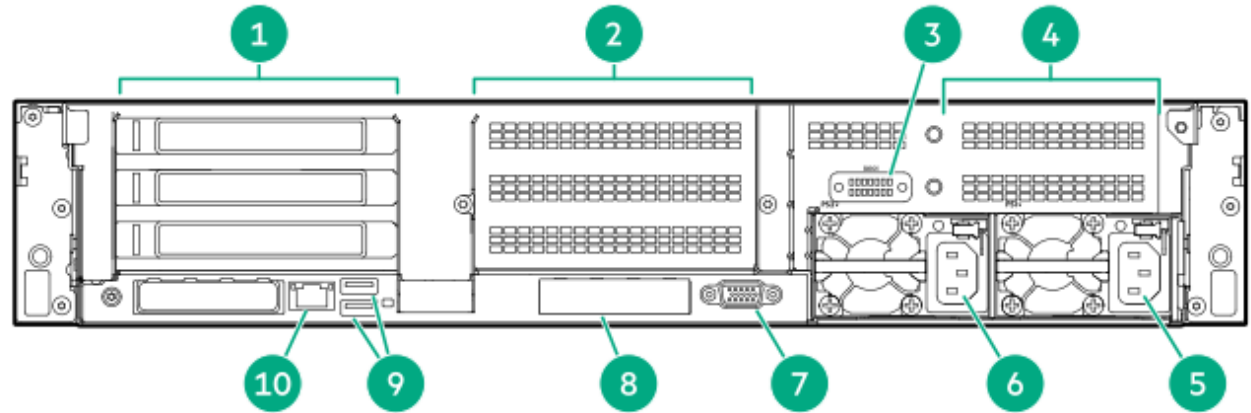


Item	Description
1	Primary riser slots 1-3 (optional drive cage)
2	Secondary riser slots 4-6 (optional drive cage)
3	Serial port (optional) <sup>1</sup>

Item	Description
4	Tertiary riser slots 7-8 (optional drive cage)
5	Power supply 1
6	Power supply 2
7	Video (VGA) port
8	OCP 3.0 adapter (optional)
9	USB 3.0 connectors
10	iLO Management Port

<sup>1</sup> When a secondary or tertiary riser cage is installed as shown, the serial port can be installed in the riser slot 8.


## Rear panel LEDs

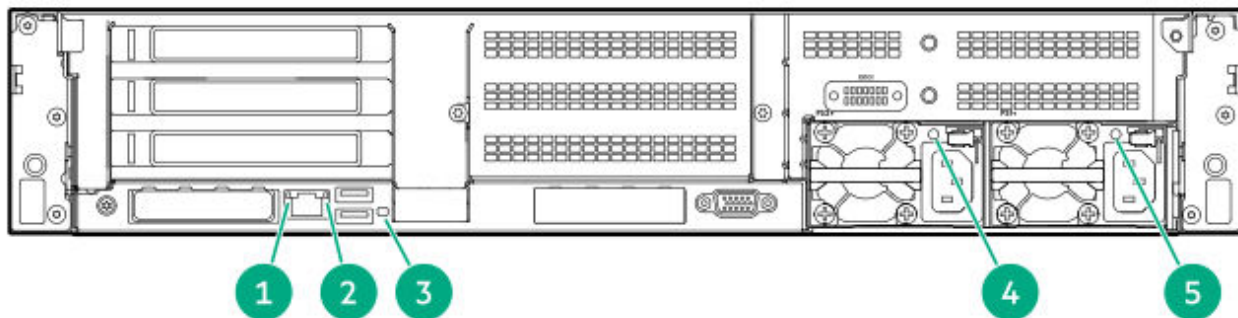

Item	Description	Status
1	Link LED	<ul style="list-style-type: none"> <li>Off = No network link</li> <li>Green = Network link</li> </ul>
2	Status LED	<ul style="list-style-type: none"> <li>Off = No network activity</li> <li>Solid green = Link to network</li> <li>Flashing green = Network activity</li> </ul>
3	UID LED	<ul style="list-style-type: none"> <li>Off = Deactivated</li> <li>Solid blue = Activated</li> <li>Flashing blue = System is being managed remotely</li> </ul>
4-5	Power supply LED	<ul style="list-style-type: none"> <li>Off = System is off or power supply has failed</li> </ul>

Item	Description	Status
		<ul style="list-style-type: none"><li>• Solid green = Normal</li></ul>

# System board components

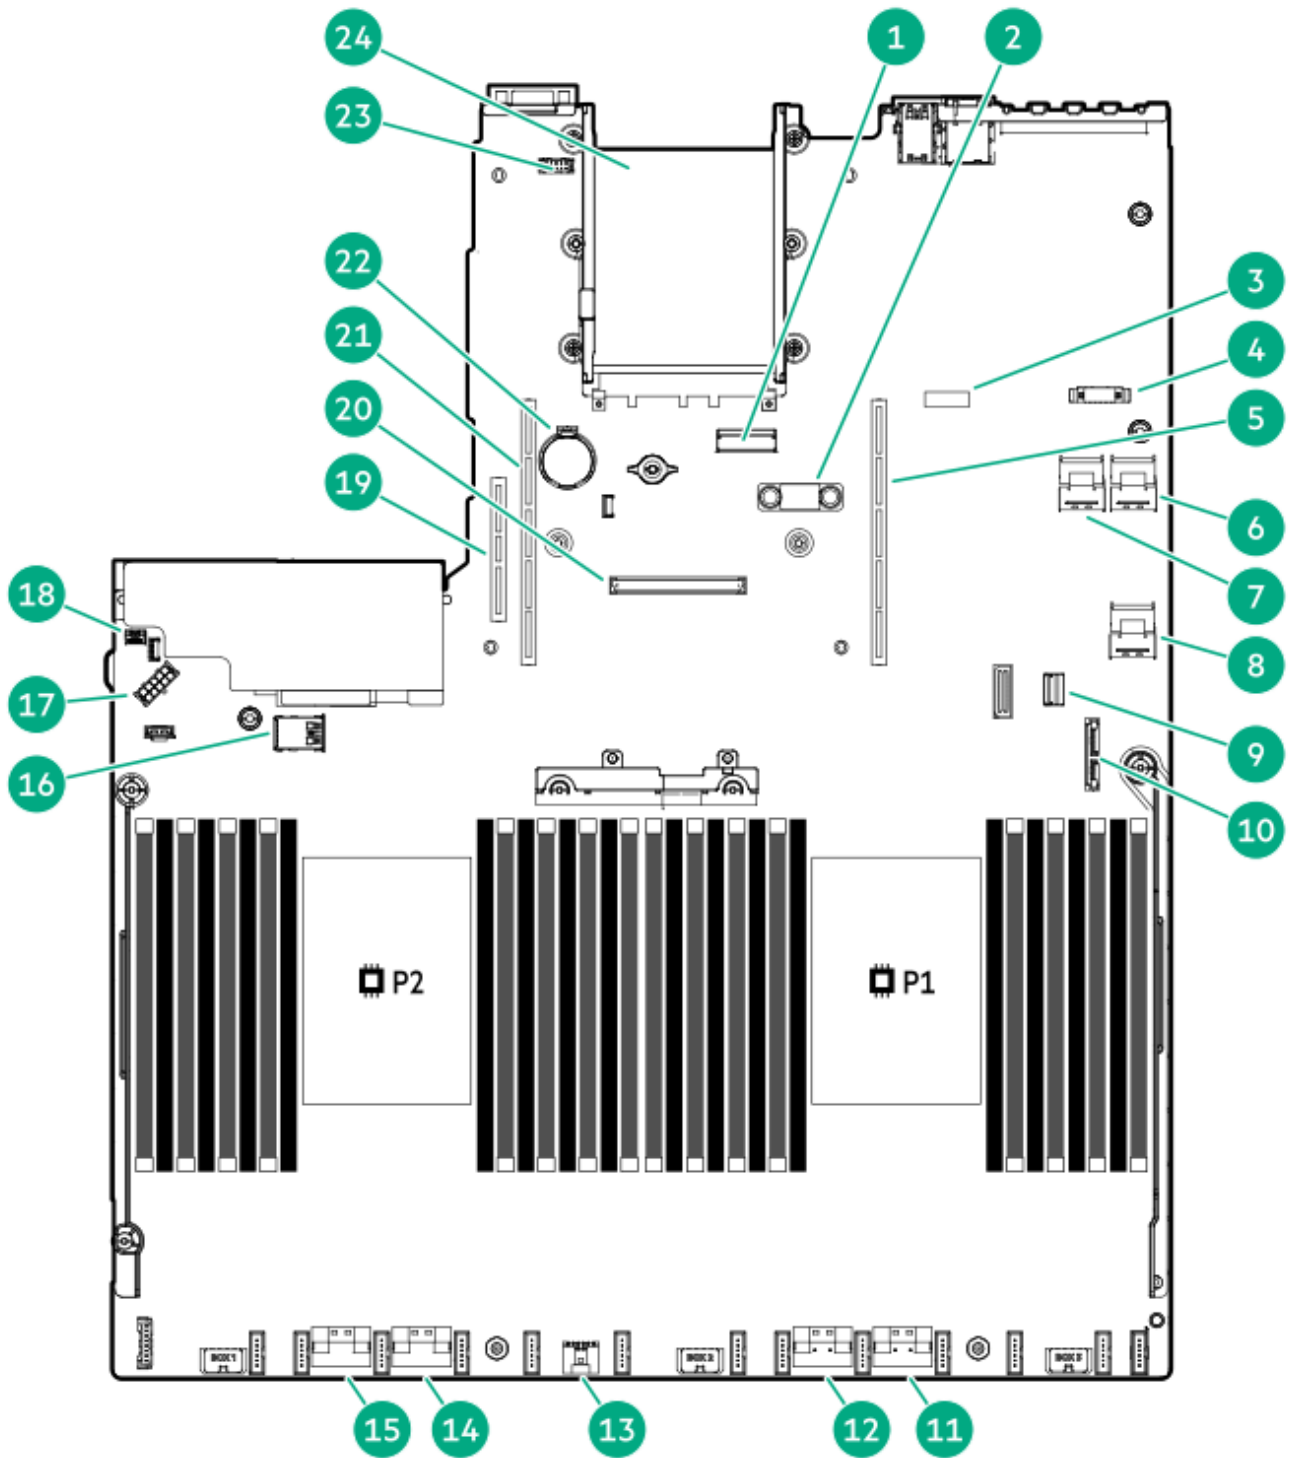

Item	Description
1	x8 Slimline connector

<b>Item</b>	<b>Description</b>
2	TPM connector
3	System maintenance switch
4	Front display port/USB 2.0 connector
5	Primary (processor 1) PCIe riser connector
6	x4 SATA port 2
7	x4 SATA port 1
8	x4 SATA port 3
9	Front power/USB 3.0 connector
10	SATA optical port 4
11	x8 NVMe port 2A
12	x8 NVMe port 1A
13	Energy pack connector
14	x8 NVMe port 2B
15	x8 NVMe port 1B
16	Dual internal USB 3.0 connector
17	Drive backplane power connector
18	Chassis Intrusion Detection connector
19	Tertiary (processor 2) PCIe riser connector
20	Type-a storage controller slot
21	Secondary (processor 2) PCIe riser connector
22	System battery
23	Serial port connector
24	OCP 3.0 adapter bay

## **Subtopics**

**Heatsink and socket components**


**DIMM label identification**

**Intel Optane persistent memory 200 series for HPE label identification**

**DIMM slot locations**

**System maintenance switch descriptions**


## Heatsink and socket components

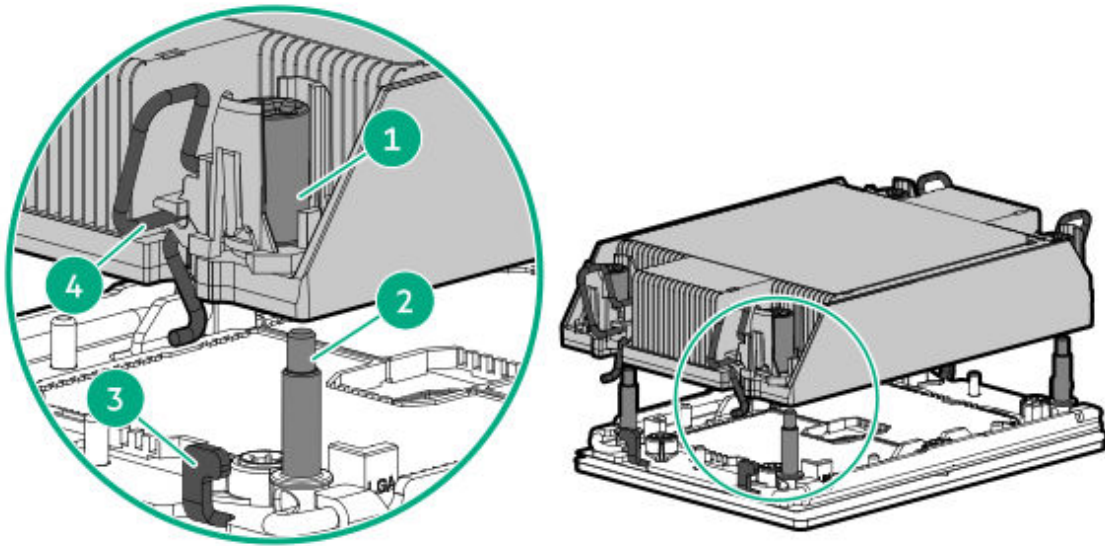

Item	Description
1	Heatsink nuts
2	Alignment screws
3	Latch tabs
4	Heatsink latches

## DIMM label identification

To determine DIMM characteristics, see the label attached to the DIMM. The information in this section helps you to use the label to locate specific information about the DIMM.

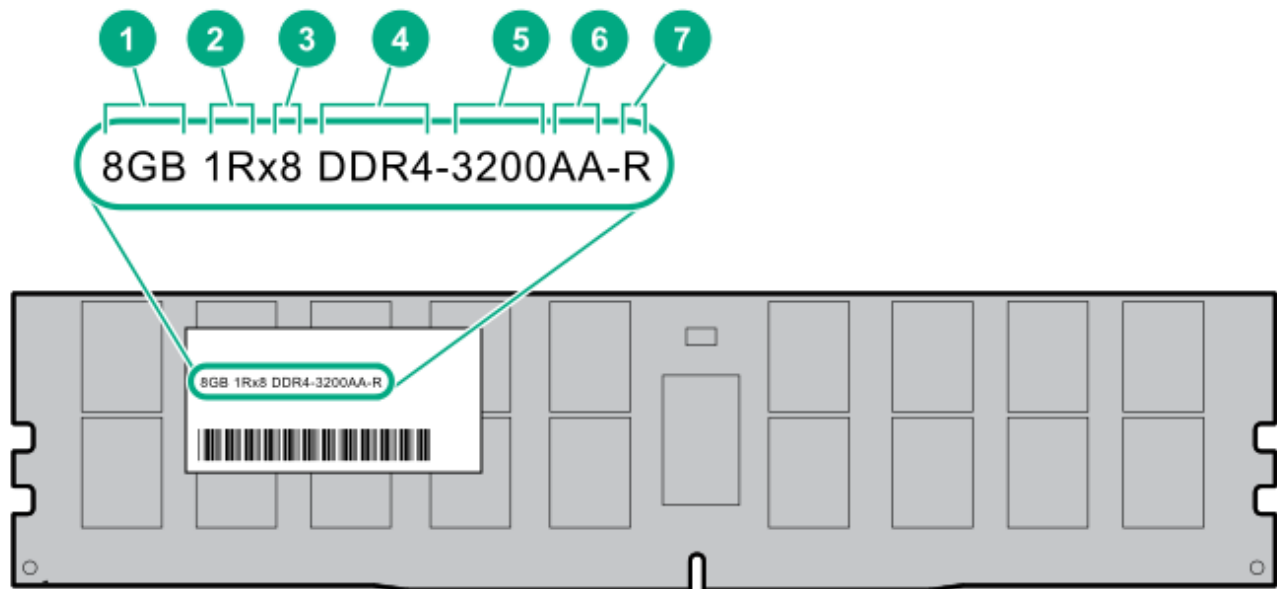


Item	Description	Example
1	Capacity	8 GB 16 GB 32 GB 64 GB 128 GB 256 GB
2	Rank	1R = Single rank 2R = Dual rank 4R = Quad rank 8R = Octal rank
3	Data width on DRAM	x4 = 4-bit x8 = 8-bit
4	Memory generation	PC4 = DDR4
5	Maximum memory speed	3200 MT/s
6	CAS latency	AA = CAS 22-22-22 AA = CAS 26-22-22 (for 3DS LRDIMM)

Item	Description	Example
7	DIMM type	R = RDIMM (registered) L = LRDIMM (load reduced)

For more information about product features, specifications, options, configurations, and compatibility, see the HPE DDR4 SmartMemory QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/support/DDR4SmartMemoryQS>).

## Intel Optane persistent memory 200 series for HPE label identification

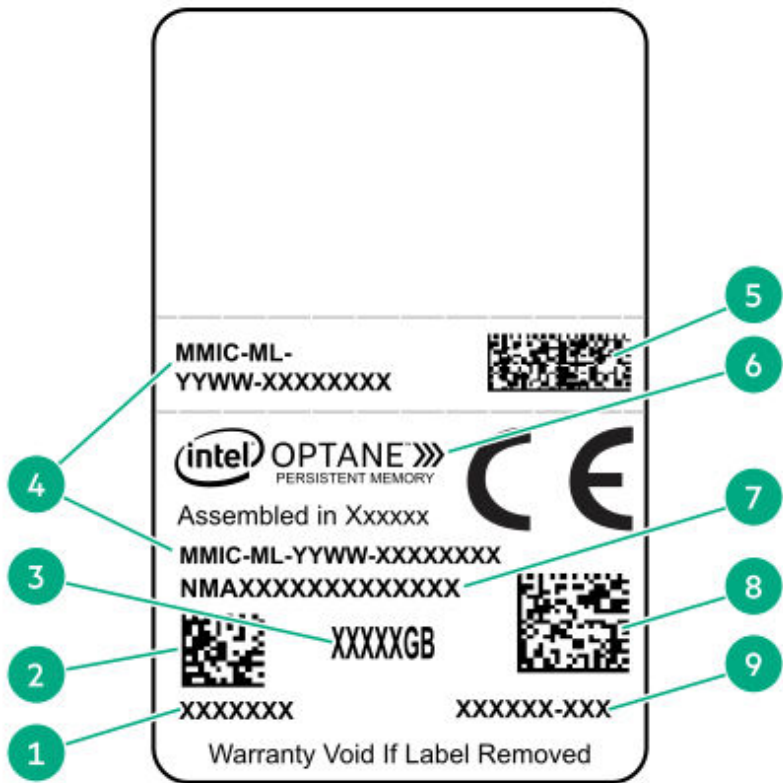


Item	Description	Example
1	Work Order Number	XXXXXXXX
2	Work Order Number Barcode	XXXXXXXX
3	Capacity	128 GB

Item	Description	Example
		256 GB
		512 GB
4	Unique ID number	8089-A2-1802-1234567A
5	Serial Number and Part Number Barcode	S8089A218040000168APNMAXXXXXXXXXXX
6	Product Name	Intel® Optane™ persistent memory
7	Part Number	1234567A
8	Serial Number Barcode	8089-A2-1802-1234567A
9	PBA Number	XXXXXX-XXX

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/support/persistentmemoryQS>).

## DIMM slot locations

DIMM slots are numbered sequentially (1 through 16) for each processor.

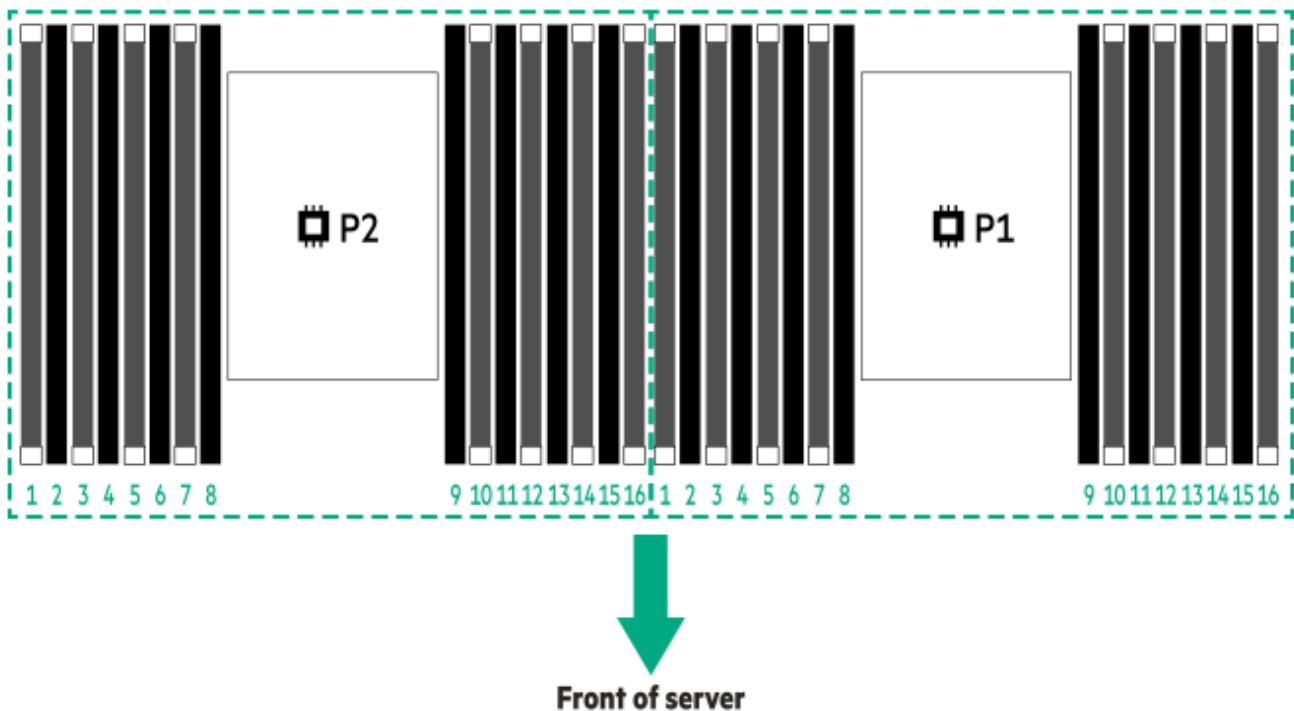

## System maintenance switch descriptions

Position	Default	Function
S1 <sup>1</sup> <sub>—</sub>	Off	Off = iLO security is enabled. On = iLO security is disabled.
S2	Off	Reserved
S3	Off	Reserved
S4	Off	Reserved
S5 <sup>1</sup> <sub>—</sub>	Off	Off = Power-on password is enabled. On = Power-on password is disabled.
S6 <sup>1, 2, 3</sup> <sub>—, —, —</sub>	Off	Off = No function On = Restore default manufacturing settings
S7	Off	Reserved
S8	—	Reserved
S9	—	Reserved
S10	—	Reserved
S11	—	Reserved
S12	—	Reserved


<sup>1</sup> To access the redundant ROM, set S1, S5, and S6 to On.

<sup>2</sup> When the system maintenance switch position 6 is set to the On position, the system is prepared to restore all configuration settings to their manufacturing defaults.

<sup>3</sup> When the system maintenance switch position 6 is set to the On position and Secure Boot is enabled, some configurations cannot be restored. For more information, see [#GUID-D7147C7F-2016-0901-0A72-000000000BF6](#).

## Drive box identification

### Front boxes

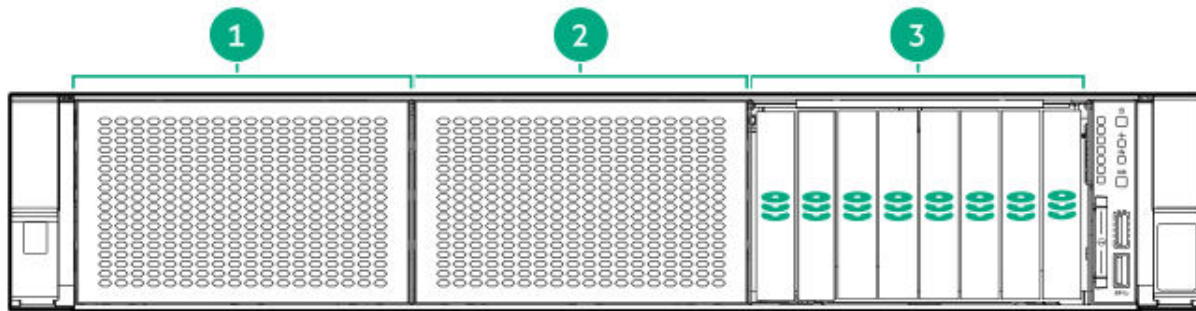


Item	Description
1	Box 1
2	Box 2
3	Box 3




Item	Description
1	Box 1
2	Box 2
3	Box 3

### Rear boxes

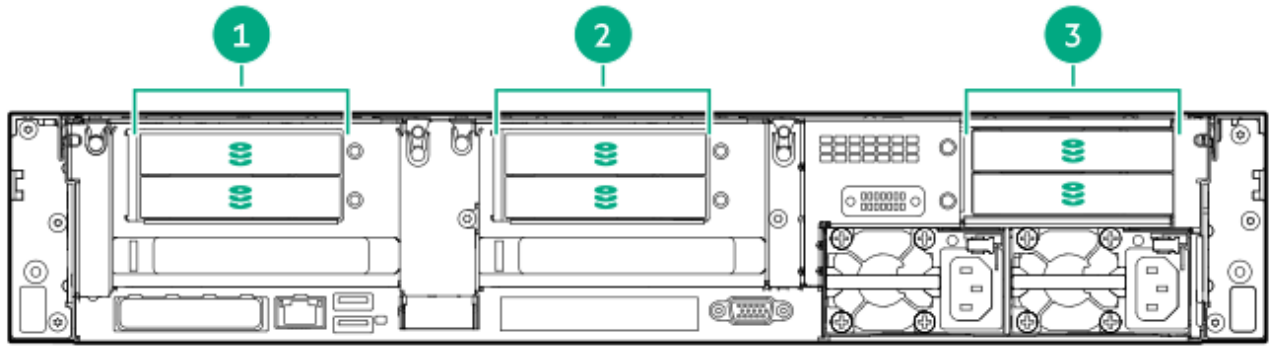

Item	Description
------	-------------


1	Box 4
2	Box 5
3	Box 6

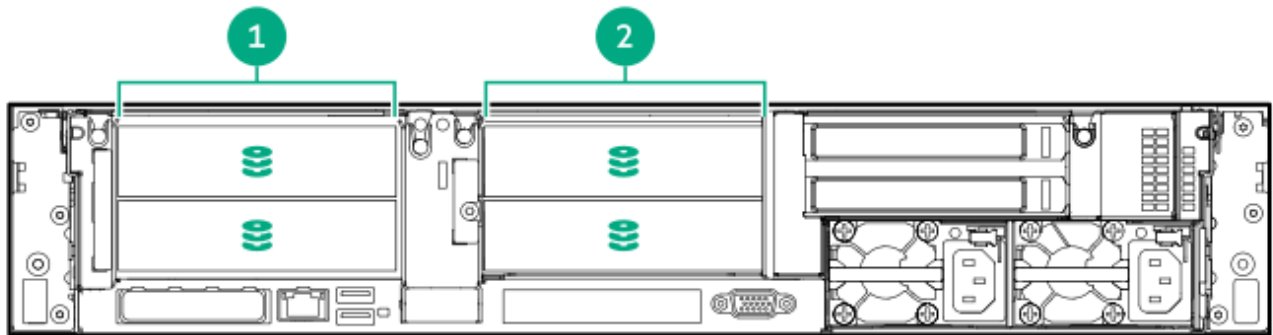

Item	Description
------	-------------

1	Box 4
2	Box 5


**Midplane box (LFF)**

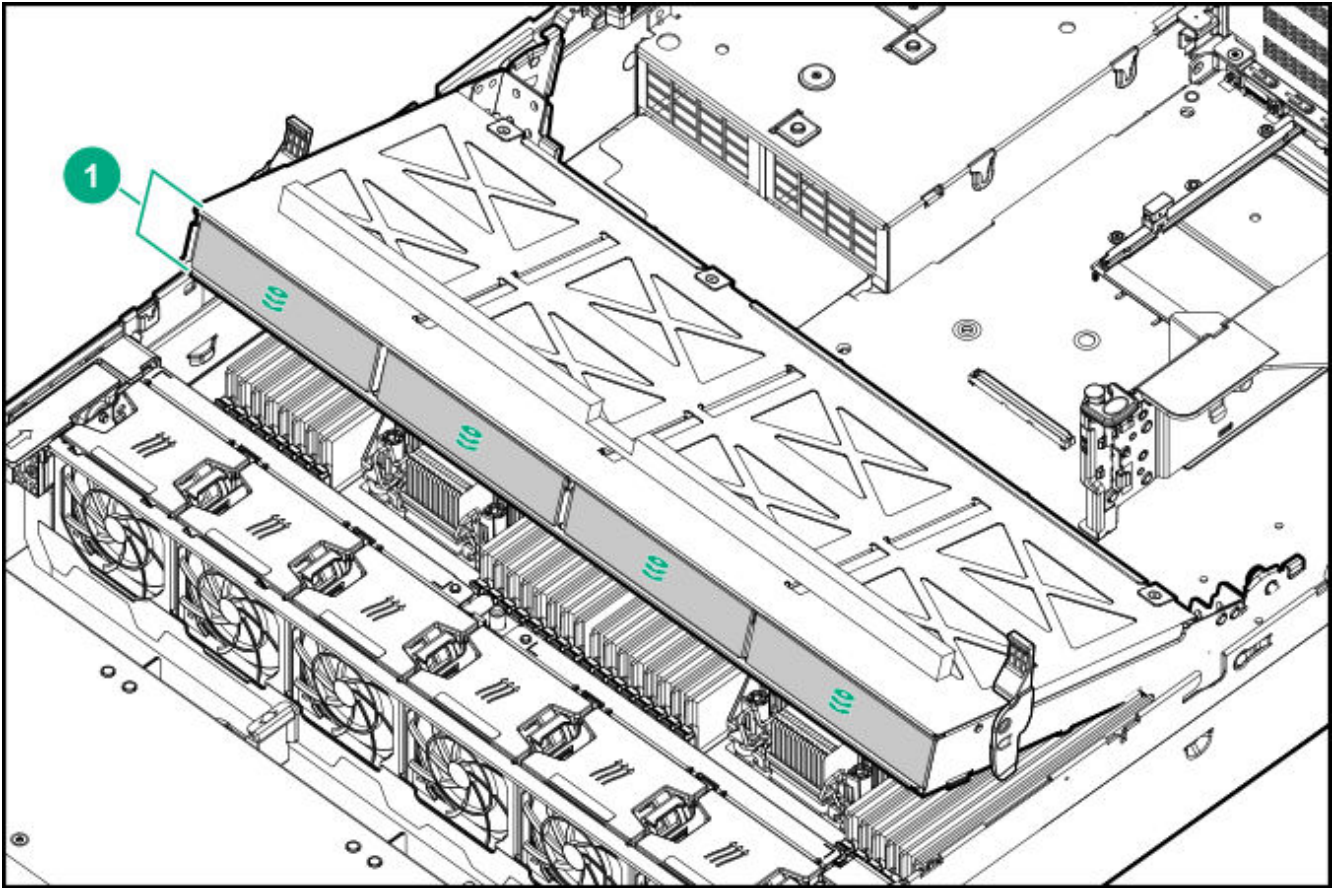

Item	Description
------	-------------

1	Box 7
---	-------

**Midplane box (SFF)**

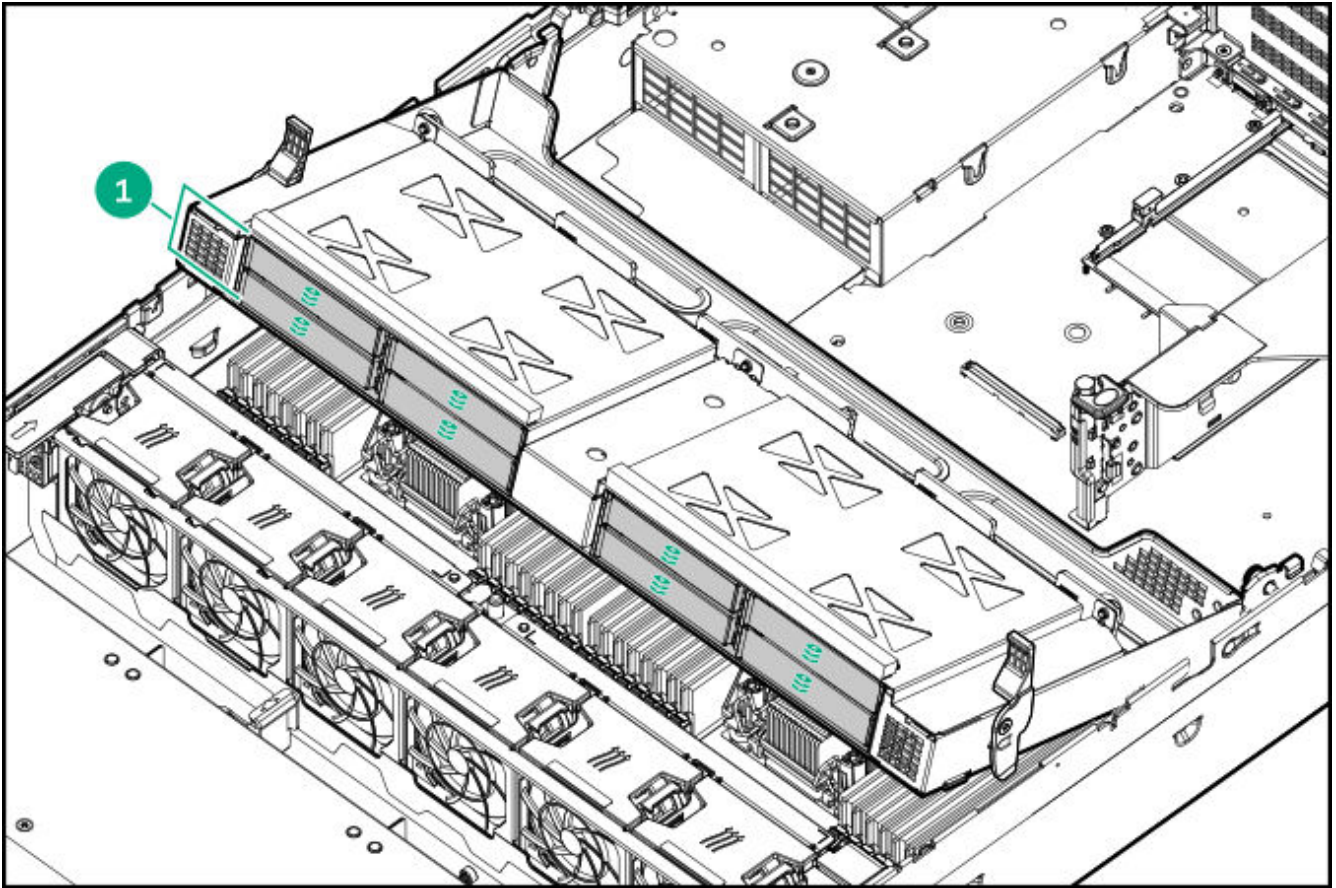


Item	Description
1	Box 7

## Drive numbering

When the drive backplane is connected directly to a storage controller, then each drive box starts at 1. The following images are examples of common configurations.

### 24 SFF

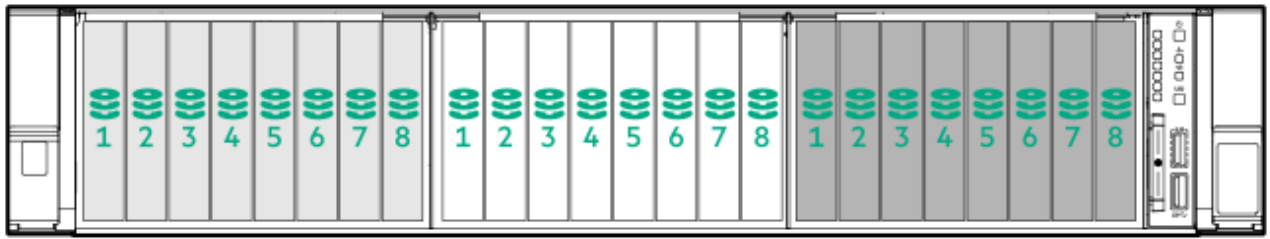


**12 SFF**



**12 LFF**




**6 SFF rear panel**

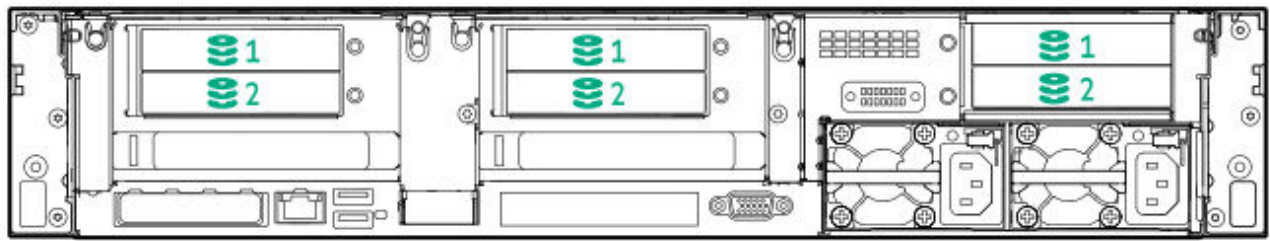


**2x 2 LFF rear panel**




**Universal media bay**

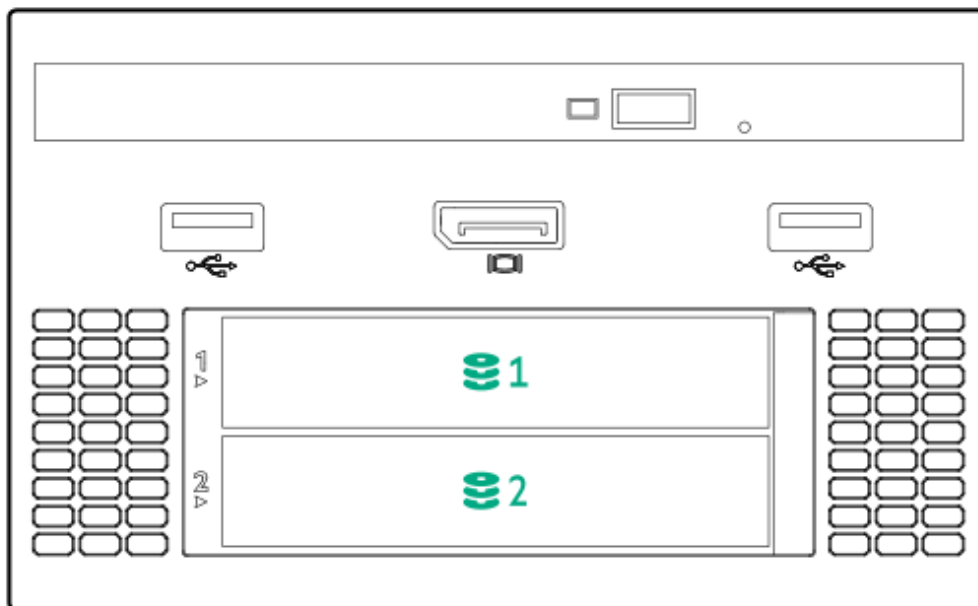


**8 LFF + Universal media bay, optional 2 SFF, and optical drive**

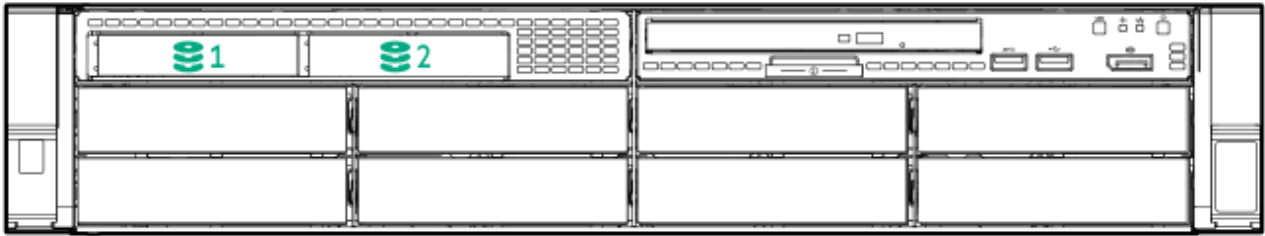

**Midplane box LFF**

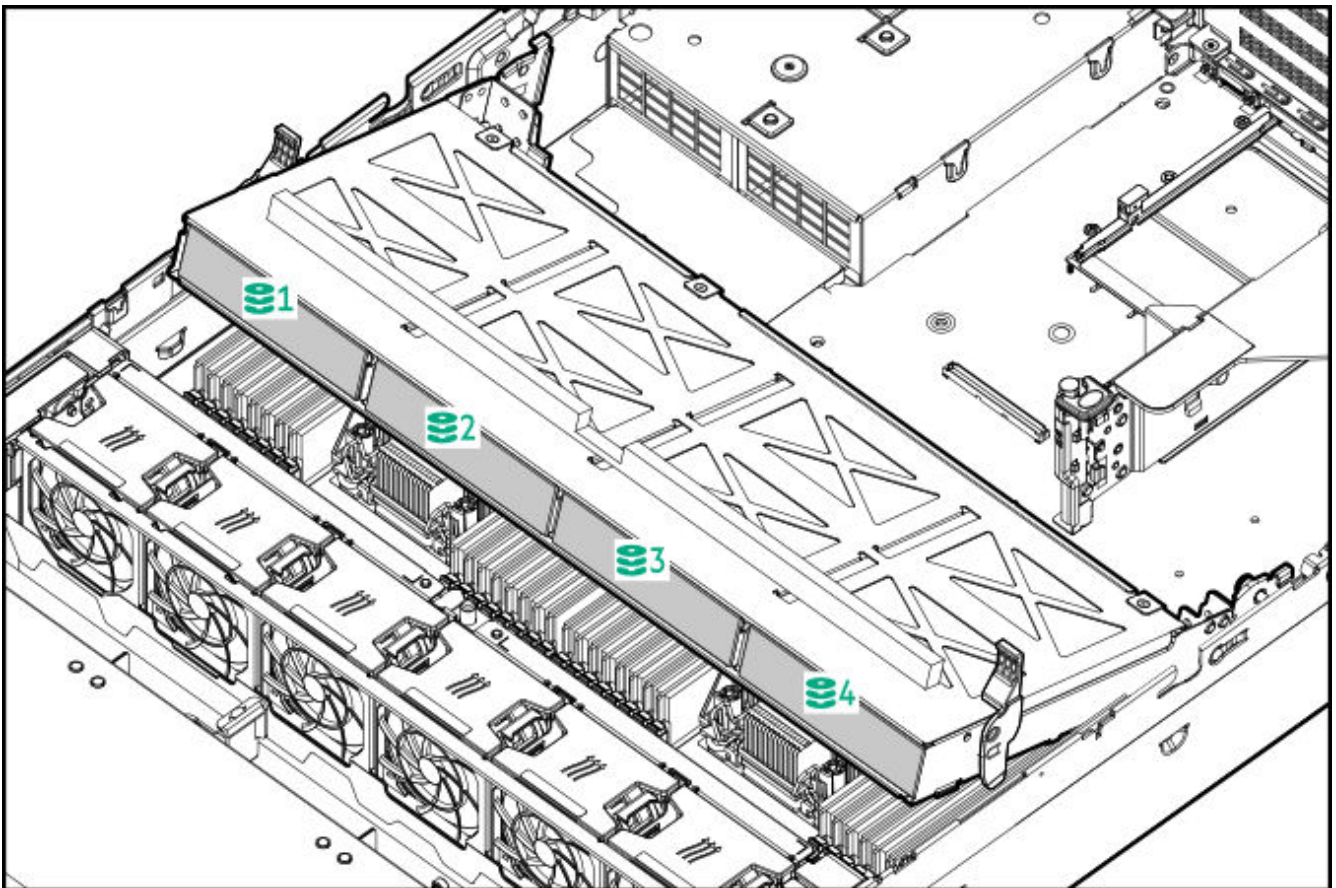


**Midplane box SFF**

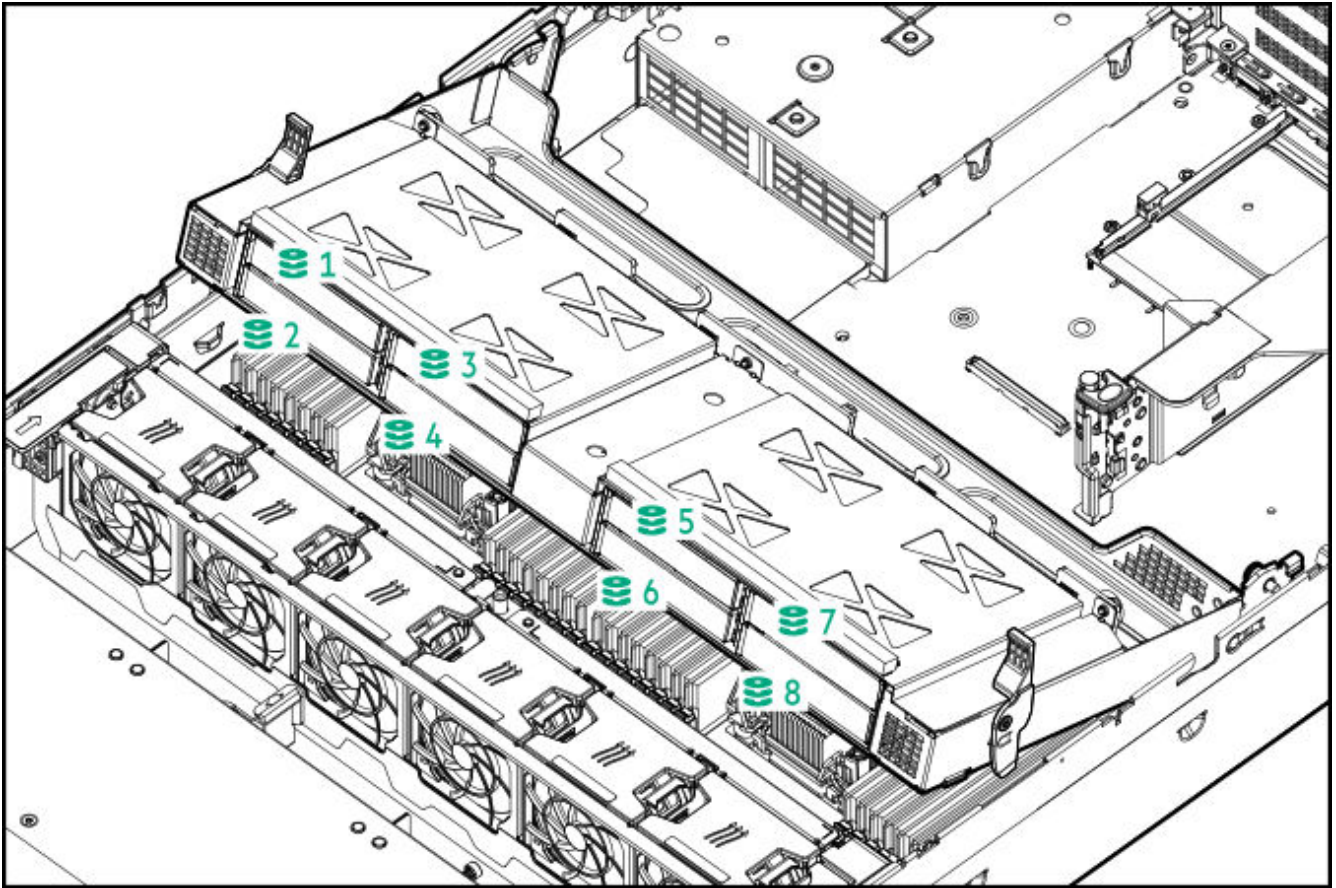

## HPE Basic Drive LED definitions


### LFF low-profile drive carrier

The LFF low-profile drive carrier supports hot-plug SAS and SATA drives.

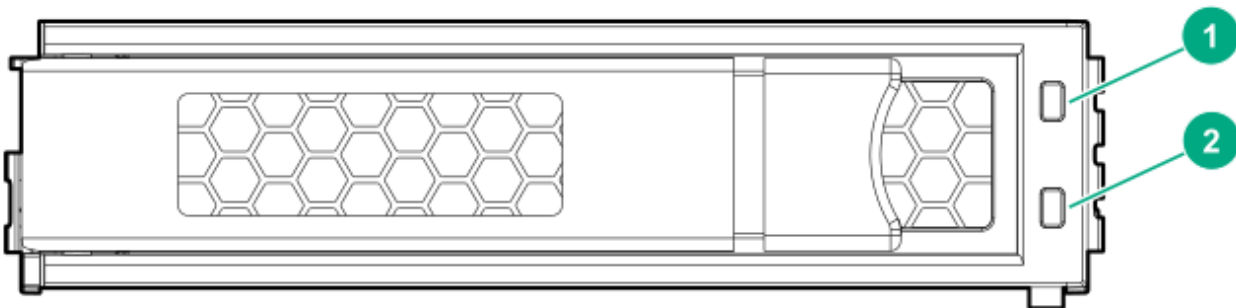

## SFF basic drive carrier


The SFF basic drive carrier supports hot-plug SAS, SATA, and NVMe drives.

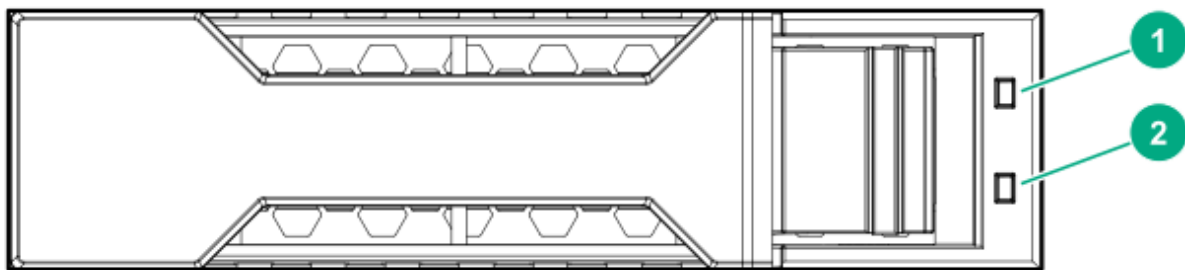

Item	LED	Status	Definition
1	Fault/Locate	Solid amber	This drive has failed, is unsupported, or is invalid.
		Solid blue	The drive is operating normally and being identified by a management application.
		Flashing amber/blue (1 flash per second)	The drive has failed, or a predictive failure alert has been received for this drive. The drive has also been identified by a management application.
		Flashing amber (1 flash per second)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
2	Online/Activity	Solid green	The drive is online and has no activity.
		Flashing green (1 flash per second)	The drive is doing one of the following: <ul style="list-style-type: none"> <li>Rebuilding or performing a RAID</li> <li>Performing a stripe size migration</li> <li>Performing a capacity expansion</li> <li>Performing a logical drive extension</li> <li>Erasing</li> <li>Spare part activation</li> </ul>
		Flashing green (4 flashes per second)	The drive is operation normally and has activity.

Item	LED	Status	Definition
		Off	The drive is not configured by a RAID controller or is a spare drive.


## Fan bay numbering

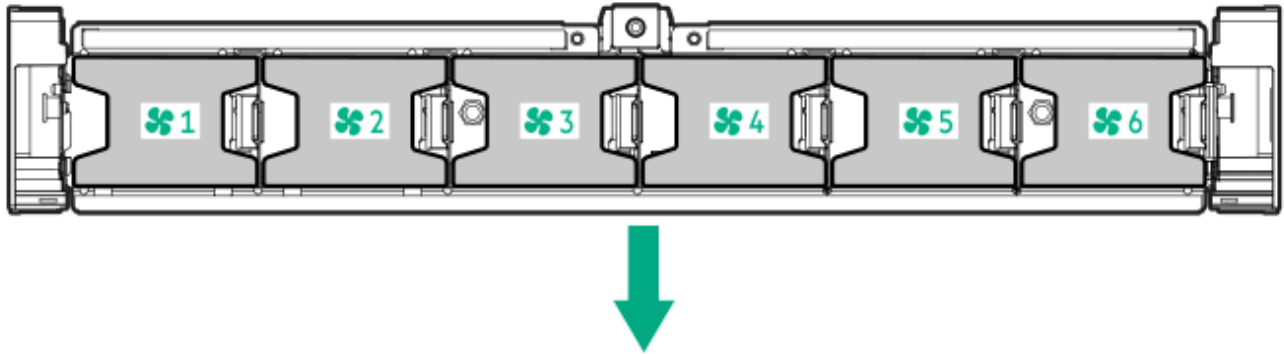

The arrow points to the front of the server.

## DSC-25 2-port SFP28 card ports and LEDs

### Ports

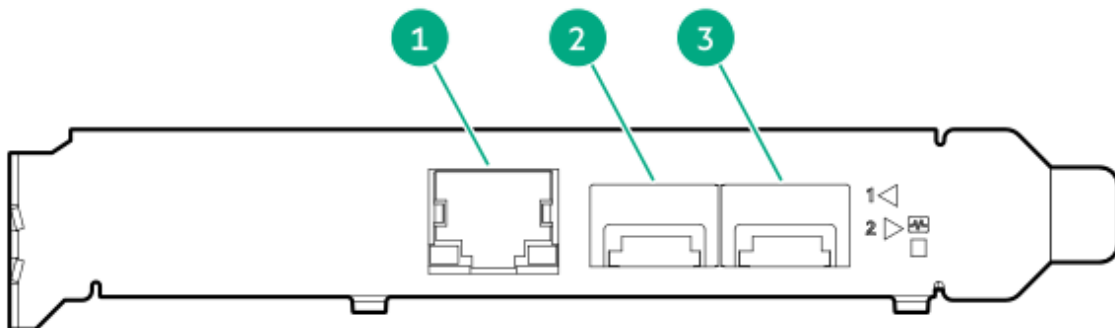


**Table 1. Ports**

Item	Port	Description
1	Management port	1GbE RJ45
2	Network interface port	10/25G SFP+ based
3	Network interface port	10/25G SFP+ based

**LEDs**

The HPE for Pensando DSP DSC-25 2p SFP28 card is a dual-port, single-slot, half-height, half-length (HHHL) SFP28 network adapter. It has LEDs for Link (L) and Activity (A) for each port. A half-height bracket is shown in the following illustration with SFP28 ports and LEDs.

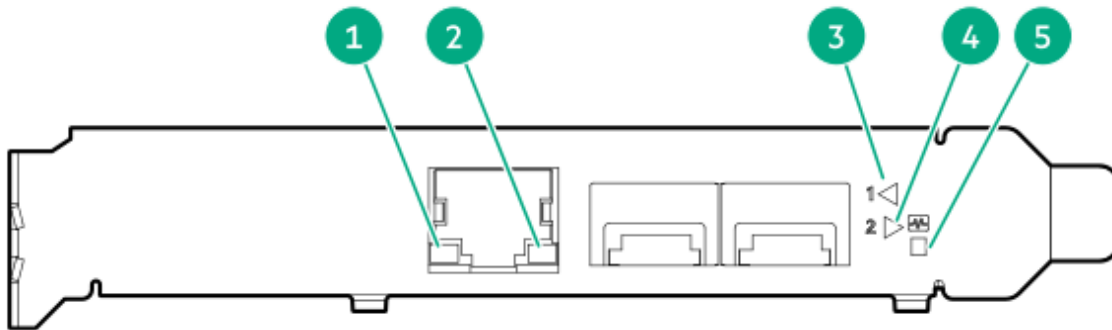


**Table 2. LED indicators**

Item	LED	Status	Description
1	Management Port Activity LED	Off	No activity
		Flashing	Passing traffic; flashing frequency indicates traffic in tensity
2	Management Port Link LED	Off	A link has not been established
		Solid green	Valid Ethernet link
3	SFP Port 1 Link/Activity LED	Off	A link has not been established
		Solid green	Valid Ethernet link
		Flashing green	Passing traffic; flashing frequency indicates traffic in tensity
		Solid amber	Link fault


Item	LED	Status	Description
4	SFP Port 2 Link/Activity LED	Off	A link has not been established
		Solid green	Valid Ethernet link
		Flashing green	Passing traffic; flashing frequency indicates traffic in intensity
		Solid amber	Link fault
5	System status LED	Off	System is not powered
		Solid amber	Power is up, software has not booted yet
		Solid green	System is up and fully operational

## HPE NS204i-p NVMe OS Boot Device components

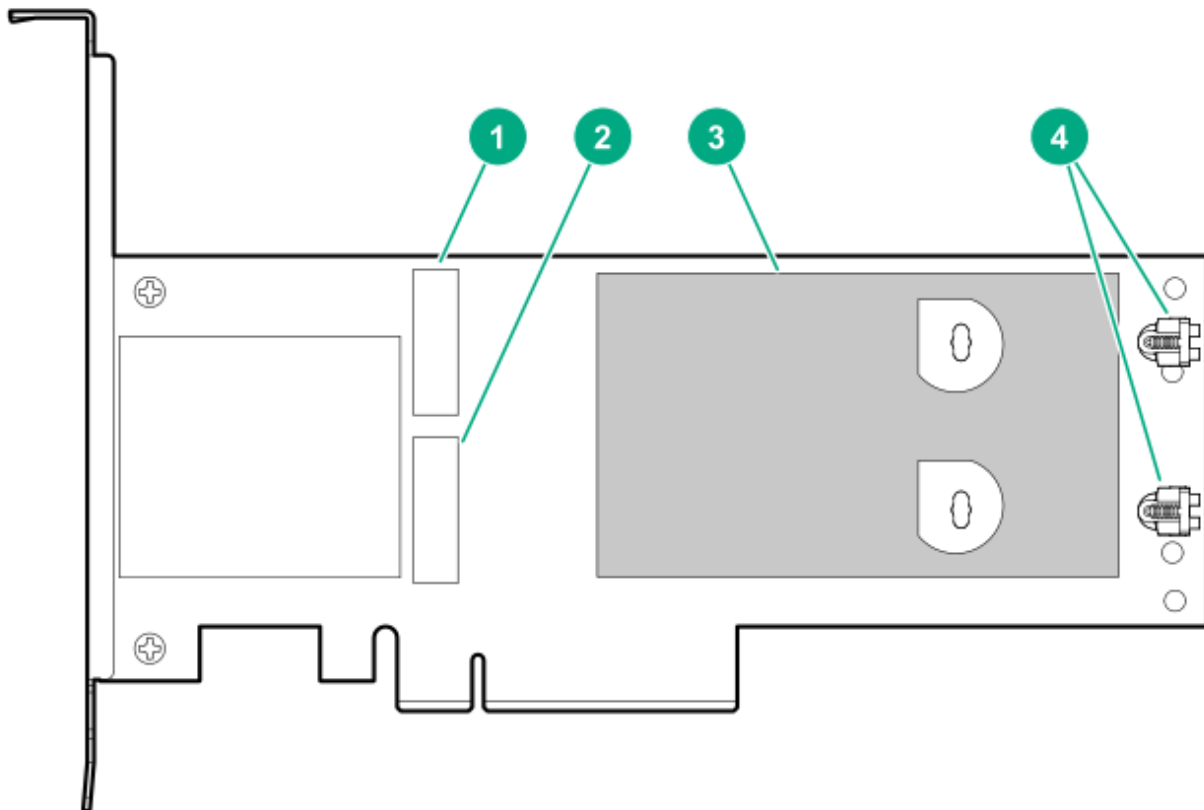

Item	Description
1	Drive bay 1
2	Drive bay 2
3	Thermal interface pad with removable liner
4	M.2 drive retaining latches

## HPE NS204i-p NVMe OS Boot Device LED definitions

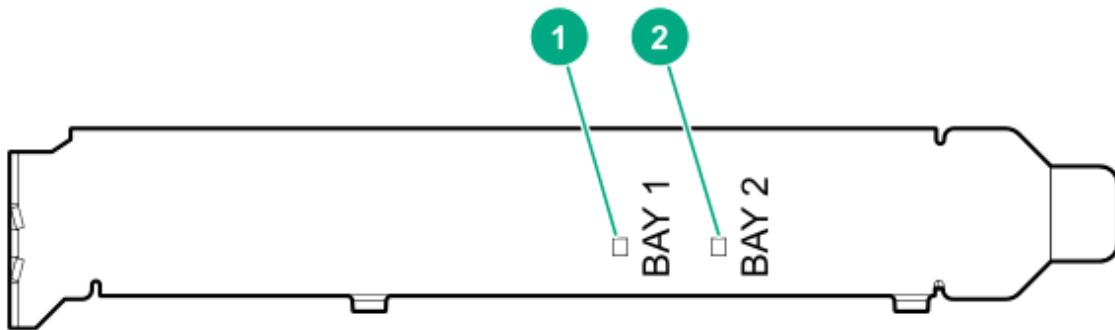

Item	Description	Fault LED status
1	Bay 1 LED	Off: Normal
2	Bay 2 LED	Flashing 1Hz: Drive predictive failure Amber: Drive failure

## Operations

### Subtopics

[Power up the server](#)

[Power down the server](#)

[Extending the server from the rack](#)

[Secure cables using the cable management arm](#)

[Removing the server from the rack](#)

[Remove the access panel](#)

[Install the access panel](#)

[Removing the fan cage](#)

[Installing the fan cage](#)

[Removing the air baffle or midplane drive cage](#)

[Installing the air baffle](#)

[Removing a riser cage](#)

[Removing a riser slot blank](#)

[Removing the hard drive blank](#)

[Releasing the cable management arm](#)

[Accessing the Systems Insight Display](#)

## Power up the server

### About this task

To power up the server, use one of the following methods:

- Press the Power On/Standby button.
- Use the virtual power button through iLO.

## Power down the server

Before powering down the server for any upgrade or maintenance procedures, perform a backup of critical server data and programs.



### **IMPORTANT:**

When the server is in standby mode, auxiliary power is still being provided to the system.

To power down the server, use one of the following methods:

- Press and release the Power On/Standby button.  
This method initiates a controlled shutdown of applications and the OS before the server enters standby mode.
- Press and hold the Power On/Standby button for more than 4 seconds to force the server to enter standby mode.

This method forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.

- Use a virtual power button selection through iLO.  
This method initiates a controlled remote shutdown of applications and the OS before the server enters standby mode.

Before proceeding, verify that the server is in standby mode by observing that the system power LED is amber.

## Extending the server from the rack


### About this task



**WARNING:** To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before extending anything from the rack.

### Procedure

1. Pull down the quick release levers on each side of the server.
2. If necessary, use a T-25 Torx screwdriver to loosen the shipping screws.
3. Extend the server from the rack.

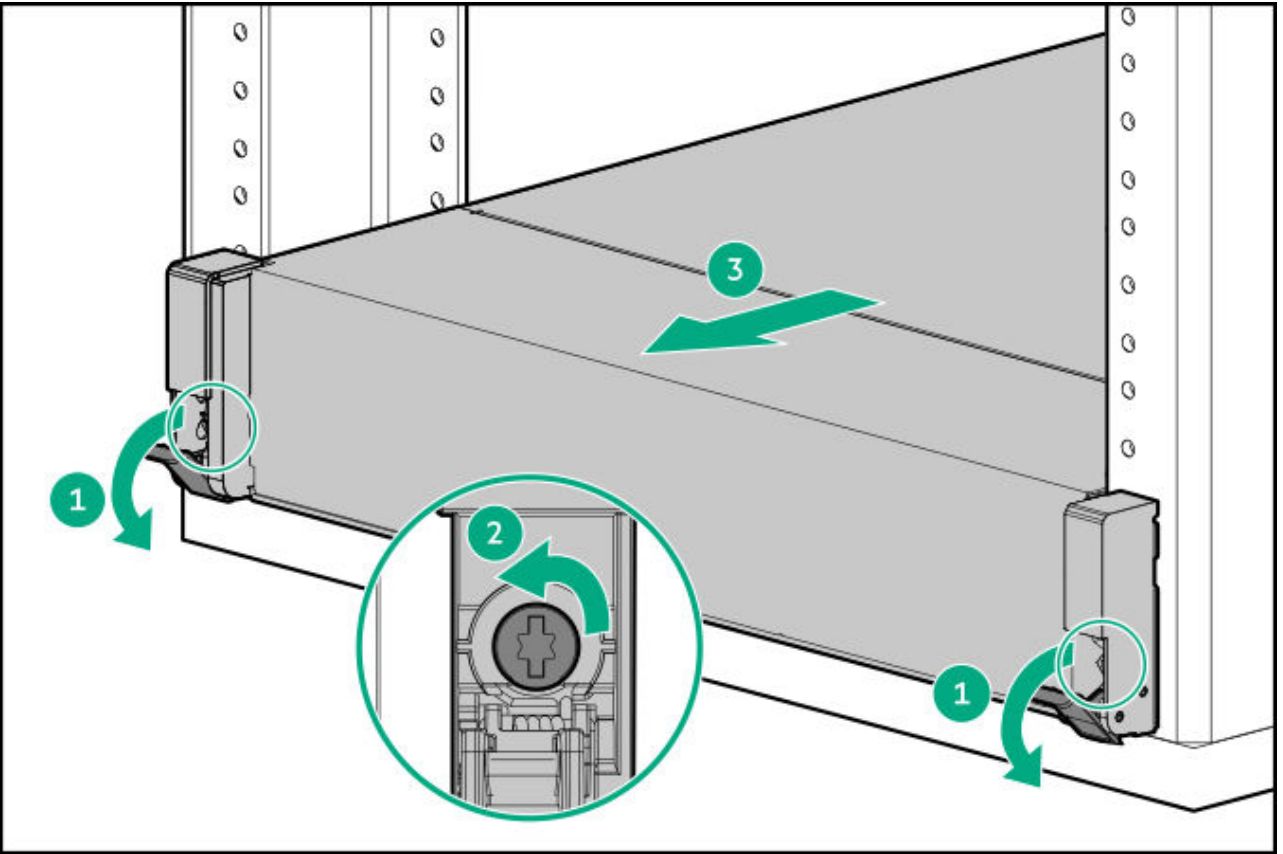

# Secure cables using the cable management arm

## About this task

For rack rail installation instructions, see the documentation that ships with the rack rails.




**WARNING:** To reduce the risk of electric shock, fire, or damage to the equipment:

- Do not insert wrong connectors into ports.
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
- Unplug the power cord from the power supply to disconnect power to the equipment.
- Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.

## Procedure


1. After the server is racked, connect any peripheral devices to the server.  
To identify components, see [Rear panel components](#).
2. At the rear of the server, plug in the power cord to the power supply.
3. Install the power cord anchors.

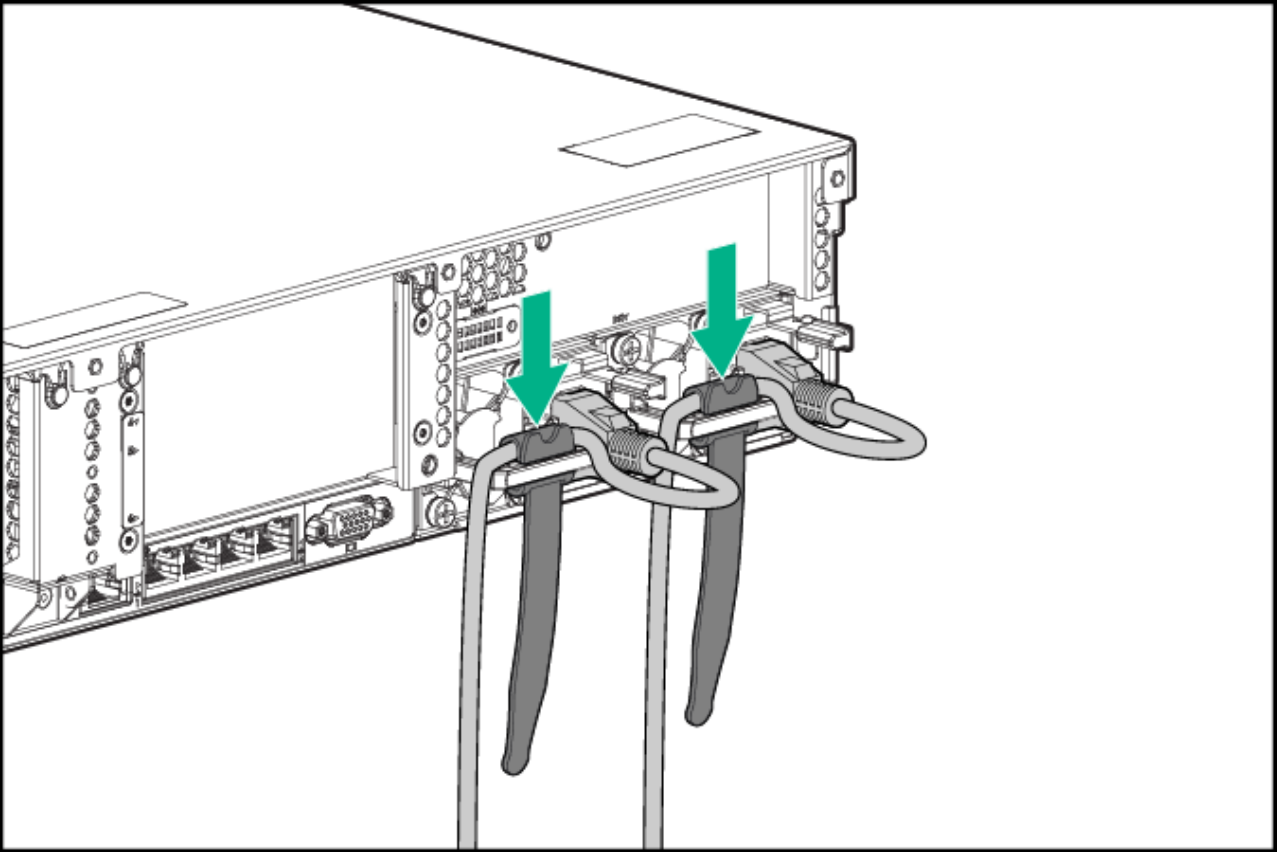

4. Secure the cables to the cable management arm.



**IMPORTANT:** Leave enough slack in each of the cables to prevent damage to the cables when the server is extended from the rack.

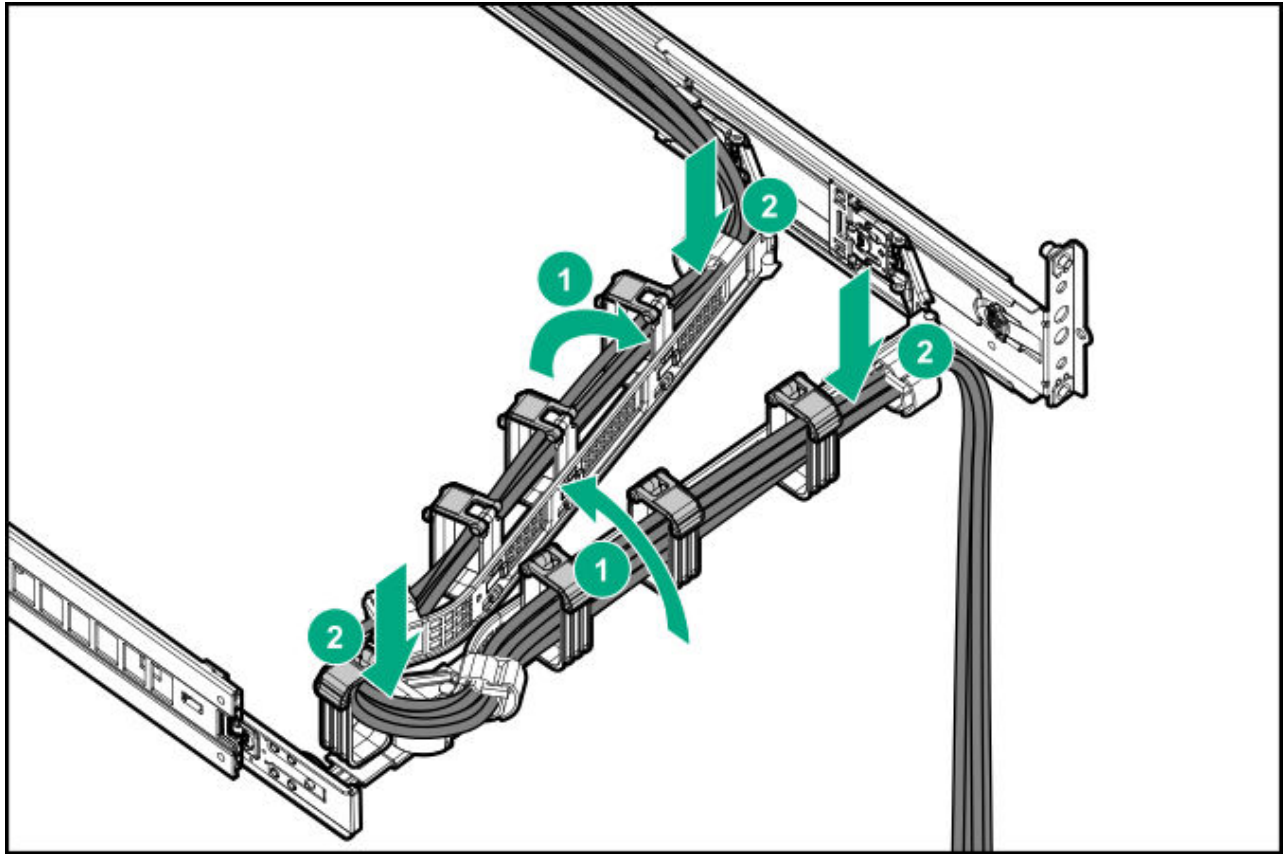

5. Connect the power cord to the AC power source.

## Removing the server from the rack

### About this task

To remove the server from a Hewlett Packard Enterprise, Compaq-branded, Telco, or third-party rack:

### Procedure

1. Power down the server.
2. Extend the server from the rack.
3. Disconnect the cabling and remove the server from the rack.

For more information, see the documentation that ships with the rack mounting option.

4. Place the server on a sturdy, level surface.

# Remove the access panel

## About this task



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives, power supplies, and internal system components to cool before touching them.



**CAUTION:**

Do not operate the chassis for long periods with the access panel open or removed. Operating the chassis in this manner results in improper airflow and improper cooling that can lead to thermal damage.

## Procedure

1. Power down the server.
2. If installed, release the cable management arm.
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Extend the server from the rack.
5. Open or unlock the locking latch, slide the access panel to the rear of the chassis, and remove the access panel.

# Install the access panel

## Procedure

1. Place the access panel on top of the server with the latch open.

Allow the panel to extend past the rear of the server approximately 1.25 cm (0.5 in).
2. Push down on the latch.

The access panel slides to a closed position.
3. Tighten the security screw on the latch, if needed.

# Removing the fan cage

## About this task



### CAUTION:


Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.



**IMPORTANT:** For optimum cooling, install fans in all primary fan locations.

## Procedure

1. Power down the server.
2. Remove all power:
  - Disconnect each power cord from the power source.
  - Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.

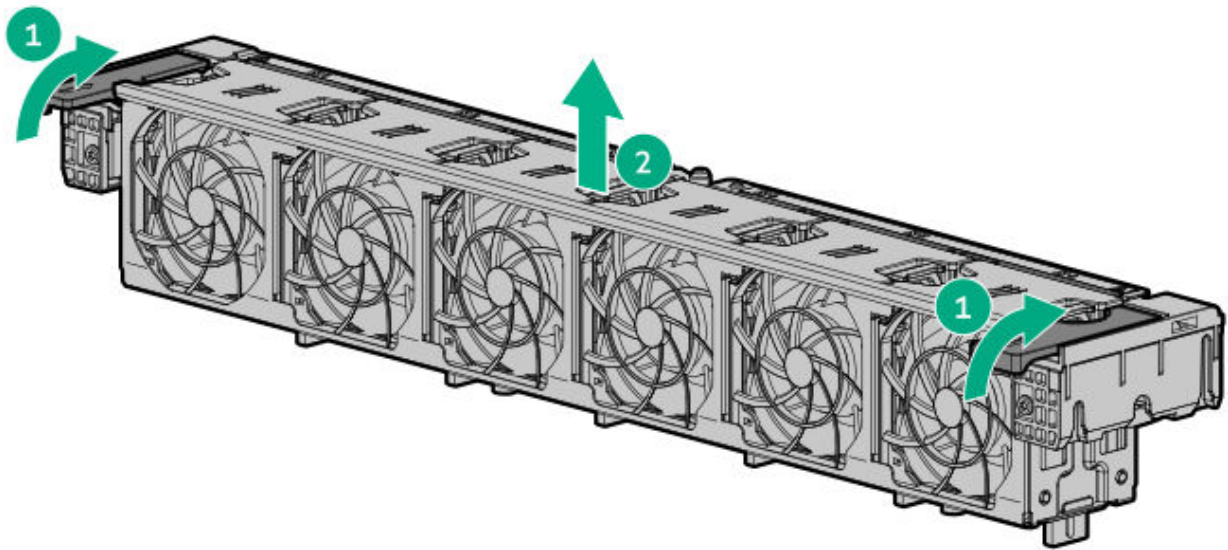

## Installing the fan cage

### About this task




**CAUTION:**

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.



**IMPORTANT:** For optimum cooling, install fans in all primary fan locations.

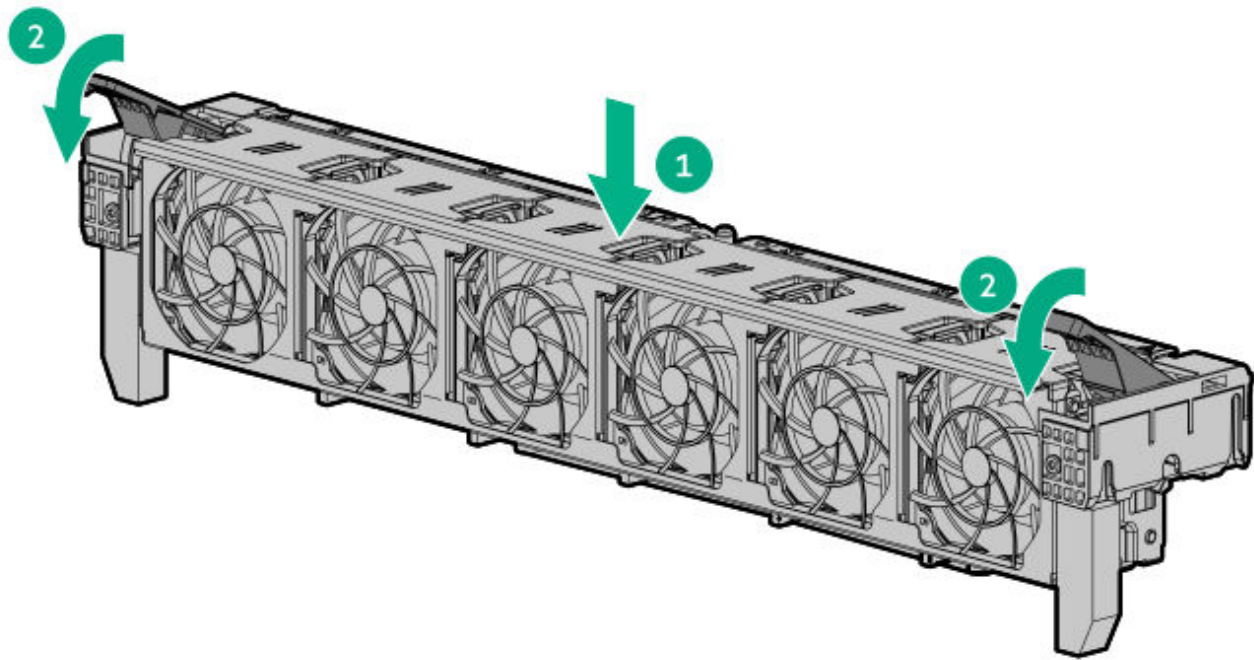

## Removing the air baffle or midplane drive cage

### About this task



**CAUTION:** Do not detach the cable that connects the battery pack to the cache module. Detaching the cable causes any unsaved data in the cache module to be lost.




**CAUTION:** For proper cooling, do not operate the server without the access panel, baffles, expansion slot covers, or blanks installed. If the server supports hot-plug components, minimize the amount of time the access panel is open.

### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:


- Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
  5. Do one of the following:
    - Remove the air baffle.

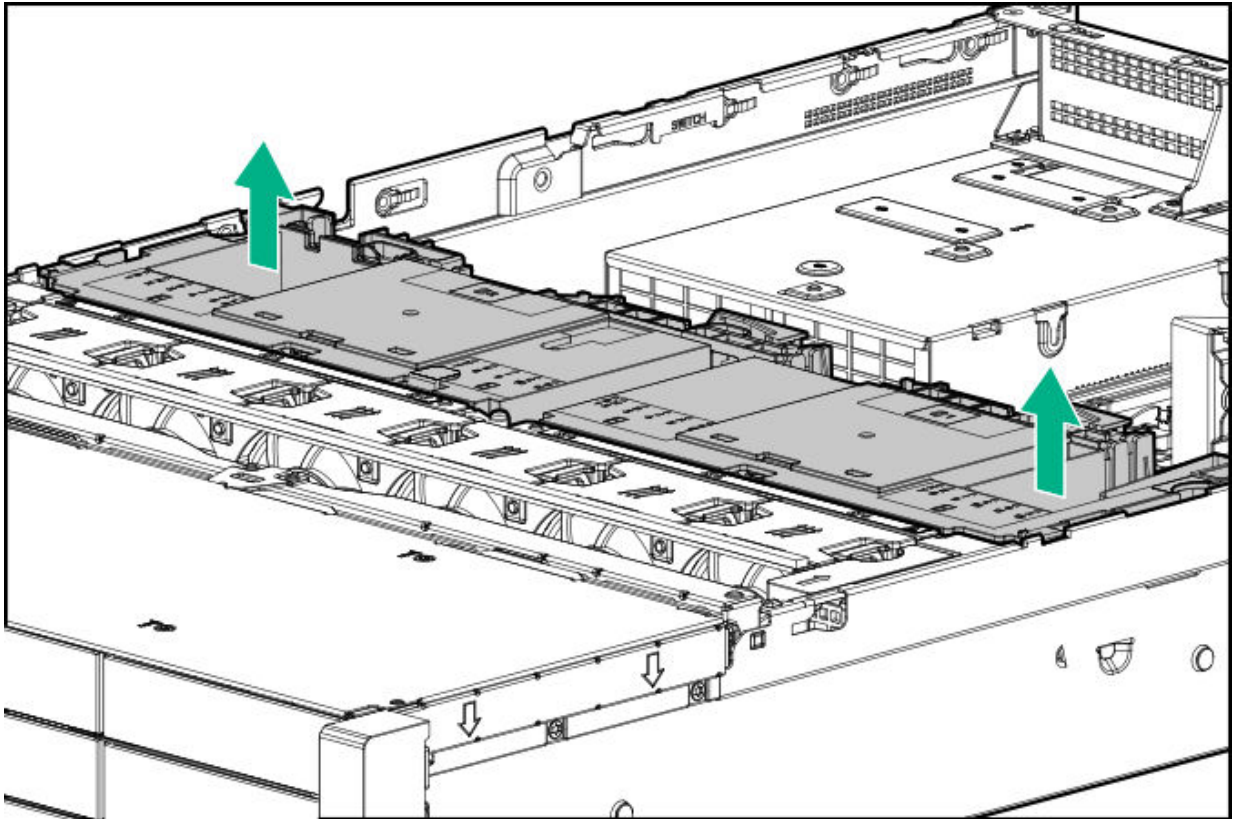

- Remove the midplane drive cage:
  - a. Disconnect all cables.
  - b. Remove all drives.  
Be sure to note the location of each drive.
  - c. Remove the drive cage.  
A 4LFF version is shown.



**CAUTION:** Do not drop the drive cage on the system board. Dropping the drive cage on the system board might damage the system or components. Remove all drives and use two hands when installing or removing the drive cage.

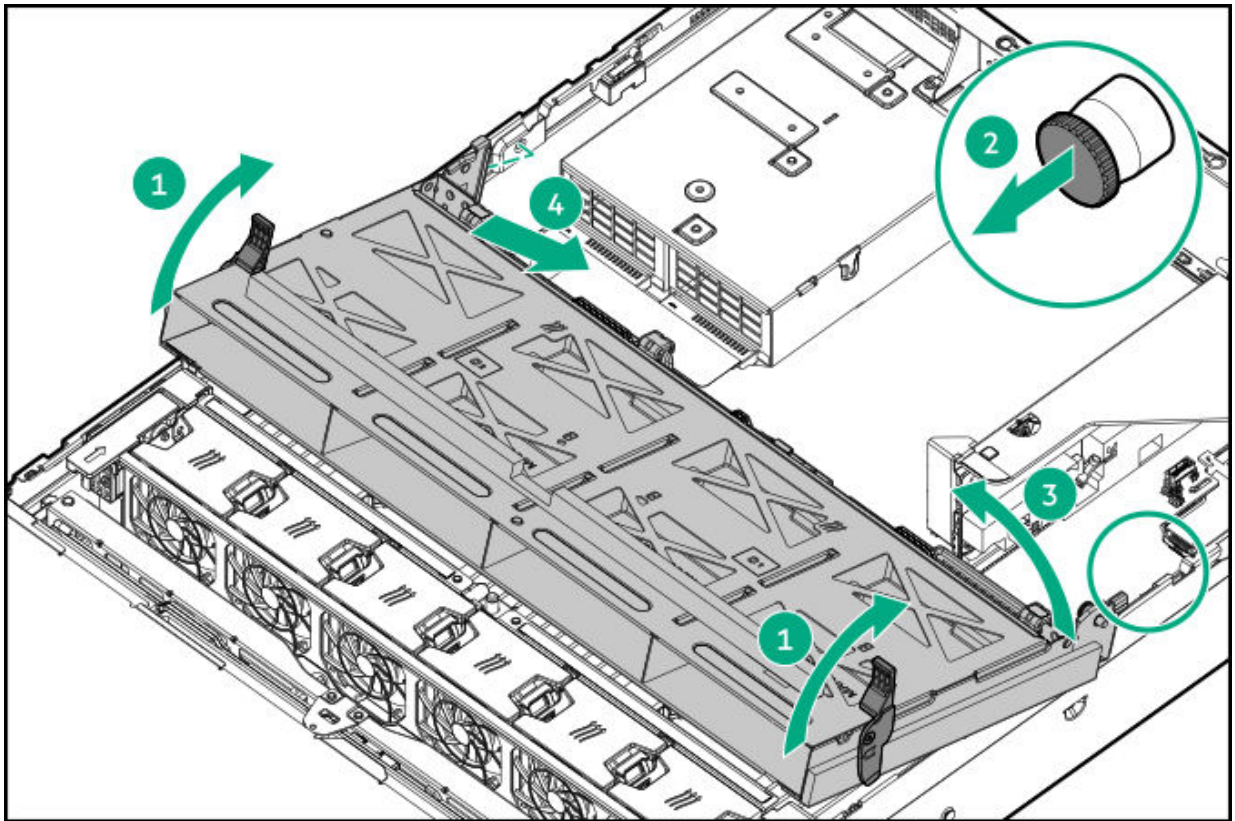

## Installing the air baffle

### Procedure

1. Observe the following alerts.




**CAUTION:** For proper cooling, do not operate the server without the access panel, baffles, expansion slot covers, or blanks installed. If the server supports hot-plug components, minimize the amount of time the access panel is open.



**CAUTION:** Do not detach the cable that connects the battery pack to the cache module. Detaching the cable causes any unsaved data in the cache module to be lost.

2. Install the air baffle.

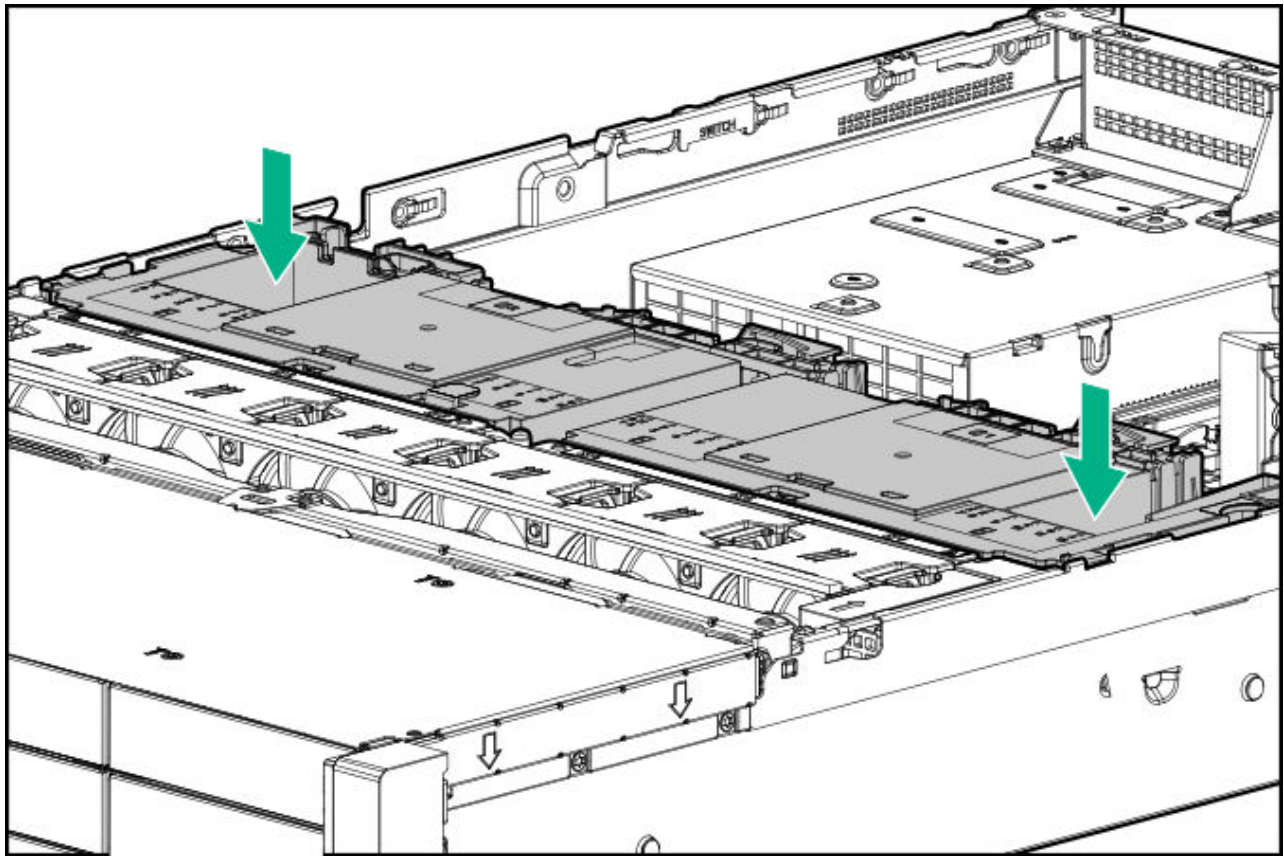

## Removing a riser cage

### About this task




**CAUTION:** To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.


### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:

- Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the riser cage:
- Primary and secondary riser cages

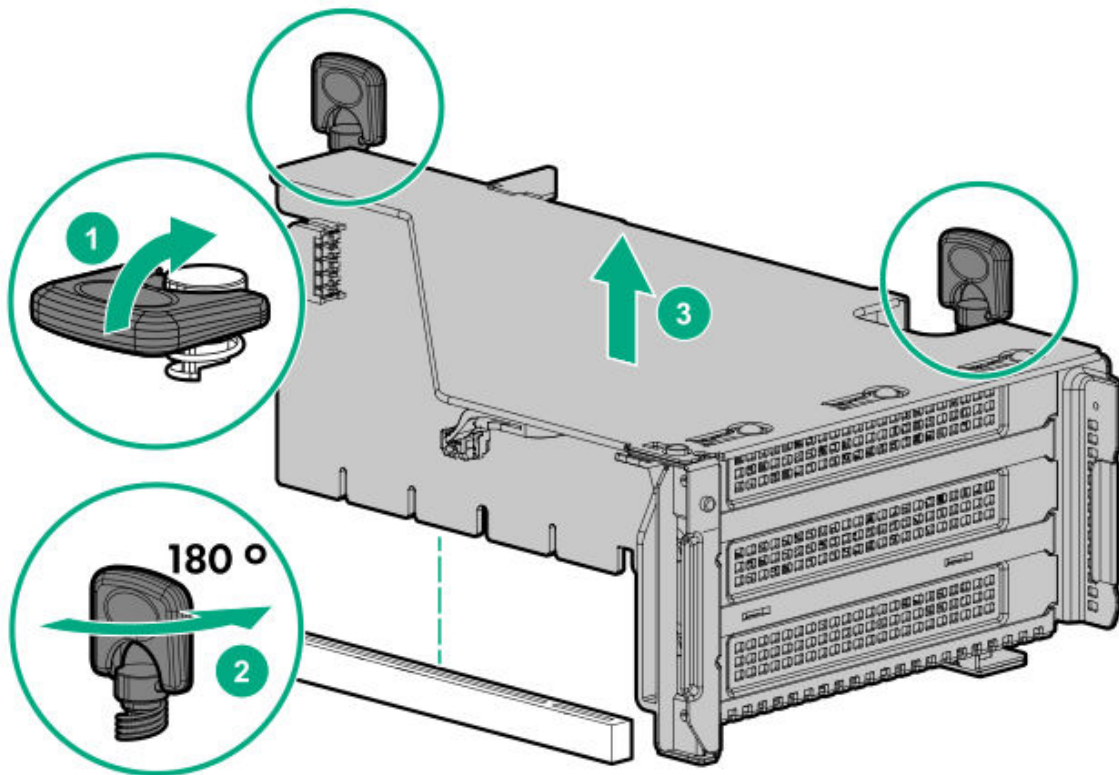

- Tertiary riser cage

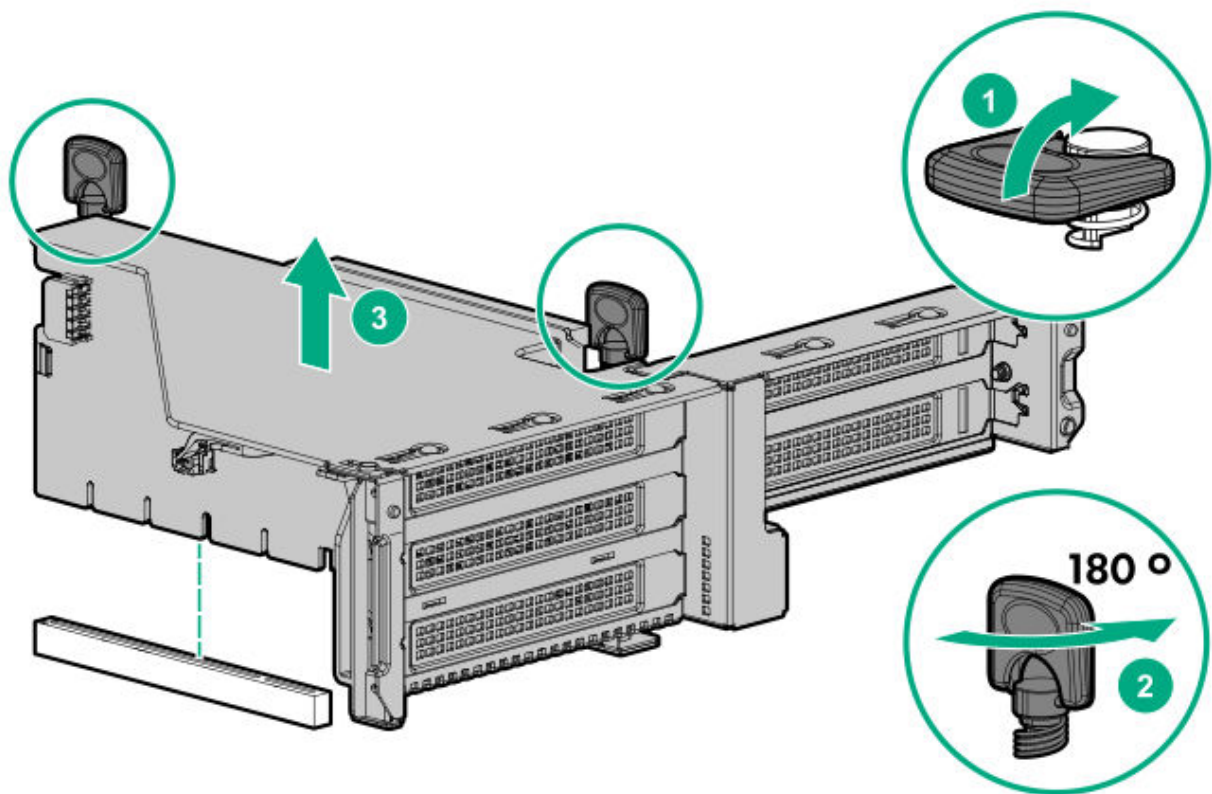

## Removing a riser slot blank

### About this task




**CAUTION:** To prevent improper cooling or thermal damage, the server PCI slots must have an expansion slot blank or an expansion board installed.

### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.

- Remove the server from the rack.
4. Remove the access panel.
  5. Remove the riser cage.
  6. Remove the blank.

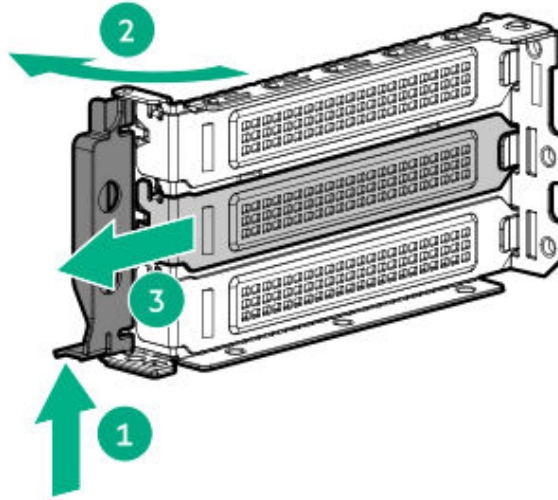


## Removing the hard drive blank

### About this task




**CAUTION:** To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

**Figure 1. Removing an SFF drive blank**

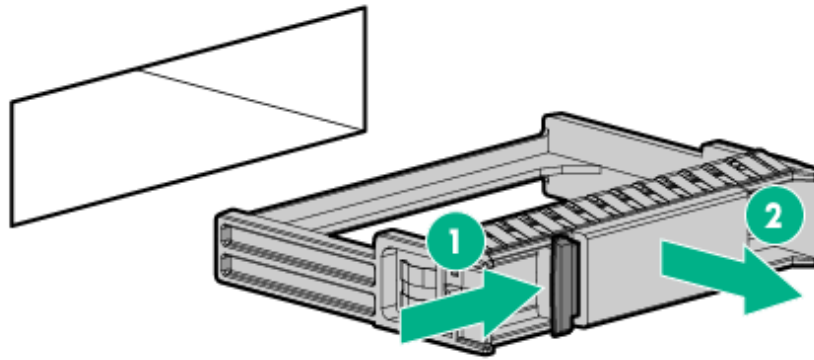

**Figure 2. Removing an LFF drive blank**

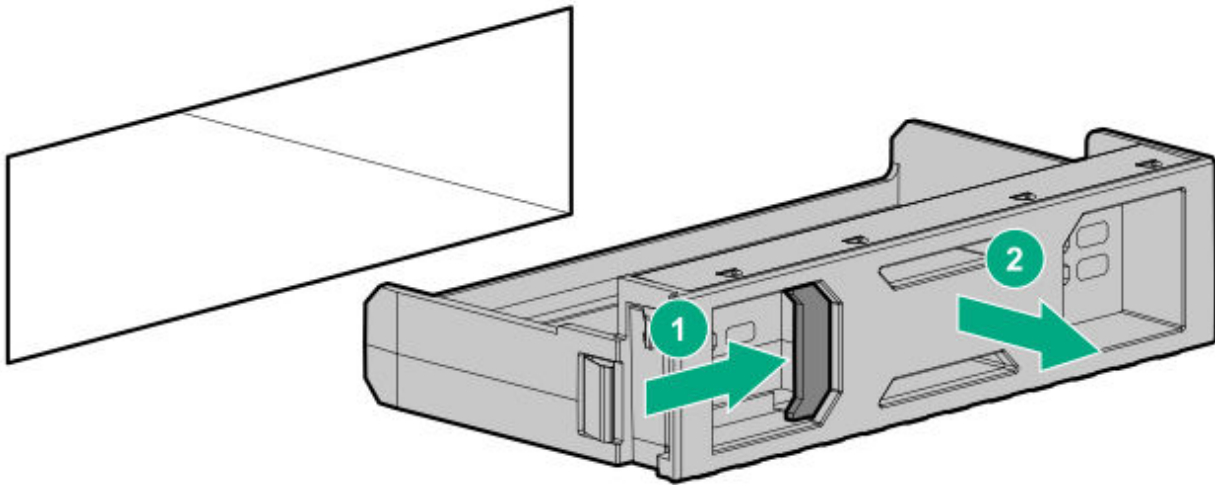


**Results**

To replace the component, reverse the removal procedure.

## Releasing the cable management arm

**About this task**

Release the cable management arm and then swing the arm away from the rack.

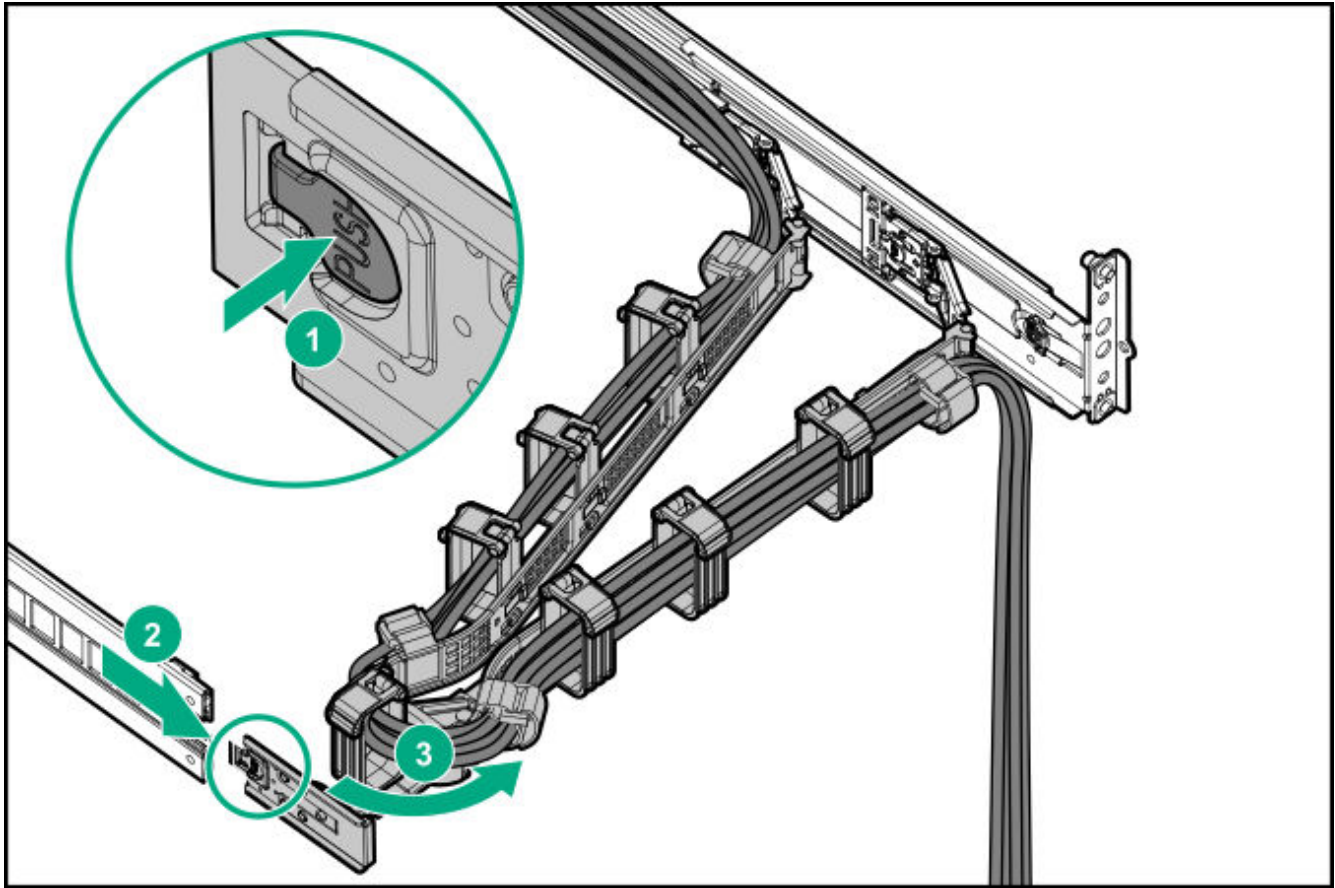


## Accessing the Systems Insight Display

### About this task

The Systems Insight Display is supported only on SFF models.

### Procedure

1. Press and release the panel.
2. After the display fully ejects, rotate the display to view the LEDs.

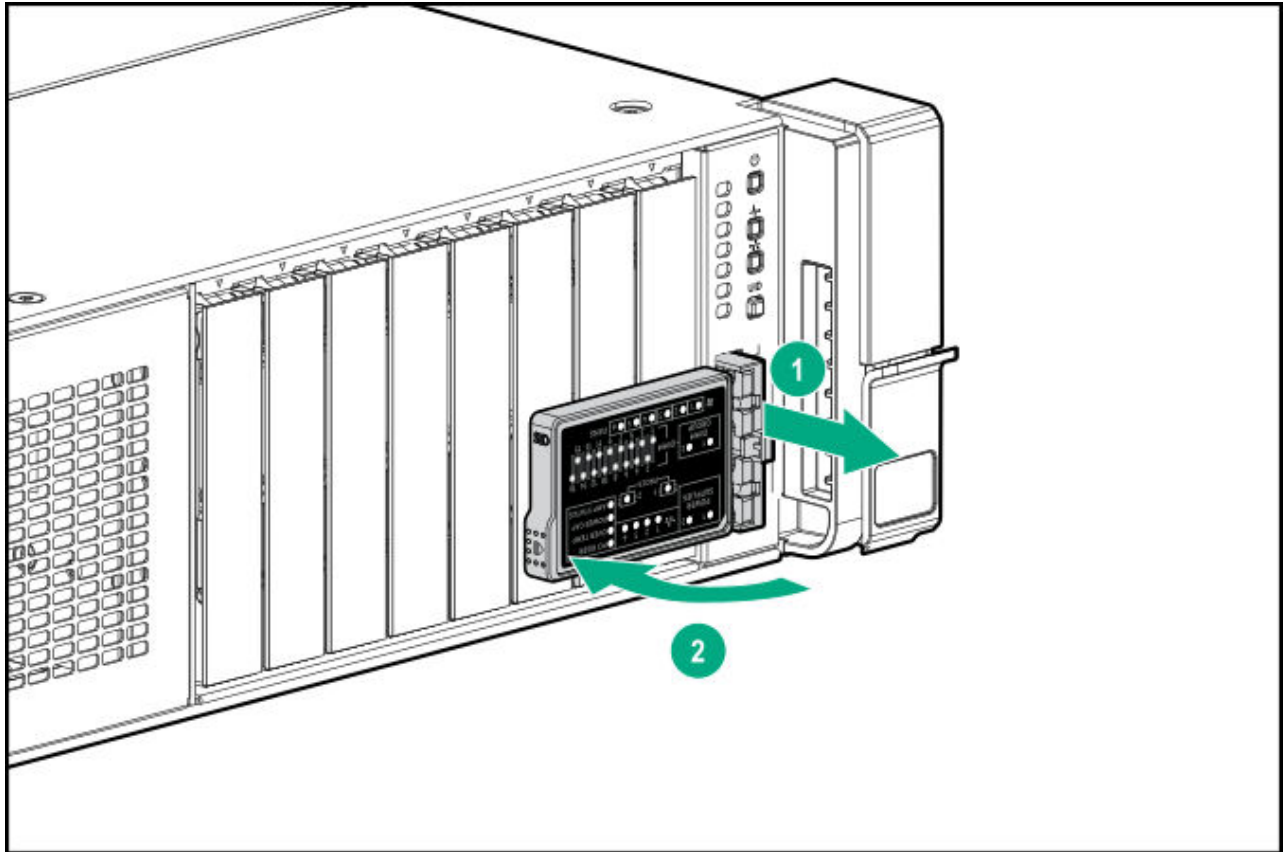

## Setup

### Subtopics

[Optional services](#)

[Set up the server](#)

## Optional services

Delivered by experienced, certified engineers, HPE support services help you keep your servers up and running with support packages tailored specifically for HPE ProLiant systems. HPE support services let you integrate both hardware and software support into a single package. A number of service level options are available to meet your business and IT needs.

HPE support services offer upgraded service levels to expand the standard product warranty with easy-to-buy, easy-to-use support packages that will help you make the most of your server investments. Some of the HPE support services for hardware, software, or both are:

- Foundation Care – Keep systems running.

The time commitment for this service might vary depending on the site's geographical region. For more service information available at your site, contact your local **HPE support center**.

- Deployment service for both hardware and software.
- HPE Education Services – Help train your IT staff.

For more information on HPE support services, see the HPE Pointnext website:

**<https://www.hpe.com/services>**

## Set up the server

### Prerequisites

Before setting up the server:

- Download the latest SPP:  
**<https://www.hpe.com/servers/spp/download>**  
Support validation required
- Verify that your OS or virtualization software is supported:  
**<http://www.hpe.com/info/ossupport>**
- Read the operational requirements for the server:  
[Operational requirements](#)
- Read the safety and compliance information on the HPE website:  
**<http://www.hpe.com/support/safety-compliance-enterpriseproducts>**
- Obtain the storage driver if needed:
  - Download it from the HPE support center website.
  - Extract it from the SPP.

### Procedure

#### Unbox the server

1. Unbox the server and verify the contents:
  - A server
  - A power cord
  - Rack-mounting hardware

- Documentation

2. (Optional) Install hardware options.

For installation instructions, see "Hardware options installation."

### Rack the server

3. Install the server in a rack.

The racking procedures are included with the rack rails.

- a. Connect devices, cables, and cords to the server.
- b. Secure cables using the cable management arm.

4. Decide how to manage the server:

- Locally: use a KVM switch or a connect a keyboard, monitor, and mouse.
- Remotely: connect to the iLO web interface and run a remote console:
  - a. Verify the following:
    - iLO is licensed to use the remote console feature.  
If iLO is not licensed, visit <https://www.hpe.com/info/ilo>
    - The iLO management port is connected to a secure network.

b. Using a browser, navigate to the iLO web interface, and then log in.

```
https://<iLO hostname or IP address>
```

Note the following:

- The hostname is located on the serial pull tab.
  - If a DHCP server assigns the IP address, the IP address appears on the boot screen.
  - If a static IP address is assigned, use that IP address.
  - The default login credentials are located on the serial label pull tab.
- c. In the side navigation, click the **Remote Console & Media** link, and then launch a remote console.

### Power on the server

5. Press the Power On/Standby button.

For remote management, use the iLO virtual power button.

### Update the firmware

6. Using the SPP, update the following:

- System ROM

- Storage controller
- Network adapters
- Intelligent Provisioning

### Set up storage

7. Do one of the following:

- To configure the server to boot from a SAN, see the following guide:  
**<https://www.hpe.com/info/boot-from-san-config-guide>**
- If a smart array controller is installed:
  - For SR controllers, use HPE Smart Storage Administrator to create arrays:
    - a. From the boot screen, press **F10** to run Intelligent Provisioning.
    - b. From Intelligent Provisioning, run HPE Smart Storage Administrator.
  - For MR controllers, use the UEFI System Configuration to create arrays.



#### IMPORTANT:

MR controllers are not supported by Intelligent Provisioning or Smart Storage Administrator.



#### NOTE:

Before installing an OS with a MR controller, configure the drives. If the drives are not configured, the OS will not detect the drives during installation. For more information, see the MR user guide for your controller.

- If no controller is installed, do one of the following:
  - AHCI is enabled by default. You can deploy an OS or virtualization software.
  - Disable AHCI, enable software RAID, and then create an array:
    - a. From the boot screen, press **F9** to run UEFI System Utilities.
    - b. From the UEFI System Utilities screen, select **System Configurations > BIOS/Platform Configuration (RBSU) > Storage Options > SATA Controller Options > Embedded SATA configuration > SmartRAID SW RAID Support**
    - c. Enable SW RAID.
    - d. Save the configuration and reboot the server.

- e. Create an array:
  - i. From the boot screen, press **F9** to run UEFI System Utilities.
  - ii. From the UEFI System Utilities screen, select **System Configuration > EmbeddedStorage: HPE SR100i Gen10+ SW RAID > Array Configuration > Create Array**

## Deploy an OS or virtualization software

8. Do one of the following:

- Run Intelligent Provisioning to deploy an OS.

Press **F10** at the boot screen to run Intelligent Provisioning.



### IMPORTANT:

Smart array MR controllers are not supported by Intelligent Provisioning or Smart Storage Administrator.

- Manually deploy an OS.

- a. Insert the installation media.

For remote management, click **Virtual Drives** in the iLO remote console to mount images, drivers, or files to a virtual folder. If a storage driver is required to install the OS, use the virtual folder to store the driver.

- b. Press **F11** at the boot screen to select the boot device.

- c. After the OS is installed, update the drivers.

## Subtopics

**Operational requirements**

**Server warnings and cautions**

**Rack warnings**

**Electrostatic discharge**

**Server box contents**

**Installing hardware options**

**Installing the product in a rack**

**POST screen options**

**Installing or deploying an operating system**

# Operational requirements

## Subtopics

[Space and airflow requirements](#)

[Temperature requirements](#)

[Power requirements](#)

[Electrical grounding requirements](#)

[Connecting a DC power cable to a DC power source](#)

## Space and airflow requirements

To allow for servicing and adequate airflow, observe the following space and airflow requirements when deciding where to install a rack:

- Leave a minimum clearance of 63.5 cm (25 in) in front of the rack.
- Leave a minimum clearance of 76.2 cm (30 in) behind the rack.
- Leave a minimum clearance of 121.9 cm (48 in) from the back of the rack to the back of another rack or row of racks.

Hewlett Packard Enterprise servers draw in cool air through the front door and expel warm air through the rear door. Therefore, the front and rear rack doors must be adequately ventilated to allow ambient room air to enter the cabinet, and the rear door must be adequately ventilated to allow the warm air to escape from the cabinet.



**CAUTION:** To prevent improper cooling and damage to the equipment, do not block the ventilation openings.

When vertical space in the rack is not filled by a server or rack component, the gaps between the components cause changes in airflow through the rack and across the servers. Cover all gaps with blanking panels to maintain proper airflow.



**CAUTION:** Always use blanking panels to fill empty vertical spaces in the rack. This arrangement ensures proper airflow. Using a rack without blanking panels results in improper cooling that can lead to thermal damage.

The 9000 and 10000 Series Racks provide proper server cooling from flow-through perforations in the front and rear doors that provide 64 percent open area for ventilation.



**CAUTION:** When using a Compaq branded 7000 series rack, install the high airflow rack door insert (PN 327281-B21 for 42U rack, PN 157847-B21 for 22U rack) to provide proper front-to-back airflow and cooling.



**CAUTION:**

If a third-party rack is used, observe the following additional requirements to ensure adequate airflow and to prevent damage to the equipment:

- Front and rear doors—If the 42U rack includes closing front and rear doors, you must allow 5,350 sq cm (830 sq in) of holes evenly distributed from top to bottom to permit adequate airflow (equivalent to the required 64 percent open area for ventilation).
- Side—The clearance between the installed rack component and the side panels of the rack must be a minimum of 7 cm (2.75 in).

## Temperature requirements

To ensure continued safe and reliable equipment operation, install or position the system in a well-ventilated, climate-controlled environment.

The maximum recommended ambient operating temperature (TMRA) for most server products is 35°C (95°F). The temperature in the room where the rack is located must not exceed 35°C (95°F).



**CAUTION:** To reduce the risk of damage to the equipment when installing third-party options:

- Do not permit optional equipment to impede airflow around the server or to increase the internal rack temperature beyond the maximum allowable limits.
- Do not exceed the manufacturer's TMRA.

## Power requirements

Installation of this equipment must comply with local and regional electrical regulations governing the installation of information technology equipment by licensed electricians. This equipment is designed to operate in installations covered by NFPA 70, 1999 Edition (National Electric Code) and NFPA-75, 1992 (Code for Protection of Electronic Computer/Data Processing Equipment). For electrical power ratings on options, refer to the product rating label or the user documentation supplied with that option.



**WARNING:** To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.



**CAUTION:** Protect the server from power fluctuations and temporary interruptions with a regulating uninterruptible power supply. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system in operation during a power failure.

## Electrical grounding requirements

The server must be grounded properly for proper operation and safety. In the United States, you must install the equipment in accordance with NFPA 70, National Electric Code Article 250, as well as any local and regional building codes. In Canada, you must install the equipment in accordance with Canadian Standards Association, CSA C22.1, Canadian Electrical Code. In all other countries, you must install the equipment in accordance with any regional or national electrical wiring codes, such as the International Electrotechnical Commission (IEC) Code 364, parts 1 through 7. Furthermore, you must be sure that all power distribution devices used in the installation, such as branch wiring and receptacles, are listed or certified grounding-type devices.

Because of the high ground-leakage currents associated with multiple servers connected to the same power source, Hewlett Packard Enterprise recommends the use of a PDU that is either permanently wired to the building's branch circuit or includes a nondetachable cord that is wired to an industrial-style plug. NEMA locking-style plugs or those complying with IEC 60309 are considered suitable for this purpose. Using common power outlet strips for the server is not recommended.

## Connecting a DC power cable to a DC power source



### **WARNING:**

To reduce the risk of electric shock or energy hazards:

- This equipment must be installed by trained service personnel, as defined by the NEC and IEC 60950-1, Second Edition, the standard for Safety of Information Technology Equipment.
- Connect the equipment to a reliably grounded Secondary circuit source. A Secondary circuit has no direct connection to a Primary circuit and derives its power from a transformer, converter, or equivalent isolation device.
- The branch circuit overcurrent protection must be rated 27 A.



**WARNING:** When installing a DC power supply, the ground wire must be connected before the positive or negative leads.



**WARNING:** Remove power from the power supply before performing any installation steps or maintenance on the power supply.



**CAUTION:** The server equipment connects the earthed conductor of the DC supply circuit to the earthing conductor at the equipment. For more information, see the documentation that ships with the power supply.



**CAUTION:** If the DC connection exists between the earthed conductor of the DC supply circuit and the earthing conductor at the server equipment, the following conditions must be met:

- This equipment must be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode conductor is connected.
- This equipment should be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system should be earthed elsewhere.
- The DC supply source is to be located within the same premises as the equipment.

To connect a DC power cable to a DC power source:

1. Cut the DC power cord ends no shorter than 150 cm (59.06 in).
2. If the power source requires ring tongues, use a crimping tool to install the ring tongues on the power cord wires.



**IMPORTANT:** The ring terminals must be UL approved and accommodate 12 gauge wires.



**IMPORTANT:** The minimum nominal thread diameter of a pillar or stud type terminal must be 3.5 mm (0.138 in); the diameter of a screw type terminal must be 4.0 mm (0.157 in).

3. Stack each same-colored pair of wires and then attach them to the same power source. The power cord consists of three wires (black, red, and green).

For more information, see the documentation that ships with the power supply.

## Server warnings and cautions



### **WARNING:**

This server is heavy. To reduce the risk of personal injury or damage to the equipment:

- Observe local occupational health and safety requirements and guidelines for manual material handling.
- Get help to lift and stabilize the product during installation or removal, especially when the product is not fastened to the rails. Hewlett Packard Enterprise recommends that a minimum of two people are required for all rack server installations. If the server is installed higher than chest level, a third person may be required to help align the server.
- Use caution when installing the server in or removing the server from the rack; it is unstable when not fastened to the rails.



### **WARNING:**

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



### **WARNING:**

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove the power cord to remove power from the server. The front panel Power On/Standby button does not completely shut off system power. Portions of the power supply and some internal circuitry remain active until AC/DC power is removed.



### **WARNING:**

To reduce the risk of fire or burns after removing the energy pack:

- Do not disassemble, crush, or puncture the energy pack.
- Do not short external contacts.
- Do not dispose of the energy pack in fire or water.
- Do not expose the energy pack to low air pressure as it might lead to explosion or leakage of flammable liquid or gas.
- Do not expose the energy pack to temperatures higher than 60°C (140°F).

## Rack warnings



**WARNING:** To reduce the risk of personal injury or damage to the equipment, be sure that:

- The leveling jacks are extended to the floor.
- The full weight of the rack rests on the leveling jacks.
- The stabilizing feet are attached to the rack if it is a single-rack installation.
- The racks are coupled together in multiple-rack installations.
- Only one component is extended at a time. A rack may become unstable if more than one component is extended for any reason.



**WARNING:** To reduce the risk of personal injury or equipment damage when unloading a rack:

- At least two people are needed to safely unload the rack from the pallet. An empty 42U rack can weigh as much as 115 kg (253 lb), can stand more than 2.1 m (7 ft) tall, and might become unstable when being moved on its casters.
- Never stand in front of the rack when it is rolling down the ramp from the pallet. Always handle the rack from both sides.



**WARNING:**

To reduce the risk of personal injury or damage to the equipment, adequately stabilize the rack before extending a component outside the rack. Extend only one component at a time. A rack may become unstable if more than one component is extended.



**WARNING:**

When installing a server in a telco rack, be sure that the rack frame is adequately secured at the top and bottom to the building structure.

## Electrostatic discharge

Be aware of the precautions you must follow when setting up the system or handling components. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the system or component.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:
  - Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm  $\pm$ 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
  - Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
  - Use conductive field service tools.
  - Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

## Server box contents

The server shipping box contains the following contents:

- A server
- A power cord
- Rack-mounting hardware (optional)
- Documentation

## Installing hardware options

Install any hardware options before initializing the server. For options installation information, refer to the option documentation. For server-specific information, refer to "[Hardware options installation](#)."

## Installing the product in a rack

### Prerequisites

**WARNING:**

To reduce the risk of personal injury or equipment damage, do one of the following:

- Use two or more people to lift and stabilize the product pieces during assembly.
- Use a lift that can handle the load of the product.

**WARNING:**



To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before installing the enclosure.

**CAUTION:**


Always plan the rack installation so that the heaviest item is on the bottom of the rack. Install the heaviest item first, and continue to populate the rack from the bottom to the top.



**CAUTION:**


Be sure to keep the product parallel to the floor when installing the enclosure. Tilting the product up or down could result in damage to the slides.

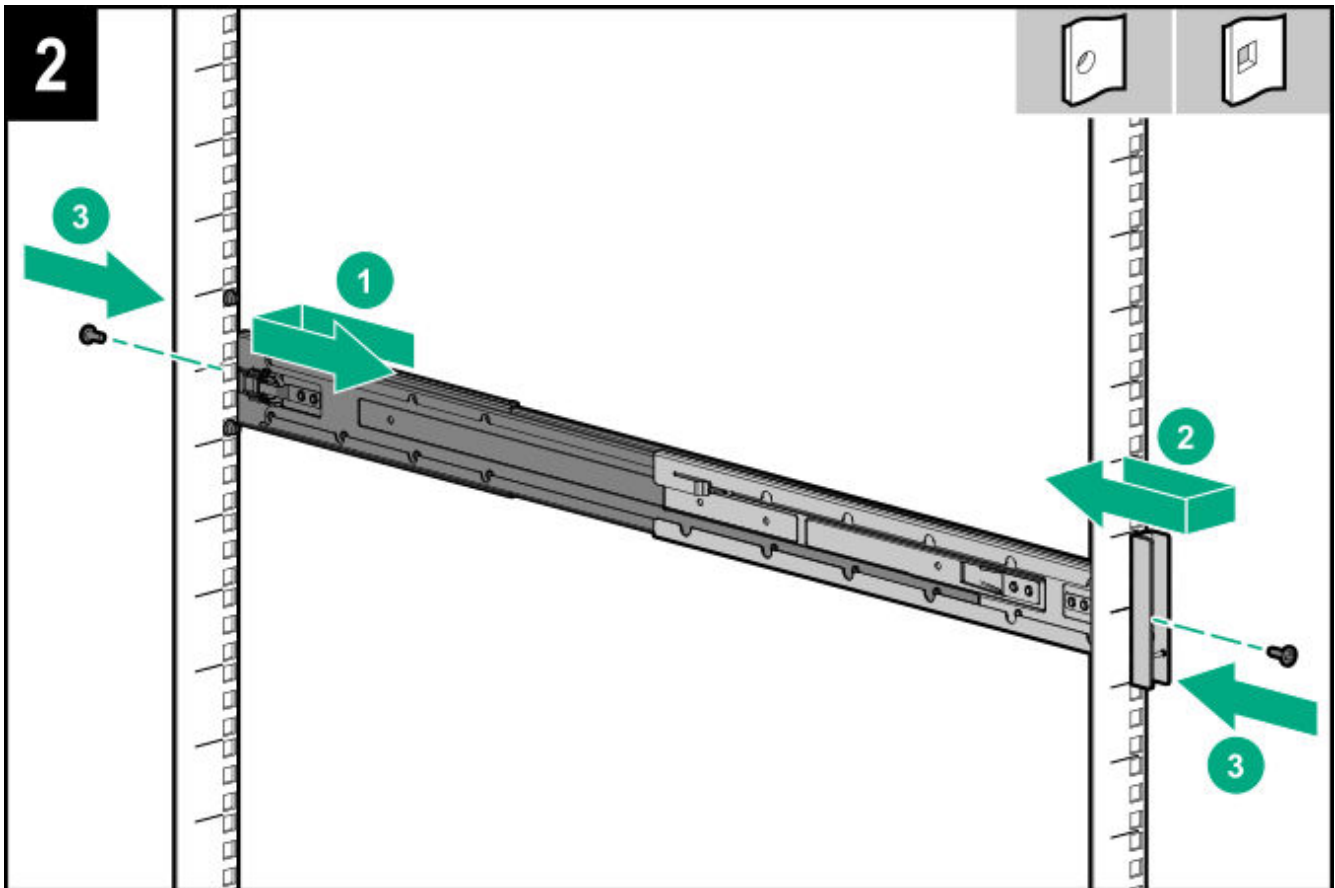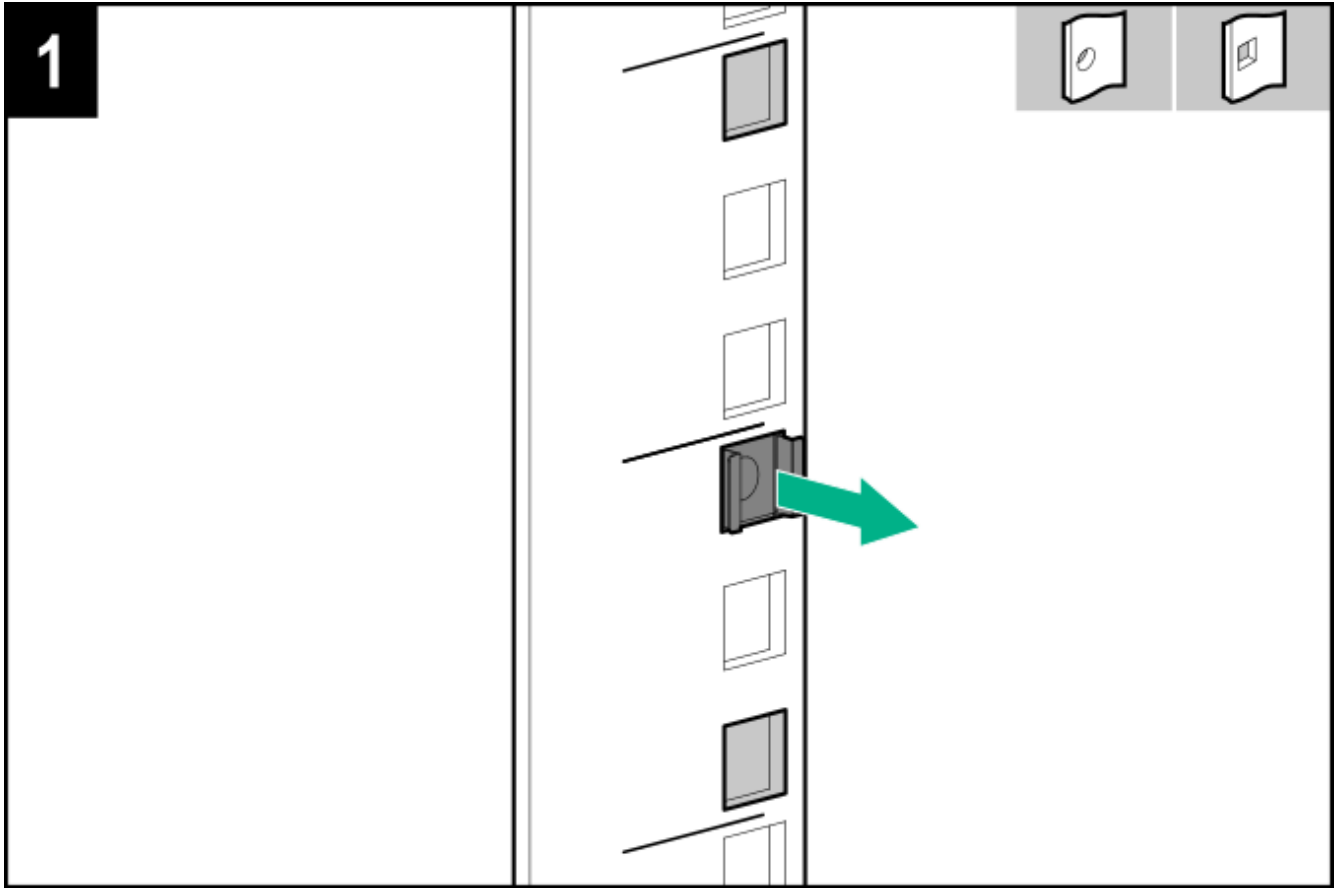


The next step applies only to threaded-hole racks.

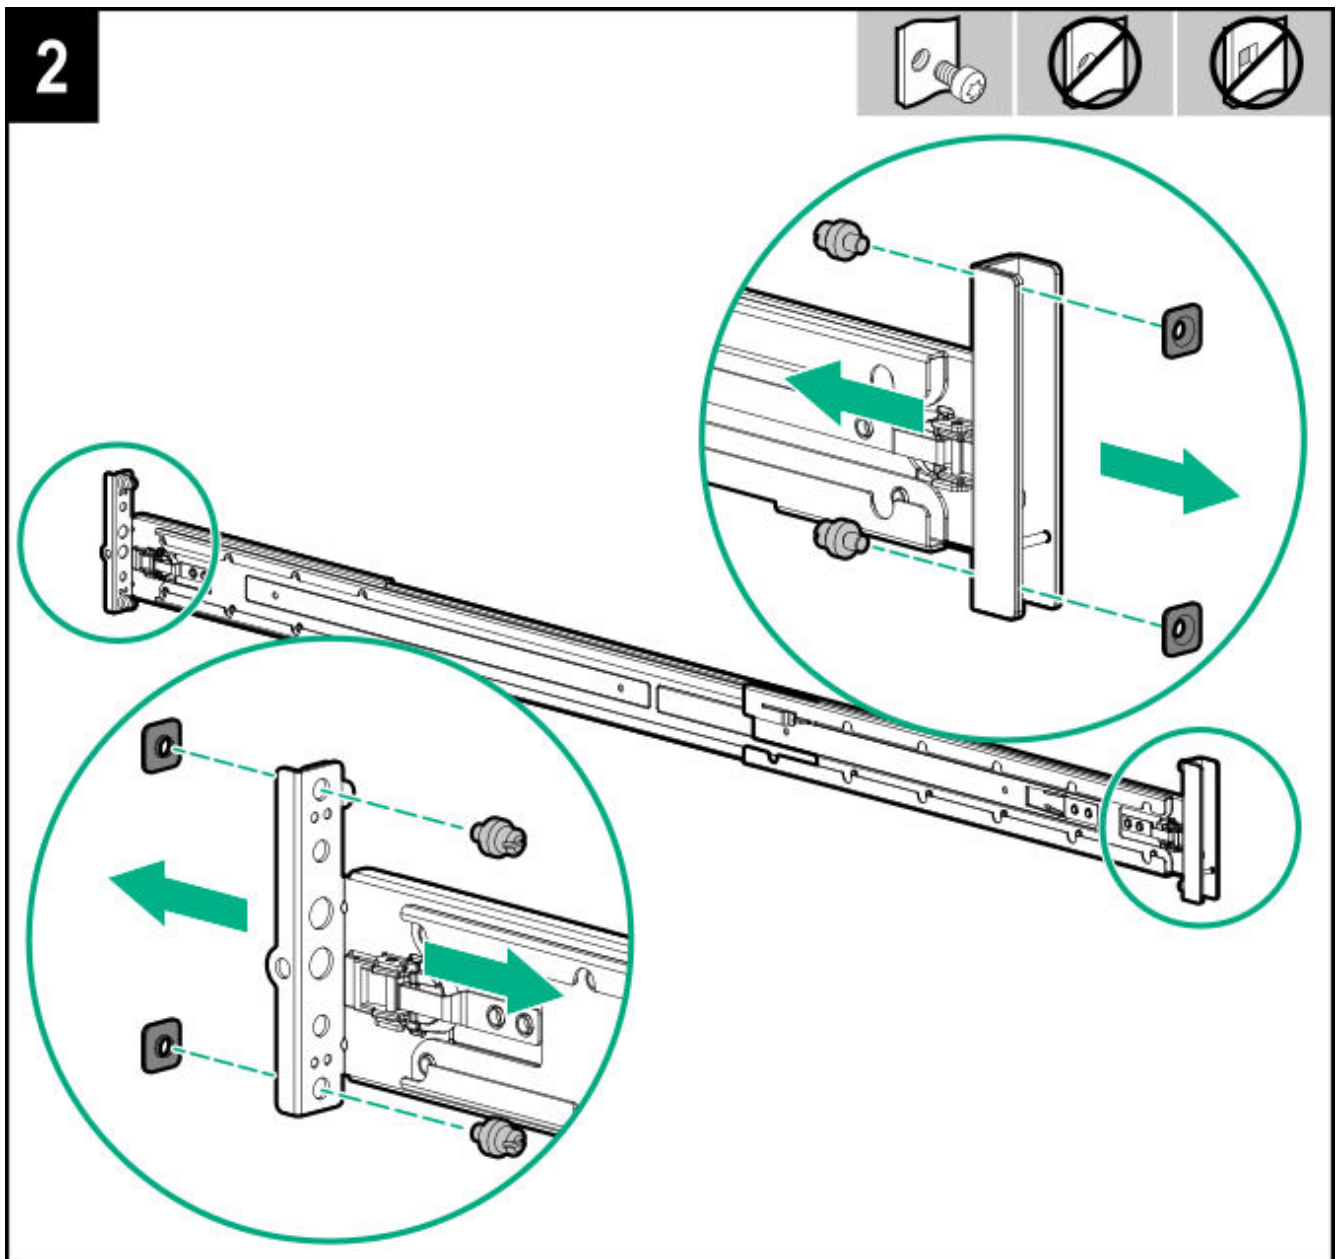

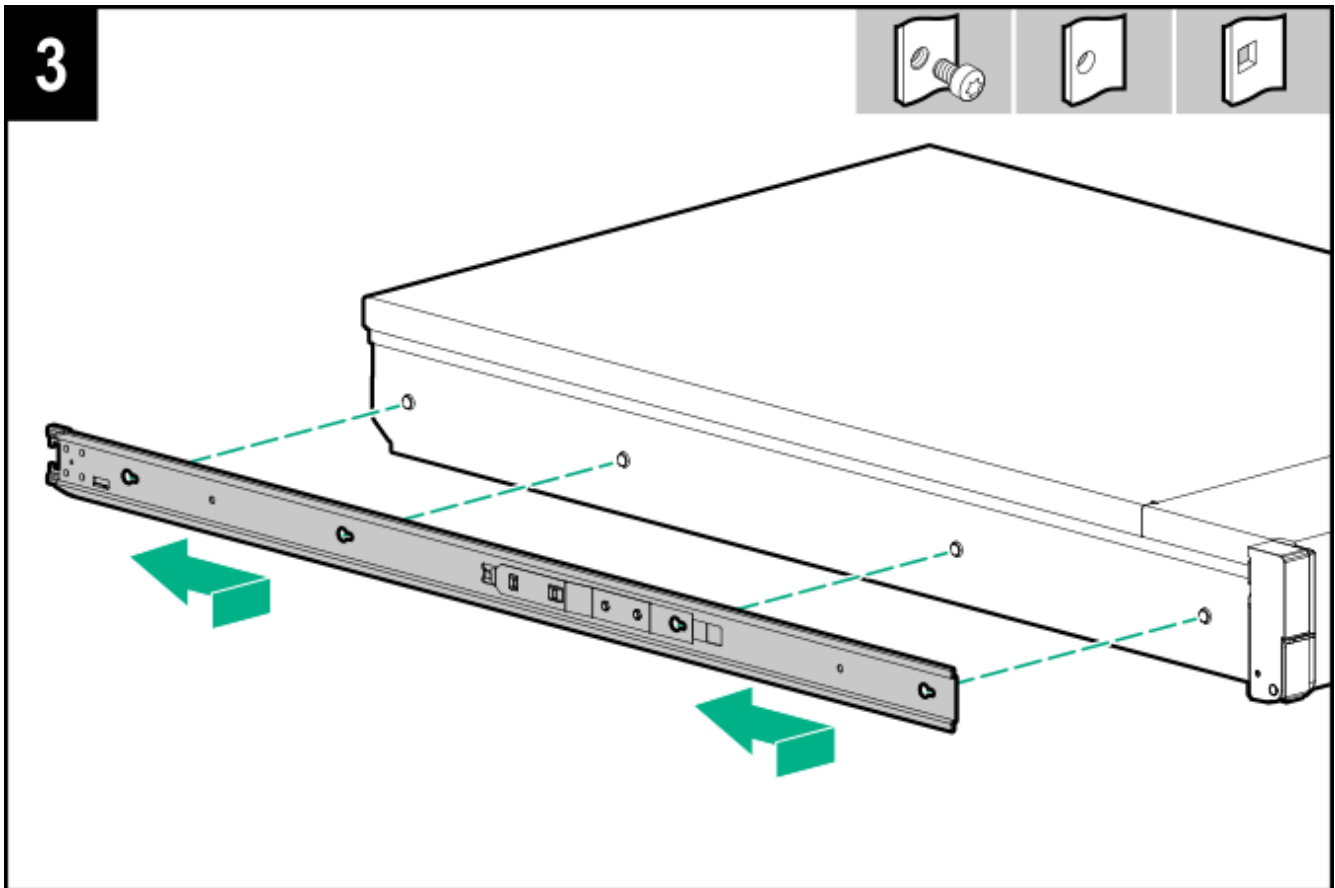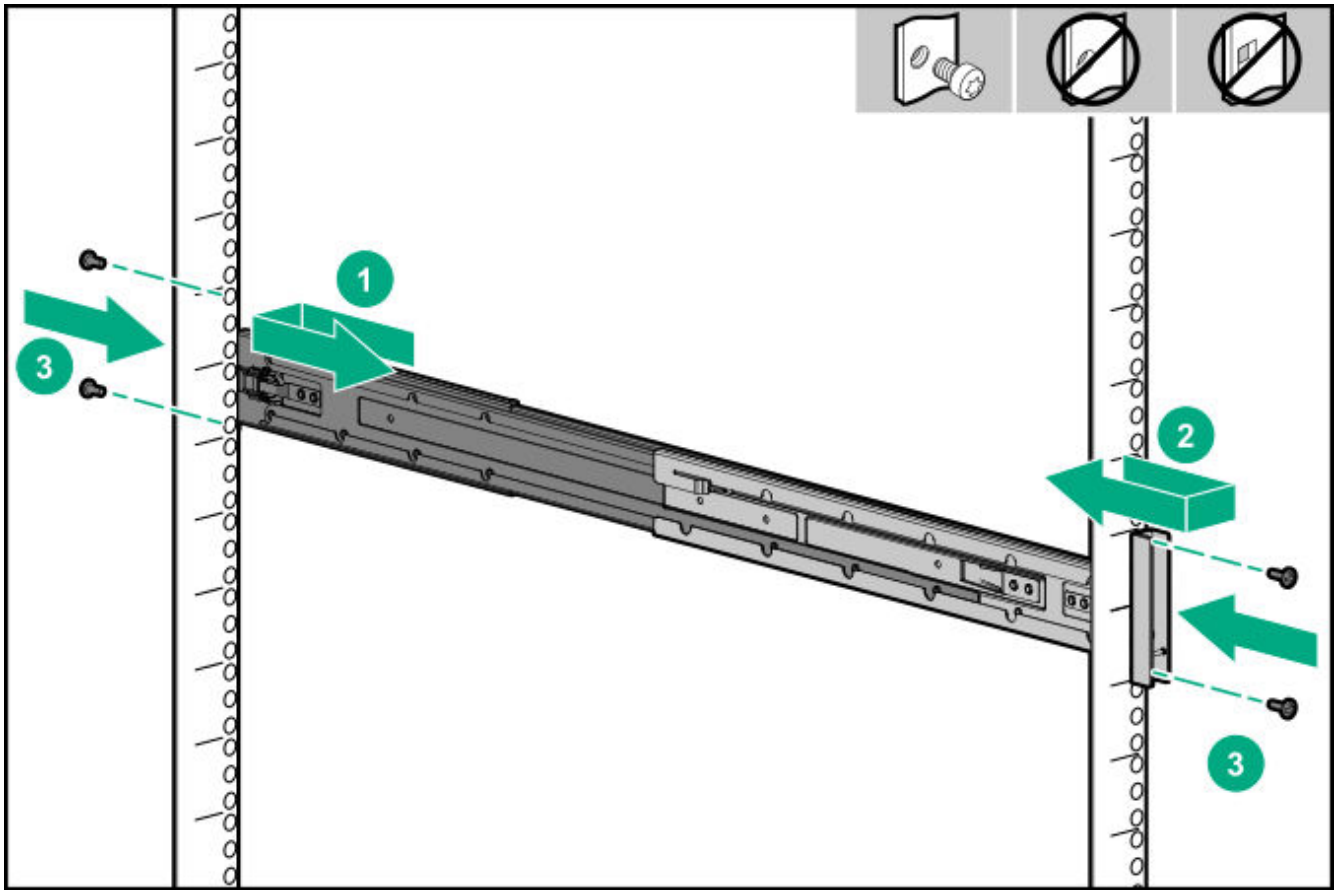

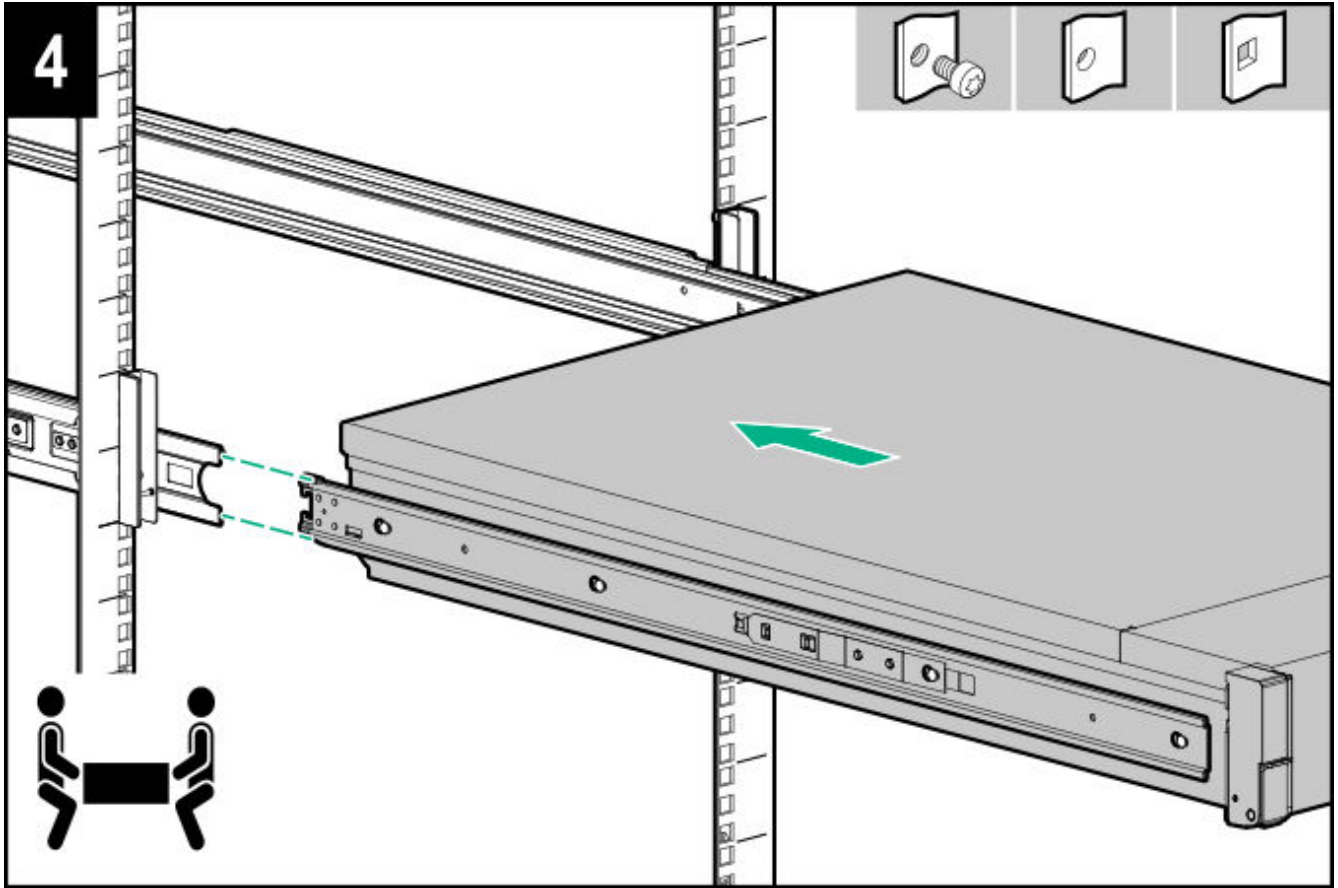

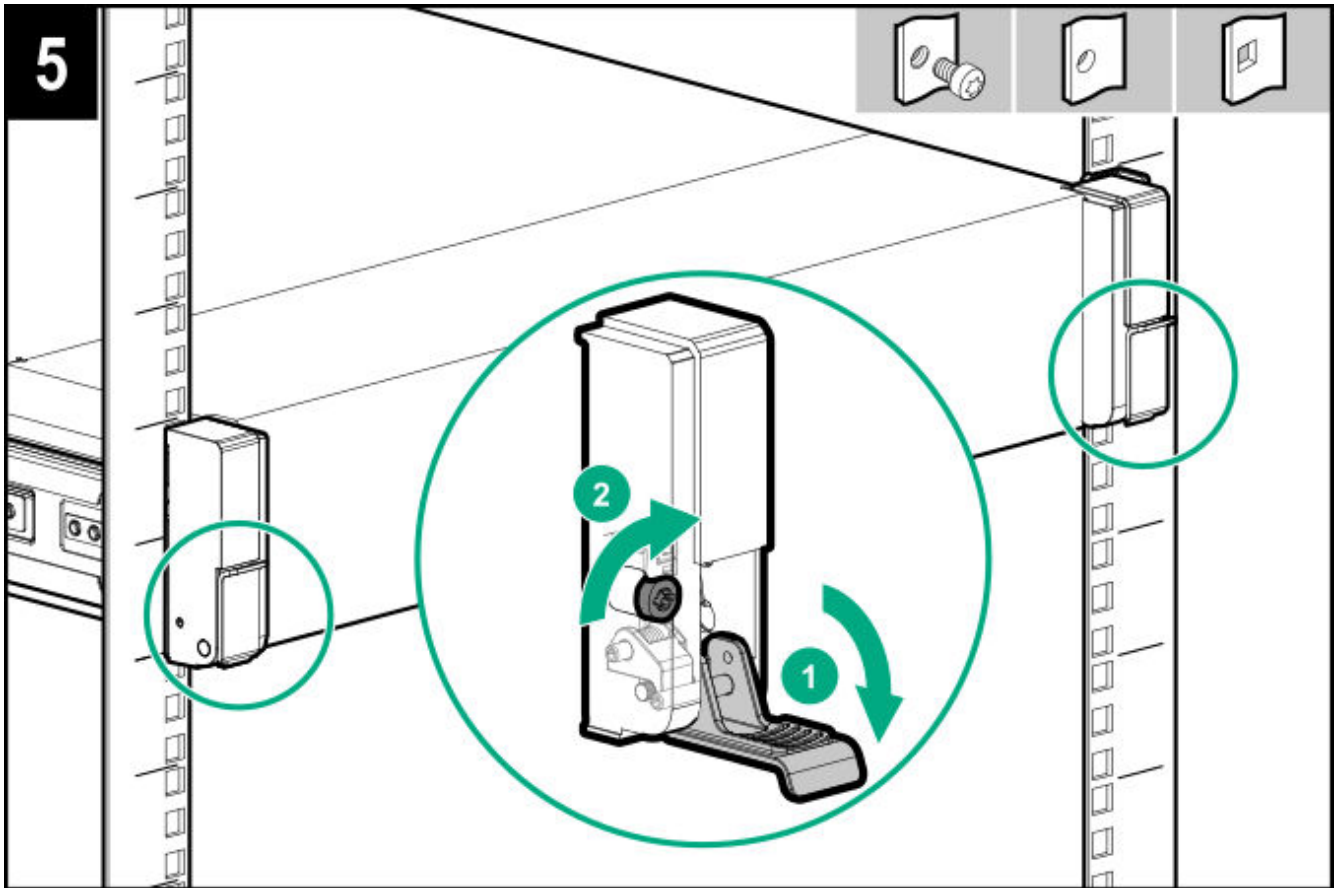

The installation is complete.

## POST screen options

### About this task

When the server is powered on, the POST screen is displayed. The following options are displayed:

- System Utilities (F9)  
Use this option to configure the system BIOS.
- Intelligent Provisioning (F10)  
Use this option to deploy an operating system or configure storage.
- **Boot order (F11)**  
Use this option to make a one-time boot selection.
- **Network boot (F12)**  
Use this option to boot the server from the network.

# Installing or deploying an operating system

## About this task

Before installing an operating system, observe the following:

- Be sure to read the HPE UEFI requirements for ProLiant servers on the [Hewlett Packard Enterprise website](#). If UEFI requirements are not met, you might experience boot failures or other errors when installing the operating system.
- Update firmware before using the server for the first time, unless software or components require an older version. For more information, see [#GUID-951177E9-C117-4F2C-8FB7-79BA6327812F](#).
- For the latest information on supported operating systems, see the [Hewlett Packard Enterprise website](#).
- The server does not ship with OS media. All system software and firmware is preloaded on the server.

## Hardware options installation

### Subtopics

#### [Introduction](#)

#### [Hewlett Packard Enterprise product QuickSpecs](#)

#### [Installing a fan filter into the security bezel](#)

#### [Installing the bezel and bezel lock](#)

#### [Installing the cable management arm](#)

#### [Power supply options](#)

#### [Energy pack options](#)

#### [Memory options](#)

#### [Fan options](#)

#### [Drive options](#)

#### [Installing a Universal Media Bay](#)

#### [Storage controller options](#)

#### [Riser and riser cage options](#)

#### [Expansion slots](#)

#### [Drive cage options](#)

#### [Processor and heatsink options](#)

#### [Installing the chassis intrusion detection switch](#)

#### [Installing an OCP 3.0 adapter card](#)

#### [Installing the Pensando DSP DSC-25 2p SFP28 card](#)

**Installing the HPE NS204i-p NVMe OS Boot Device option**

**Installing a rear serial port interface**

**Installing the Systems Insight Display**

**HPE Trusted Platform Module 2.0 Gen10 Plus option**

## Introduction

Install any hardware options before initializing the server. If multiple options are being installed, read the installation instructions for all the hardware options to identify similar steps and streamline the installation process.



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



**CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.


## Hewlett Packard Enterprise product QuickSpecs

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## Installing a fan filter into the security bezel


### About this task

The fan filter installs into the security bezel. To add a fan filter, the server must have a security bezel.

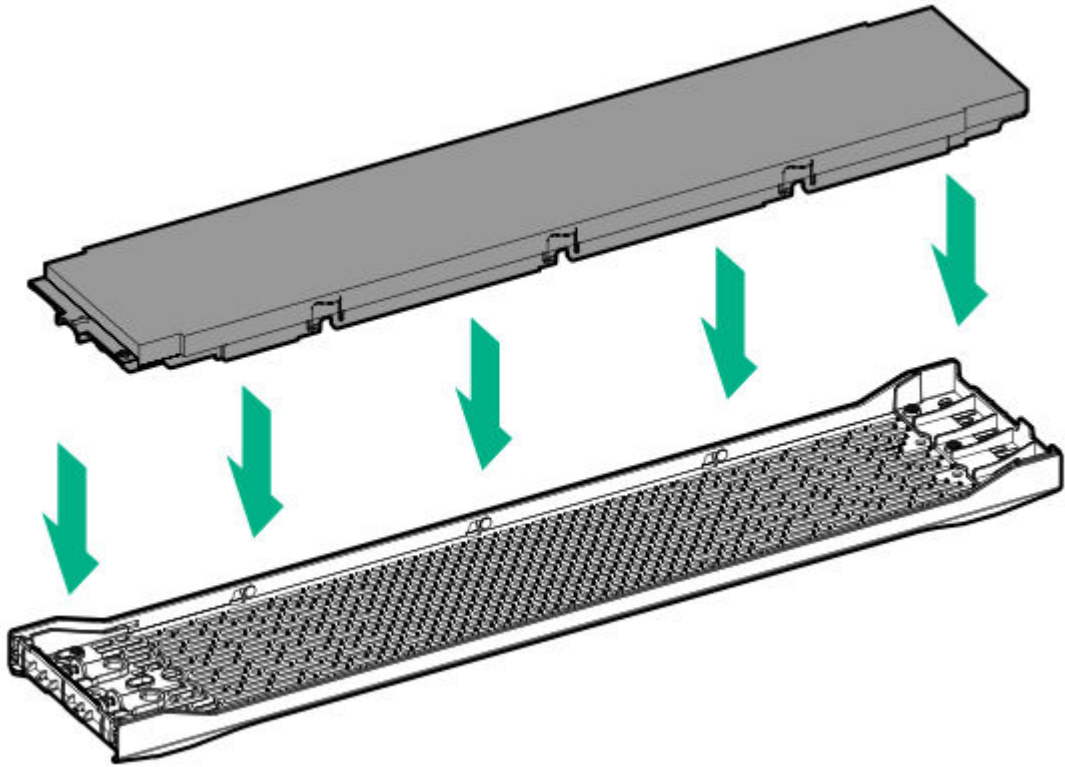


# Installing the bezel and bezel lock


## About this task

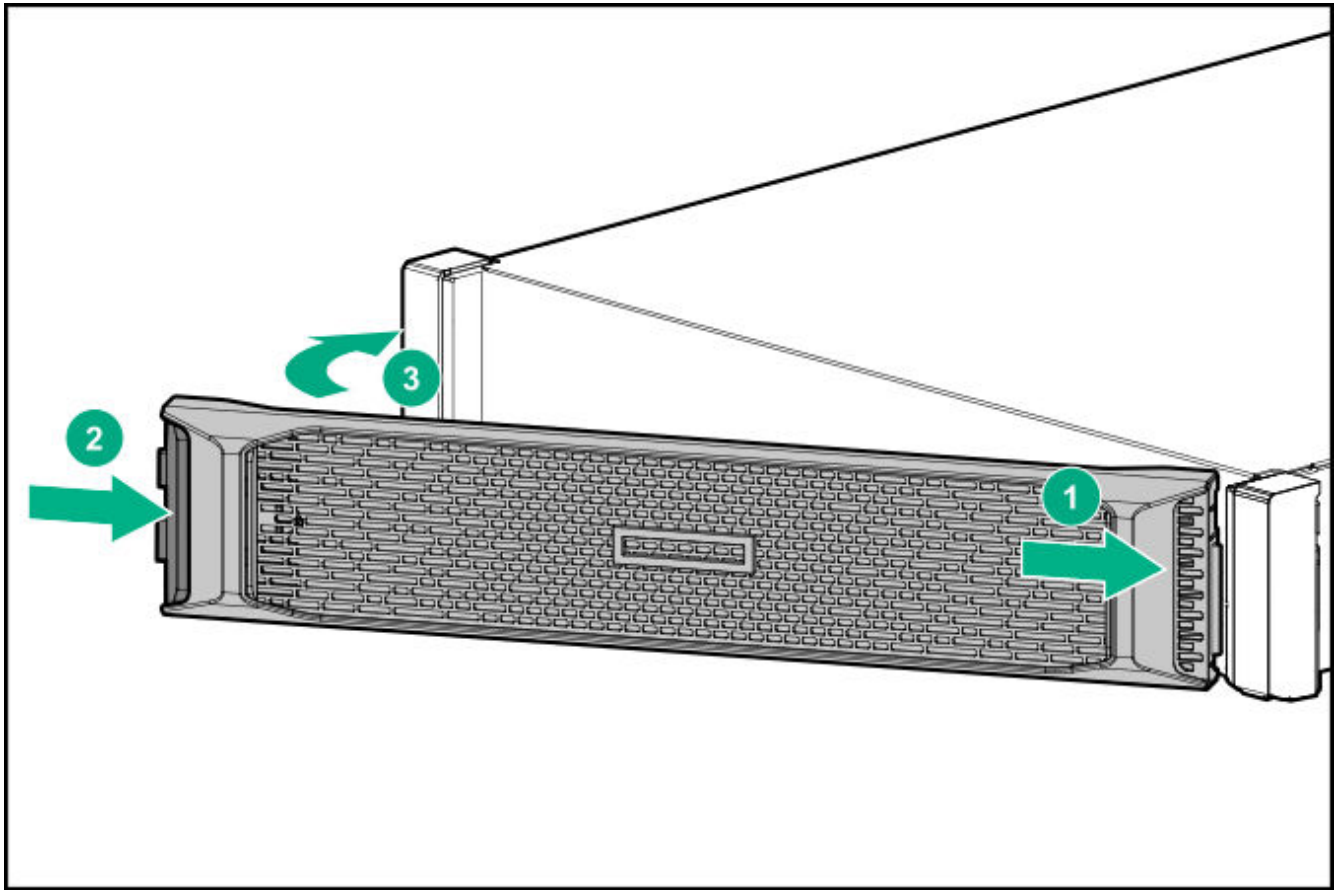




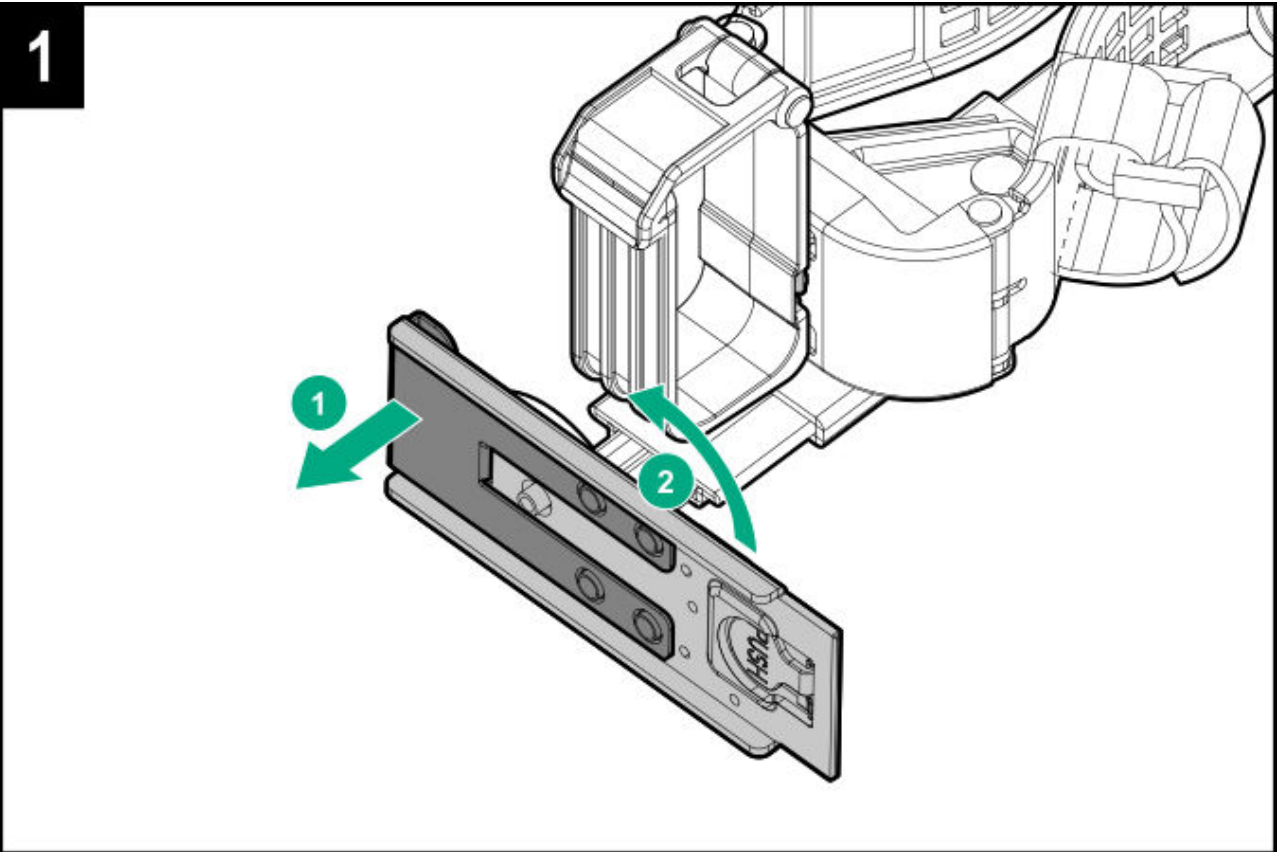


2. Install the cable management arm.

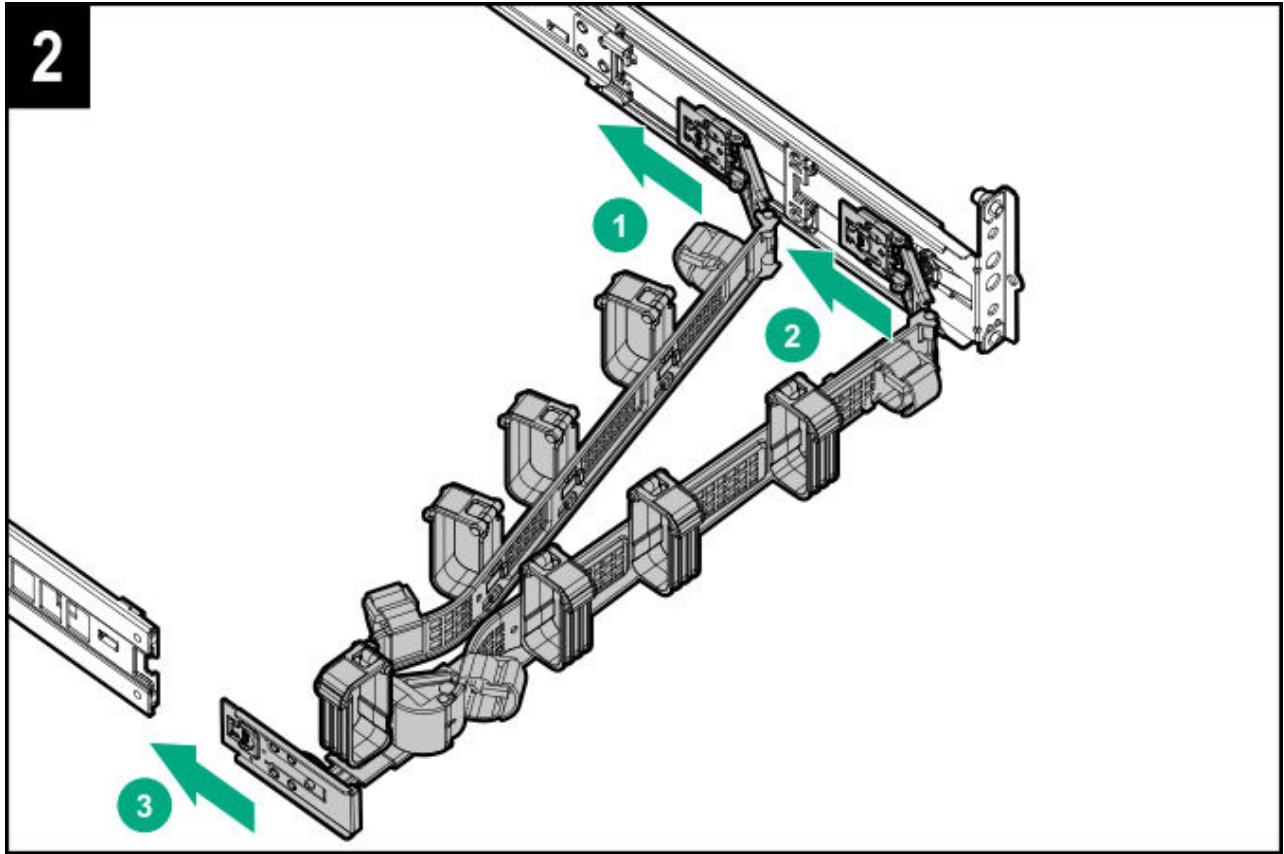

3. Open the cable baskets.

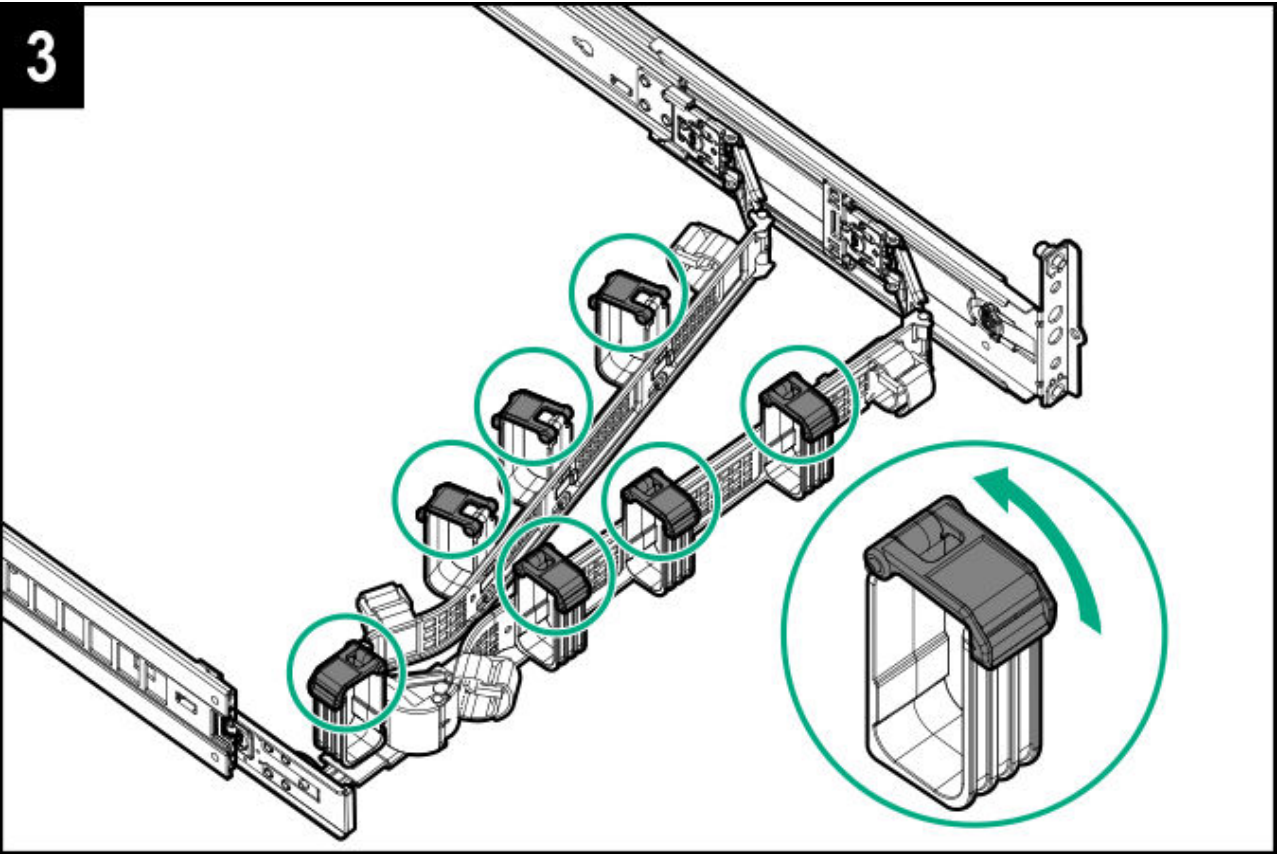

4. Install the cables.

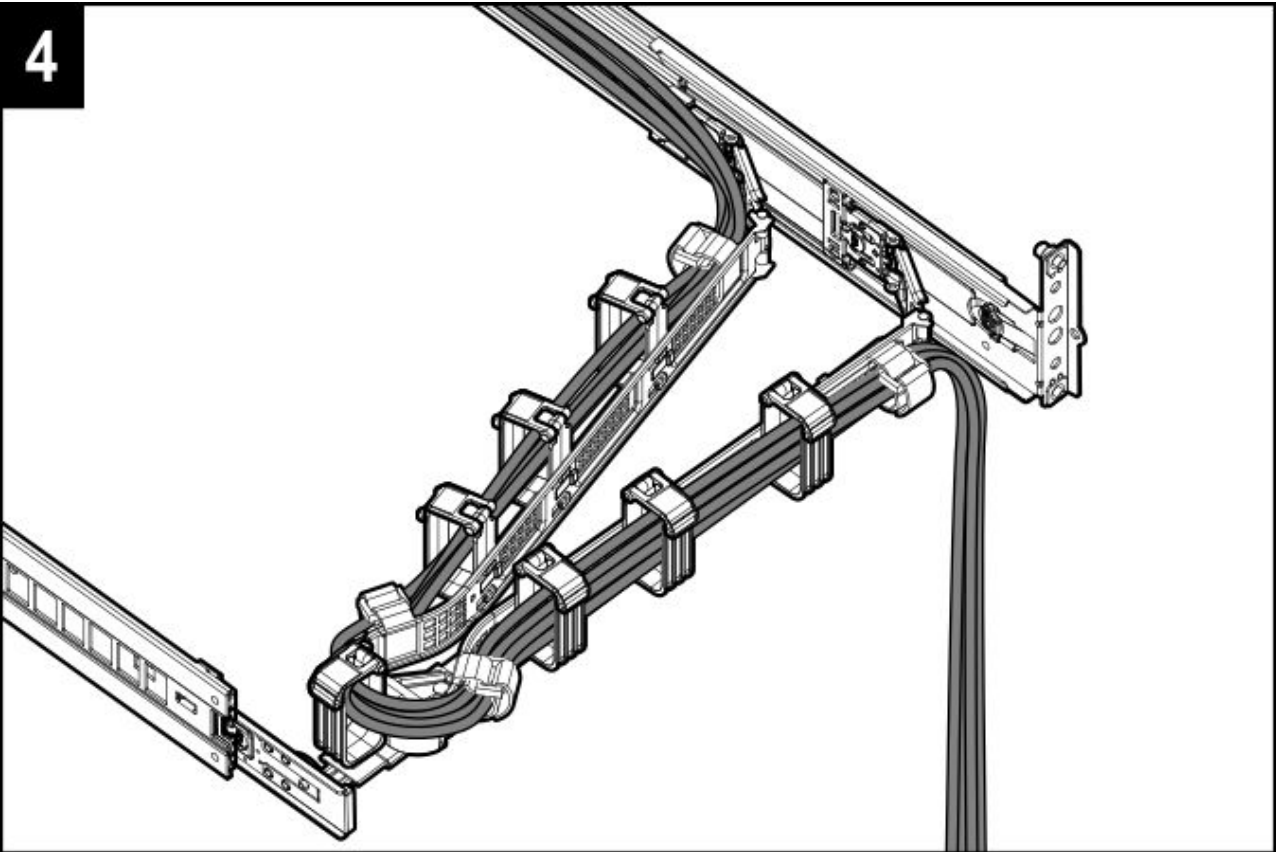

## Results

To replace the component, reverse the removal procedure.

## Power supply options

### Subtopics

[Hot-plug power supply calculations](#)

[Installing a redundant hot-plug power supply](#)

[Installing the HPE 800 W Flex Slot -48 VDC hot-plug power supply](#)

[Installing the HPE 1600 W Flex Slot -48 VDC hot-plug power supply](#)

[Connecting a DC power cable to a DC power source](#)

# Hot-plug power supply calculations

For hot-plug power supply specifications and calculators to determine electrical and heat loading for the server, see the Hewlett Packard Enterprise Power Advisor website (<https://www.hpe.com/info/poweradvisor/online>).

## Installing a redundant hot-plug power supply

### About this task

**CAUTION:**

All power supplies installed in the server must have the same output power capacity. Verify that all power supplies have the same part number and label color. The system becomes unstable and might shut down if it detects different power supplies.

**CAUTION:**


To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

### Procedure


1. [Release the cable management arm to access the rear panel](#)
2. Remove the blank.

**WARNING:**

To reduce the risk of personal injury from hot surfaces, allow the power supply or power supply blank to cool before touching it.

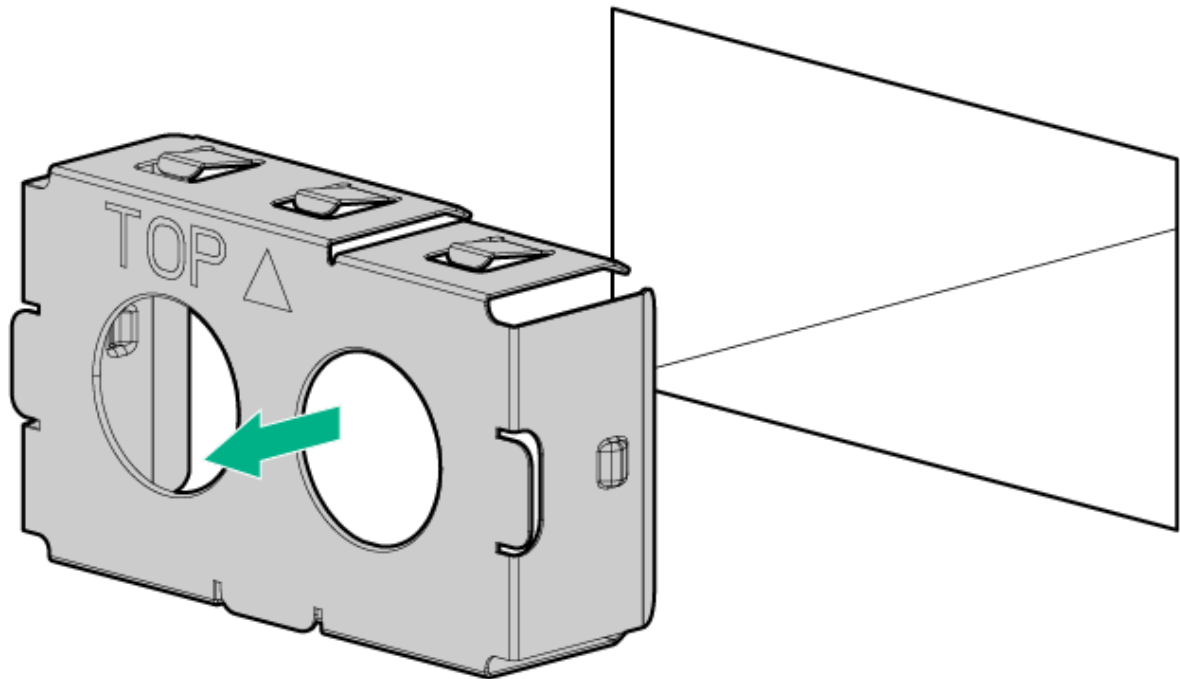

3. Insert the power supply into the power supply bay until it clicks into place.

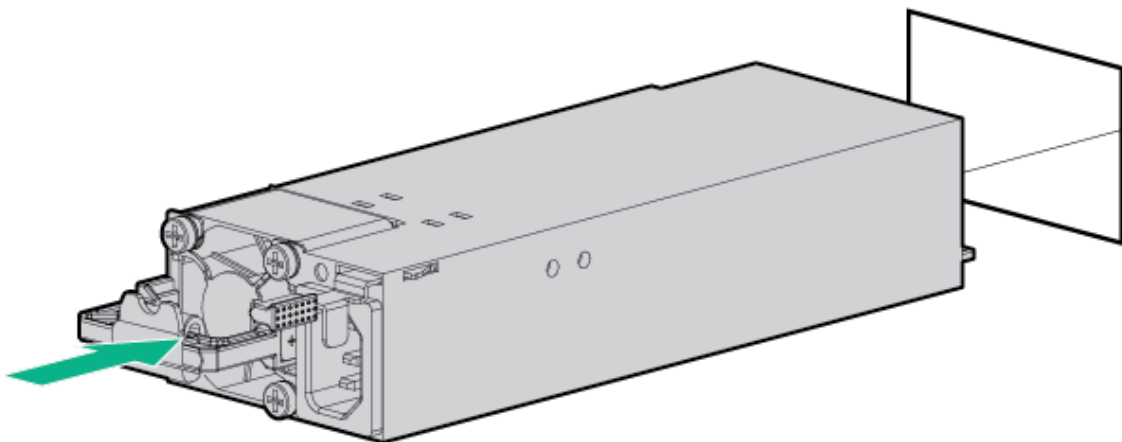

4. Connect the power cord to the power supply.

5. Secure the power cord in the strain relief strap attached to the power supply handle:


- a. Unwrap the strain relief strap from the power supply handle.



**CAUTION:** Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.

- b. Secure the power cord with the strain relief strap.

Roll the extra length of the strap around the power supply handle.

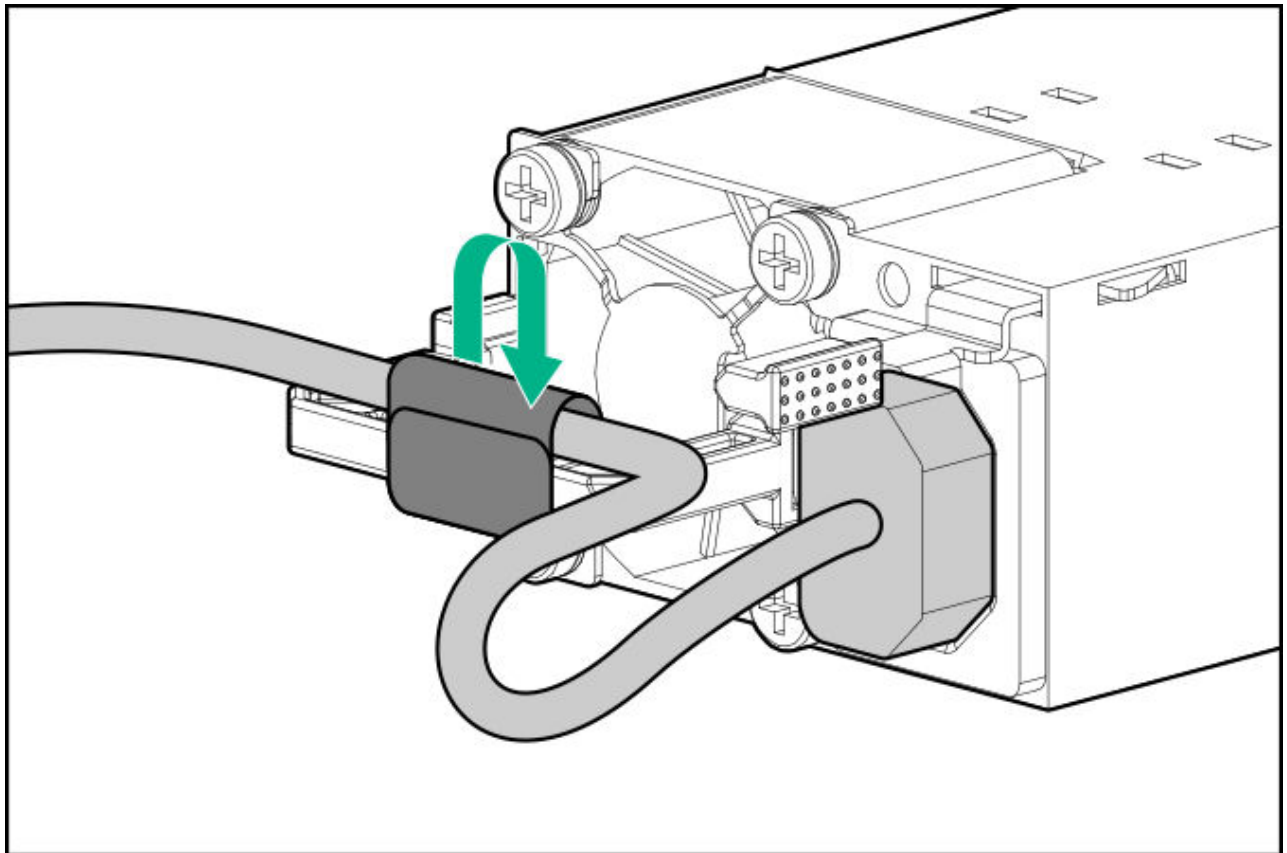

6. Connect the power cord to the power source.
7. Observe the power supply LED.

## Installing the HPE 800 W Flex Slot -48 VDC hot-plug power supply

### Prerequisites

Before you install this option, make sure that you have the following items available:

- No. 1 Phillips screwdriver
- Optional Q0H80A HPE 800W DC Power Cable Kit can be purchased from an HPE authorized reseller.
- If you are not using an input power cord option, the power supply cabling must be made in consultation with a licensed electrician and be compliant with local code.
- If you are replacing the factory installed ground lug, use the KST RNB5-5 crimp terminal ring or equivalent. Use an M5-0.80 x 8 screw to attach the ground lug to the power supply.

**About this task**

The DC power supply option kits do not ship with a Power Supply DC cable Kit and may not include a Power Supply Cable Lug kit. The optional DC Cable kit or the optional DC Cable Lug Kit may be purchased

directly from Hewlett Packard Enterprise or an authorized HPE reseller. For additional information, refer to the power supply QuickSpecs at <https://www.hpe.com/info/fsp-sqs>.




**WARNING:**

To reduce the risk of electric shock, fire, and damage to the equipment, you must install this product in accordance with the following guidelines:


- The HPE 800 W Flex Slot -48 VDC hot-plug power supply is intended only for installation in Hewlett Packard Enterprise servers located in a restricted access location.
- The HPE 800 W Flex Slot -48 VDC hot-plug power supply is not intended for direct connection to the DC supply branch circuit. Only connect this power supply to a power distribution unit (PDU) that provides an independent overcurrent-protected output for each DC power supply. Each output overcurrent-protected device in the PDU must be suitable for interrupting fault current available from the DC power source and must be rated no more than 30 A.
- The PDU output must have a shut-off switch or a circuit breaker to disconnect power for each power supply. To completely remove power from the power supply, disconnect power at the PDU. Disconnect the power for each power supply, if there are multiple power supplies.
- In accordance with applicable national requirements for Information Technology Equipment and Telecommunications Equipment, this power supply only connects to DC power sources that are classified as SELV or TNV. Generally, these requirements are based on the International Standard for Information Technology Equipment, IEC 60950-1/IEC 62368-1. In accordance with local and regional electric codes and regulations, the DC source must have one pole (Neutral/Return) reliably connected to earth ground.
- You must connect the power supply ground screw located on the front of the power supply to a suitable ground (earth) terminal. In accordance with local and regional electric codes and regulations, this terminal must be connected to a suitable building ground (earth) terminal. Do not rely on the rack or cabinet chassis to provide adequate ground (earth) continuity.

## Procedure


1. Remove the power supply blank.

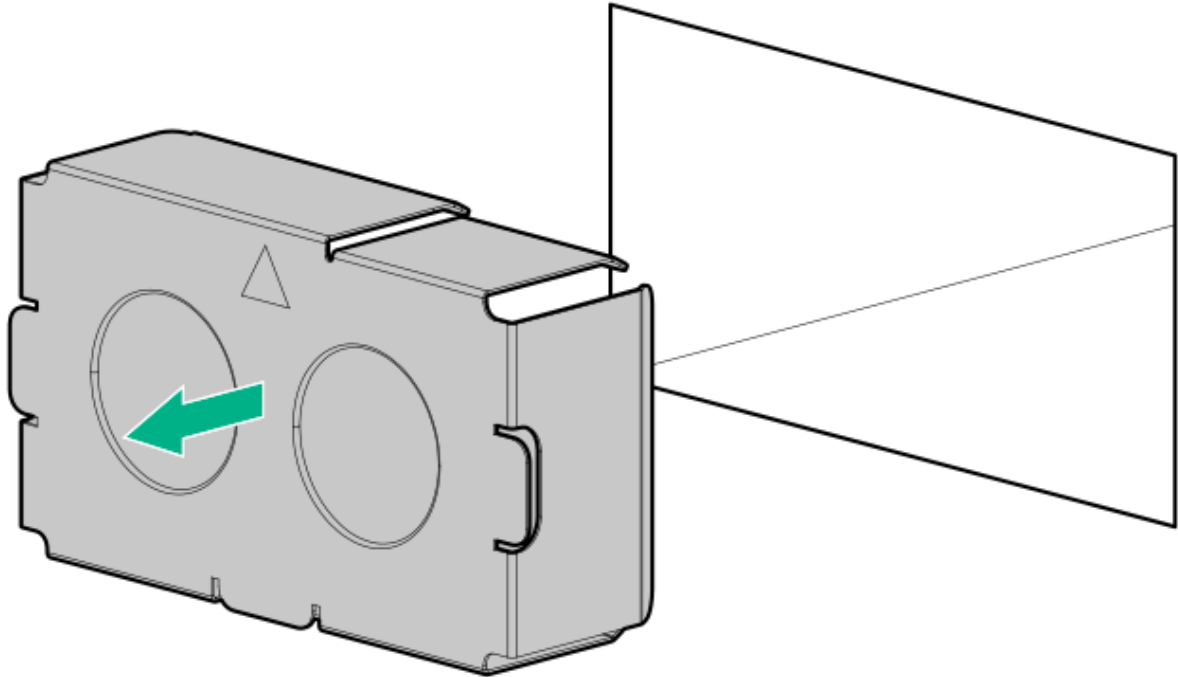


2. Remove the ring tongue.

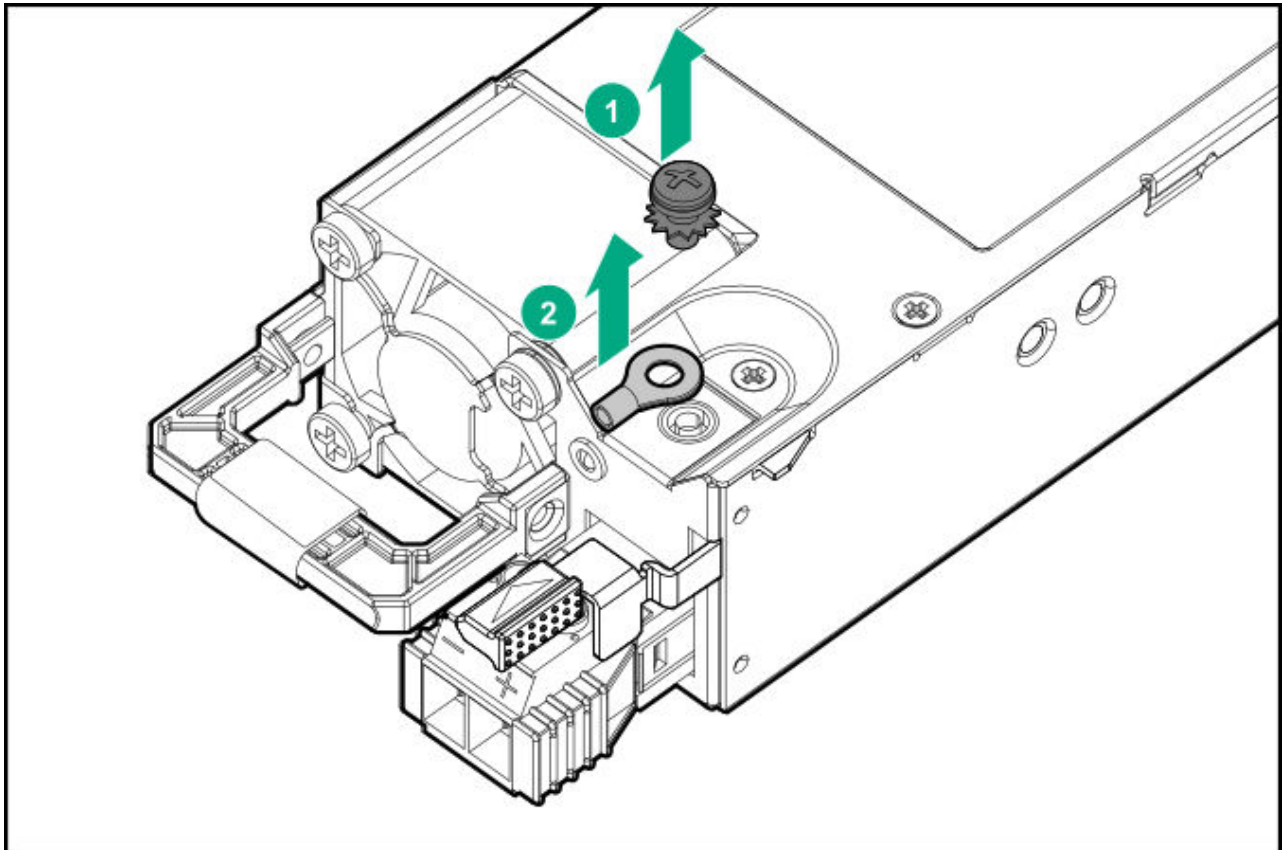


3. Crimp the ring tongue to the ground cable from the -48 V DC power source.

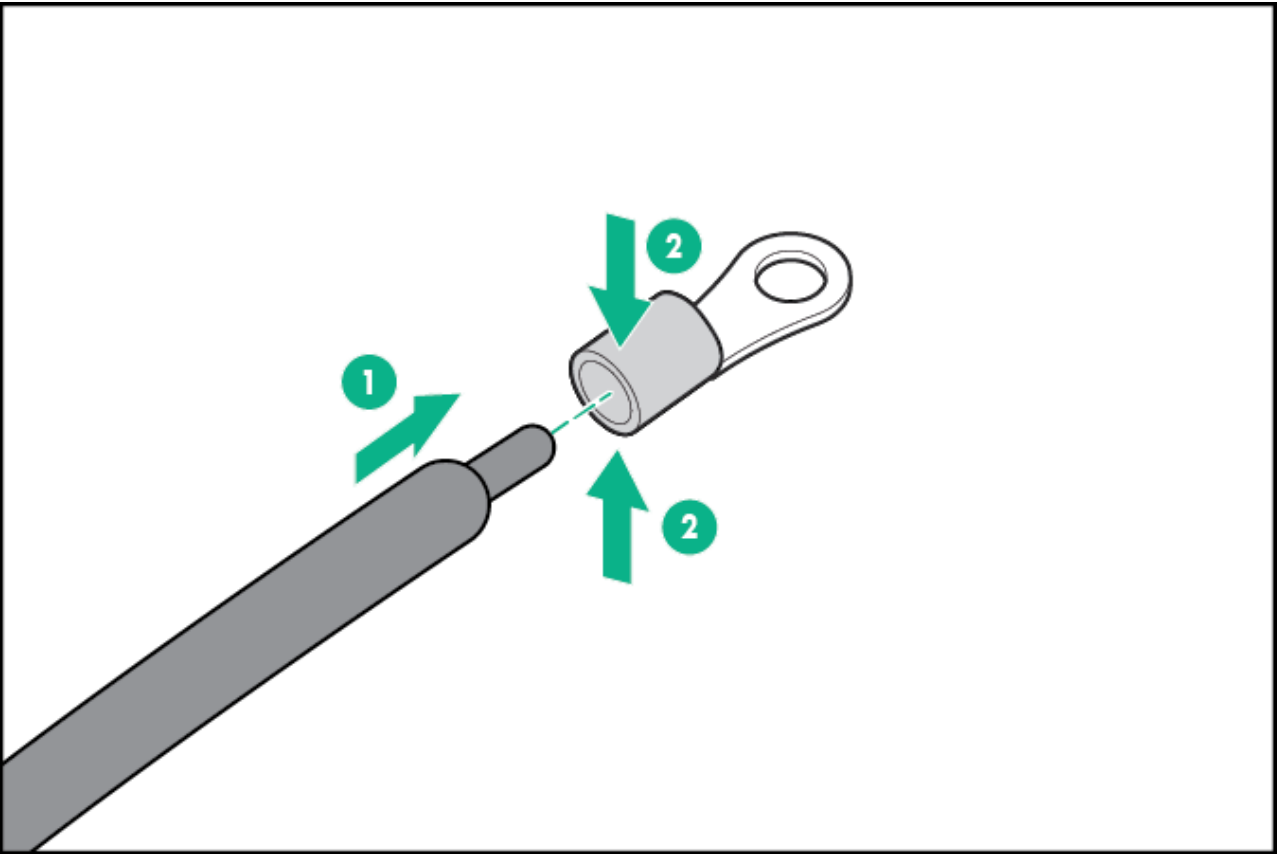


4. Remove the terminal block connector.

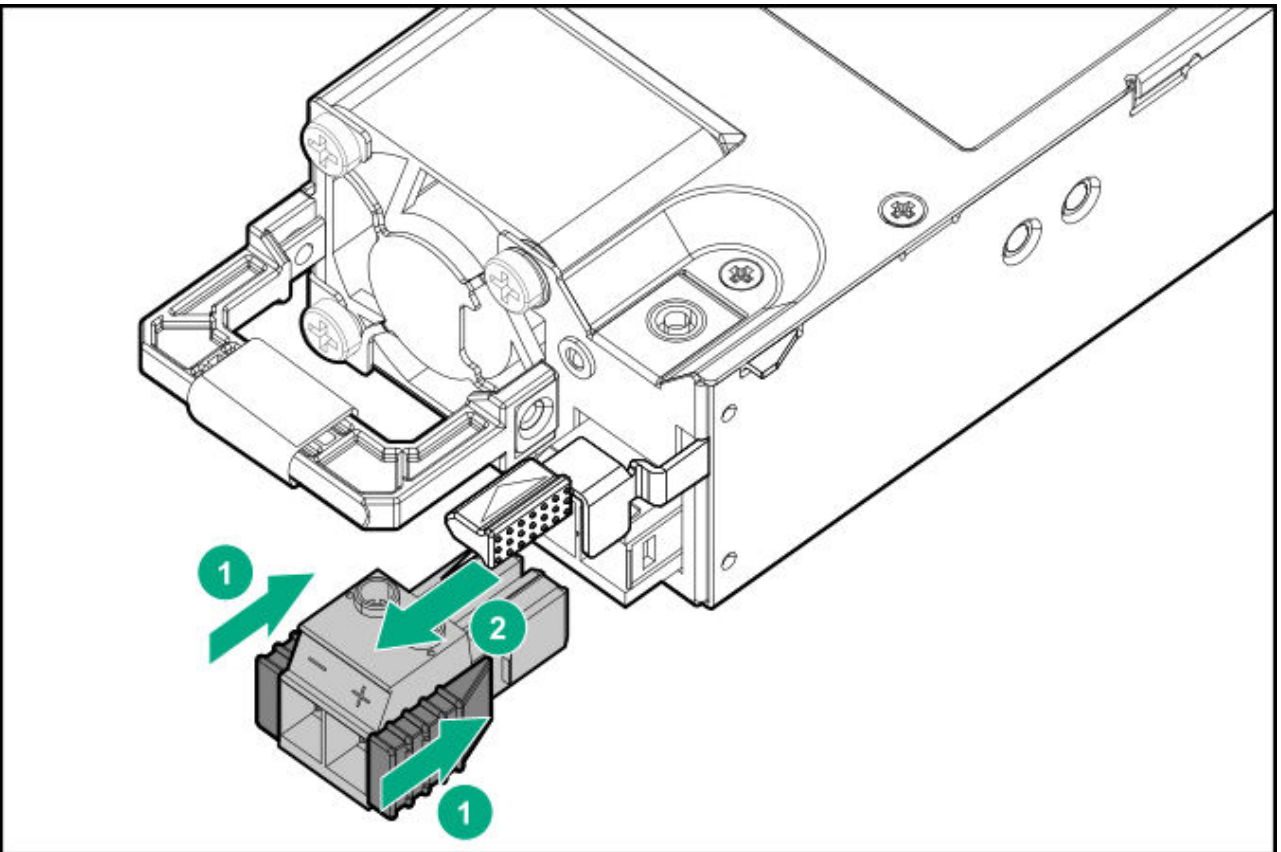


5. Loosen the screws on the terminal block connector.

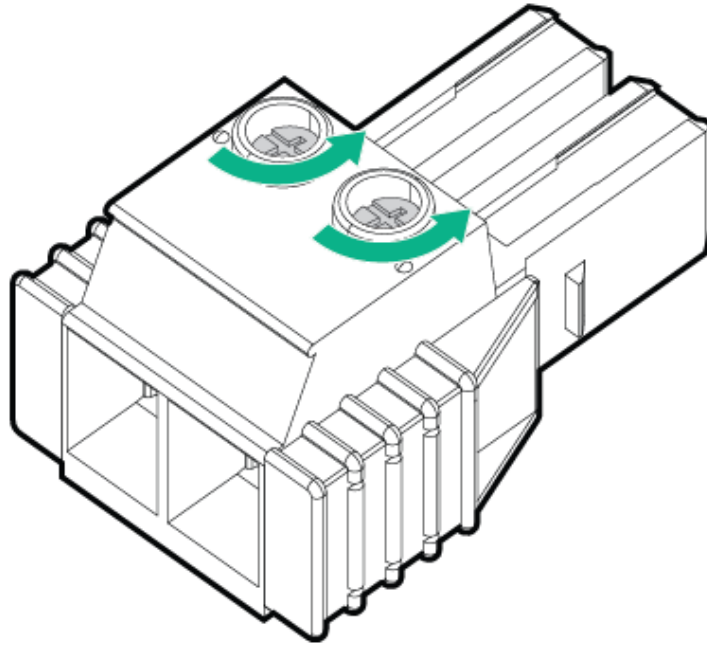


6. Attach the ground (earthed) wire to the ground screw and washer and tighten to 1.47 N m (13 lb-in) of torque. The ground wire must be connected before the -48 V wire and the return wire.

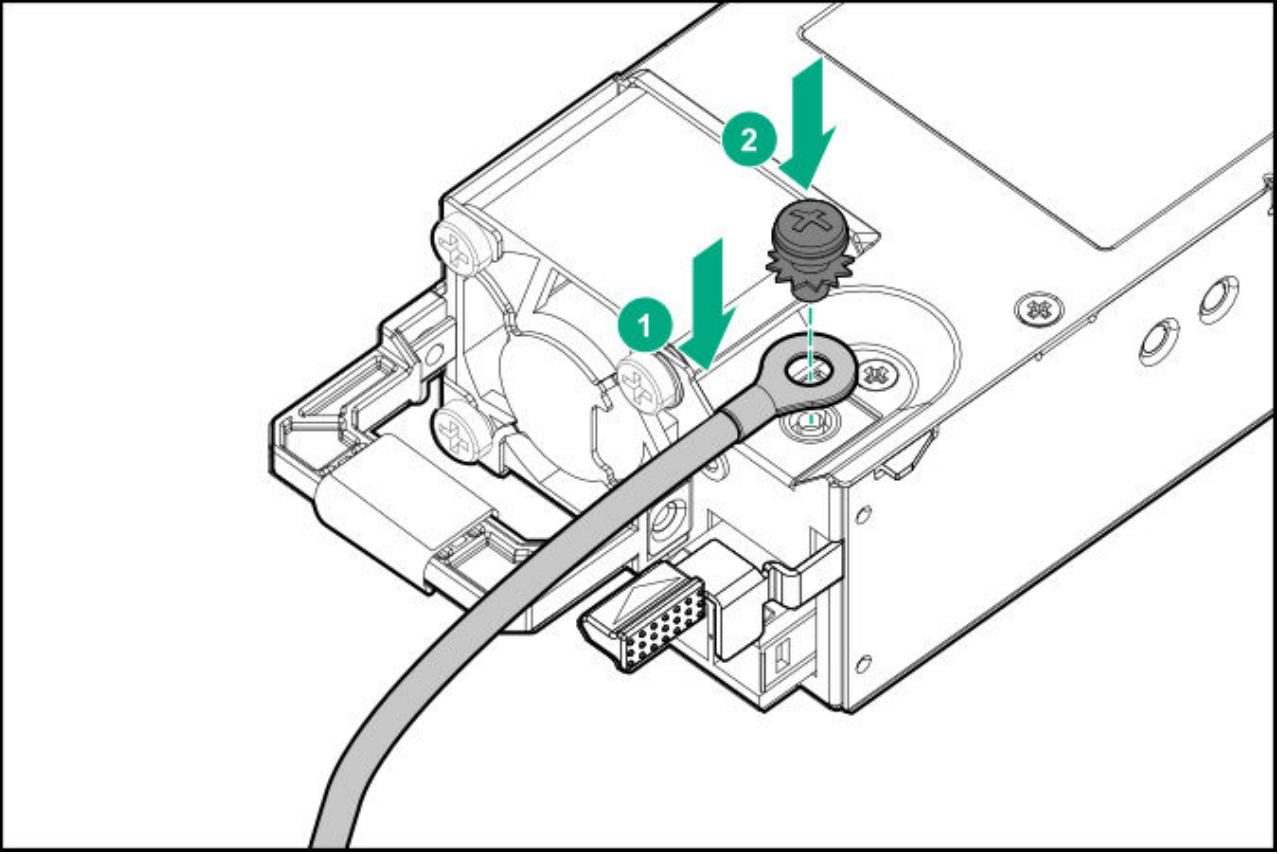


7. Insert the -48 V wire into the left side of the terminal block connector, and then tighten the screw to 1.3 N m (10 lb-in) of torque.

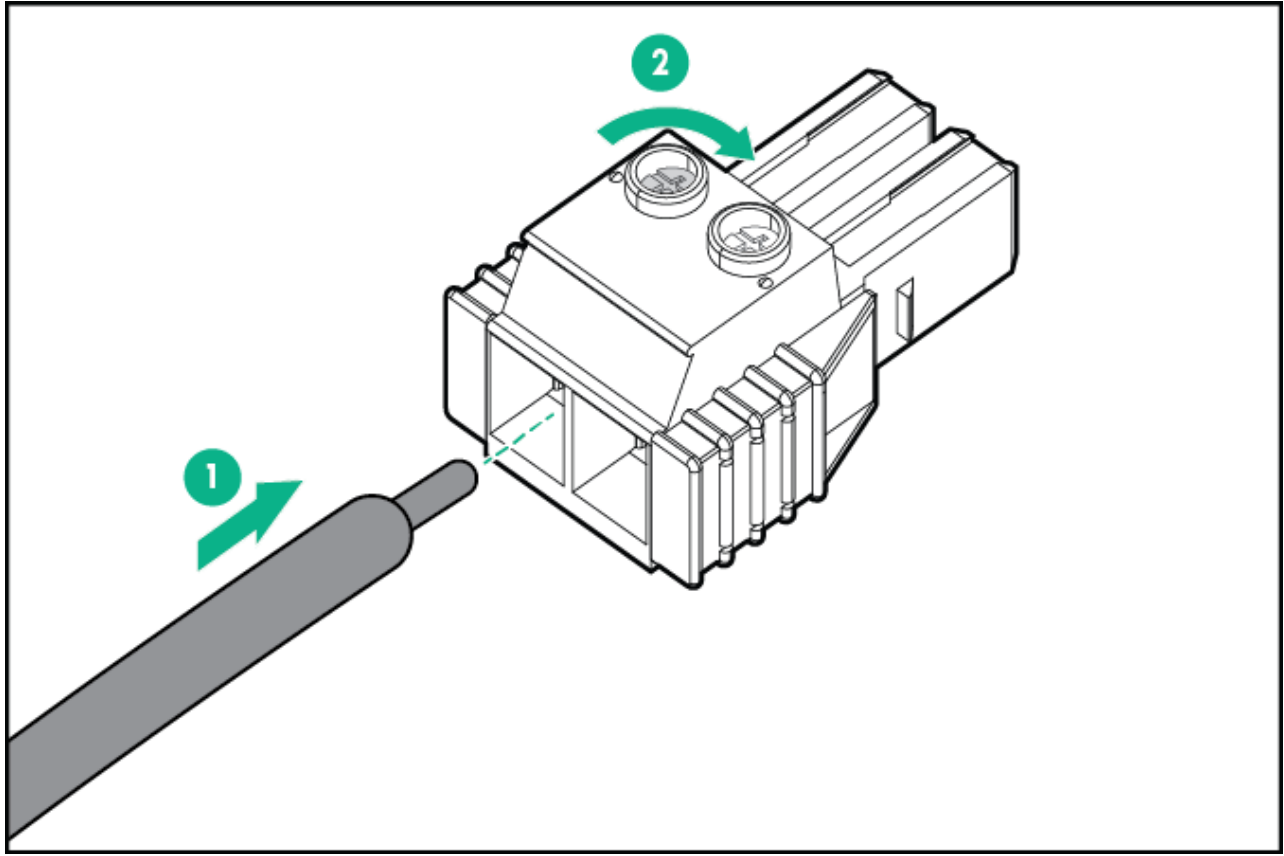

8. Insert the return wire into the right side of the connector, and then tighten the screw to 1.3 N m (10 lb-in) of torque.

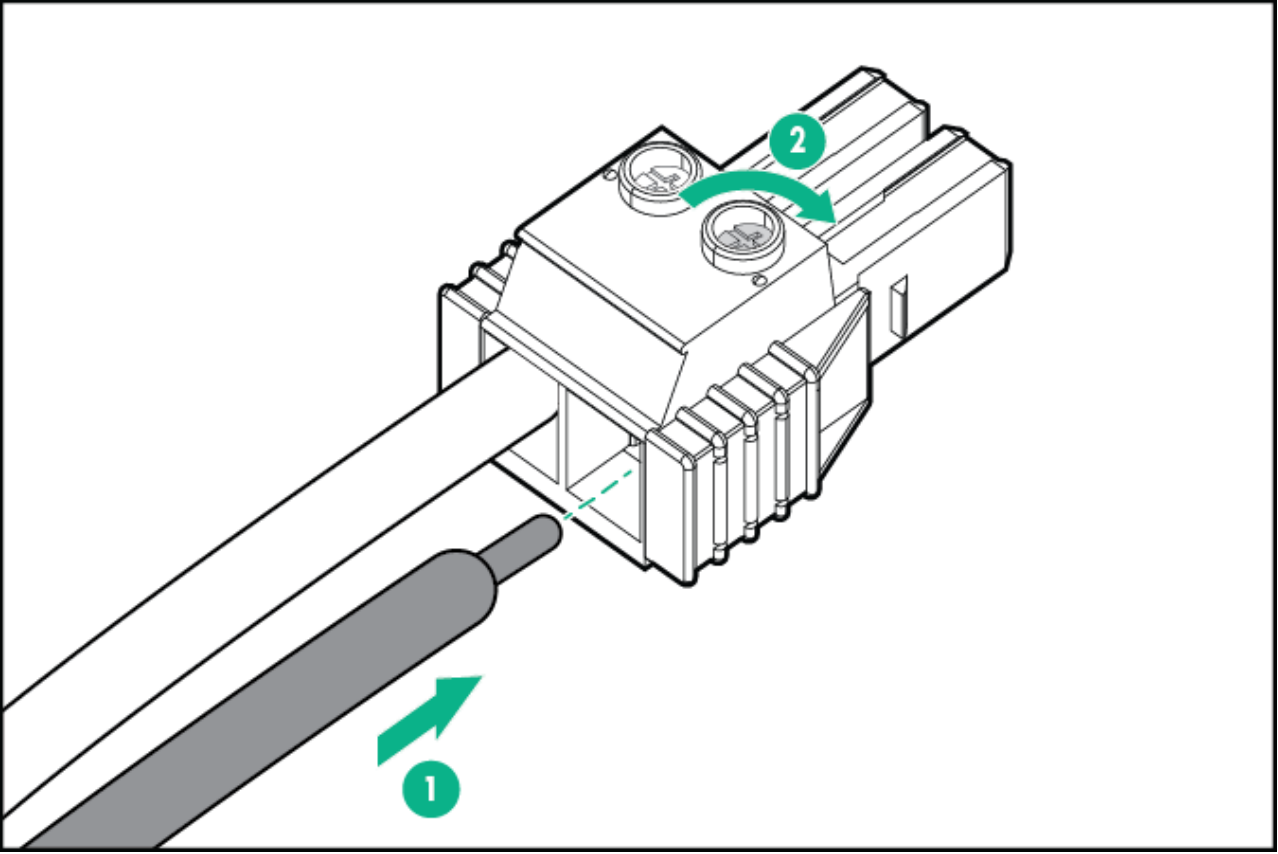

9. Install the terminal block connector into the power supply.

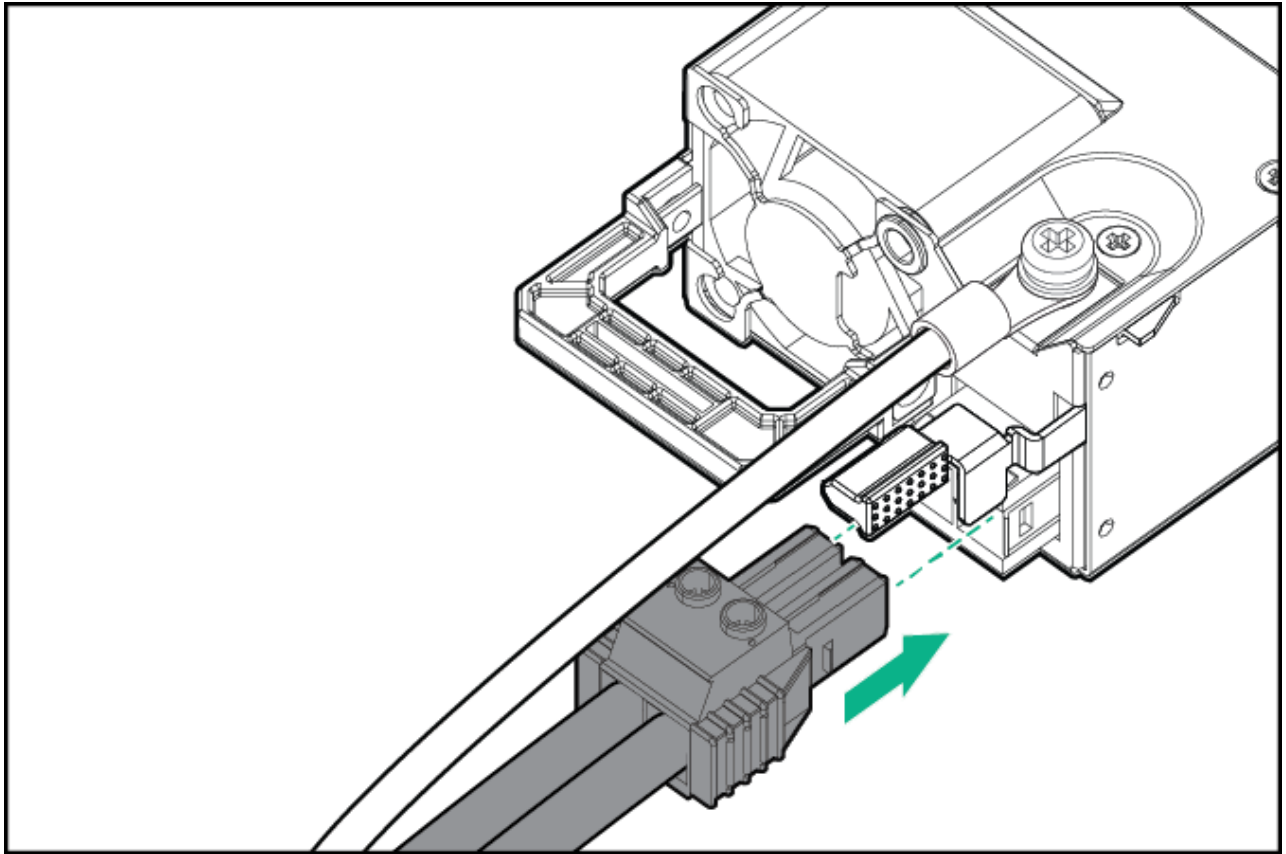


10. Secure the power cord, wires, and/or cables in the strain relief strap attached to the power supply handle:
  - a. Unwrap the strain relief strap from the power supply handle.




**CAUTION:** Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.

- b. Secure the power cord, wires, and cables with the strain relief strap. Roll the extra length of the strap around the power supply handle.

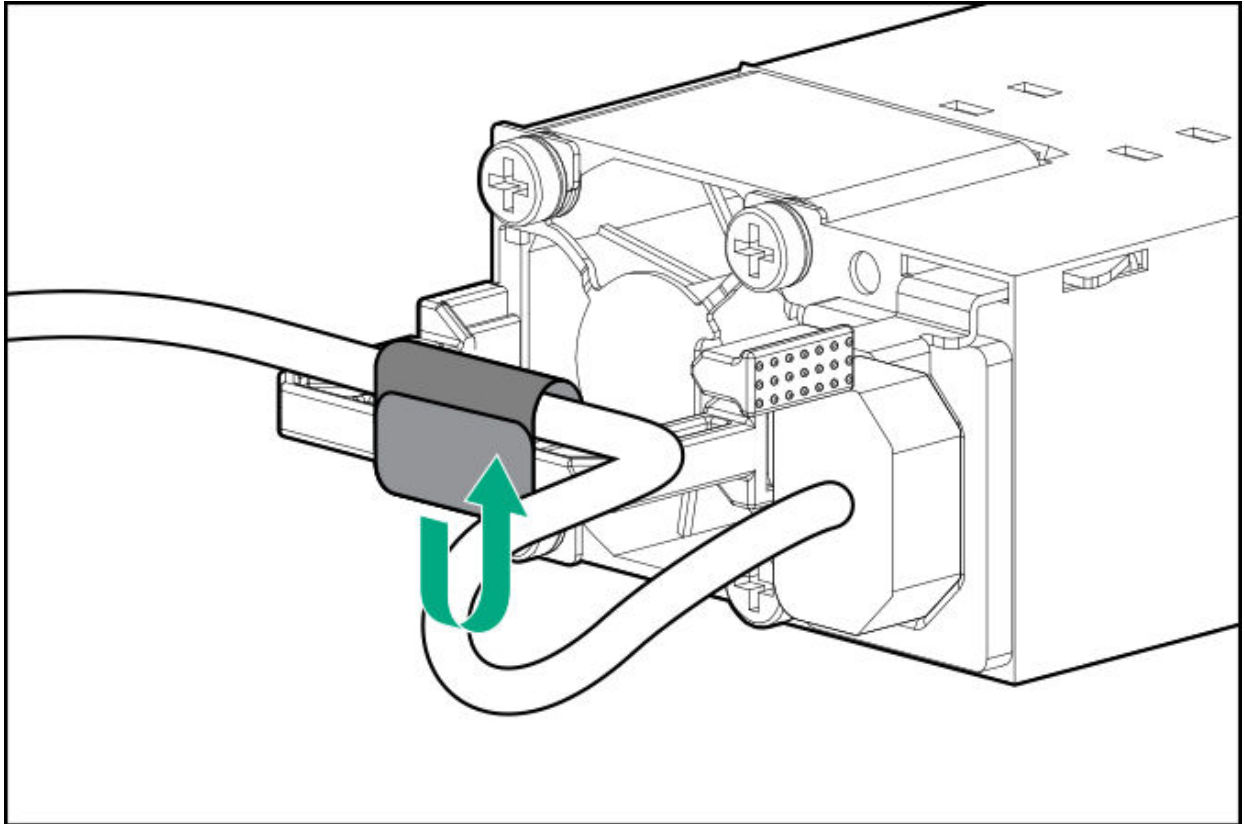

- .1. Slide the power supply into the bay until it clicks into place.

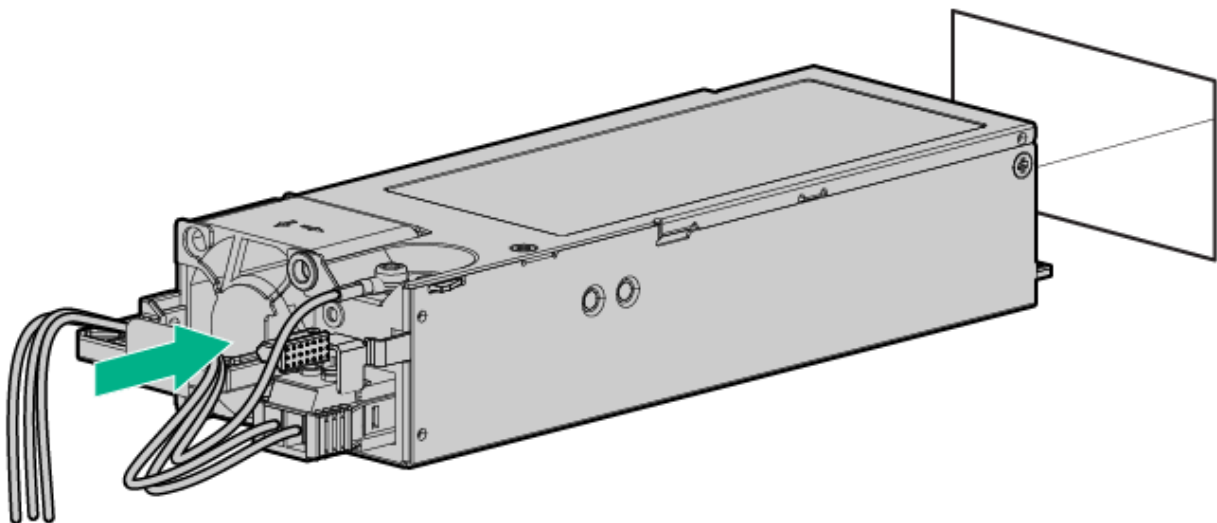

- .2. Make sure the -48 V DC power source is off or the PDU breaker is in the off position, and then connect the power cord to the -48 V DC power source or PDU.
- .3. To supply -48 V to the power supply, turn on the -48 V power source or switch the PDU breaker to the on position.

.4. Be sure that the power supply LED is green.

## Installing the HPE 1600 W Flex Slot -48 VDC hot-plug power supply

### Prerequisites

Before you install this option, make sure that you have the following items available:

- No. 1 Phillips screwdriver
- If you are not using an input power cord option, the power supply cabling must be made in consultation with a licensed electrician and be compliant with local code.
- Optional P36877-B21 HPE lug kit can be purchased from an HPE authorized reseller for use with customer-supplied power cables. (The power cable and lug kit listed below can only be used with the 1600 W -48 VDC power supply.)
- If you are using an input power cord option, the P22173-B21 HPE 1600 W DC PSU power cable kit can be purchased from an authorized HPE reseller. (The power cable and lug kit listed below can only be used with the 1600 W -48 VDC power supply.)

### 1600 W -48VDC power cable color codes

Cable color	Description
Black	Positive return
Red	Negative input voltage
Green/yellow	Safety ground

### About this task

The DC power supply option kits do not ship with a Power Supply DC cable Kit and may not include a Power Supply Cable Lug kit. The optional DC Cable kit or the optional DC Cable Lug Kit may be purchased

directly from Hewlett Packard Enterprise or an authorized HPE reseller. For additional information, refer to the power supply QuickSpecs at <https://www.hpe.com/info/fsps-qs>.




**WARNING:**

To reduce the risk of electric shock, fire, and damage to the equipment, you must install this product in accordance with the following guidelines:


- The HPE 1600 W Flex Slot -48 VDC hot-plug power supply is intended only for installation in Hewlett Packard Enterprise servers located in a restricted access location.
- The HPE 1600 W Flex Slot -48 VDC hot-plug power supply is not intended for direct connection to the DC supply branch circuit. Only connect this power supply to a power distribution unit (PDU) that provides an independent overcurrent-protected output for each DC power supply. Each output overcurrent-protected device in the PDU must be suitable for interrupting fault current available from the DC power source and must be rated no more than 45 A.
- The PDU output must have a shut-off switch or a circuit breaker to disconnect power for each power supply. To completely remove power from the power supply, disconnect power at the PDU. The end product may have multiple power supplies. To remove all power from the product, disconnect the power for each power supply.
- In accordance with applicable national requirements for Information Technology Equipment and Telecommunications Equipment, this power supply only connects to DC power sources that are classified as SELV or TNV. Generally, these requirements are based on the International Standard for Information Technology Equipment, IEC 60950-1/IEC 62368-1. In accordance with local and regional electric codes and regulations, the DC source must have one pole (Neutral/Return) reliably connected to earth ground.
- You must connect the power supply ground screw located on the front of the power supply to a suitable ground (earth) terminal. In accordance with local and regional electric codes and regulations, this terminal must be connected to a suitable building ground (earth) terminal. Do not rely on the rack or cabinet chassis to provide adequate ground (earth) continuity.

**Procedure**


1. If necessary, remove the power supply blank.

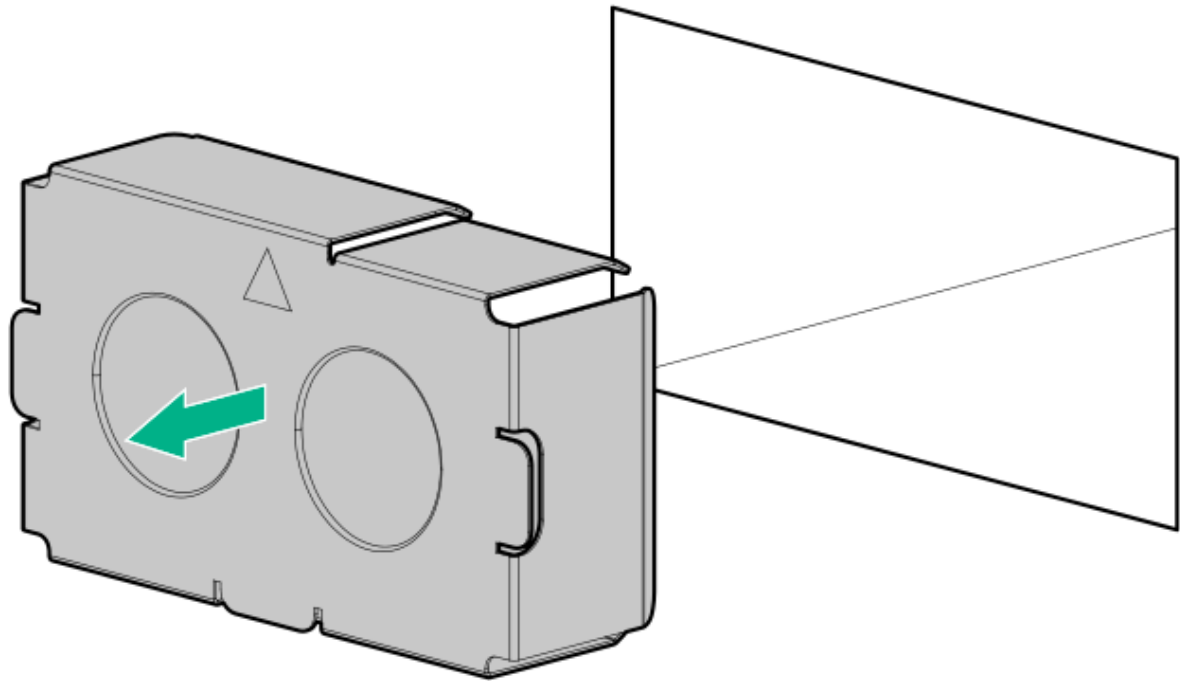


2. Remove the clear plastic cover on the side of the power supply.

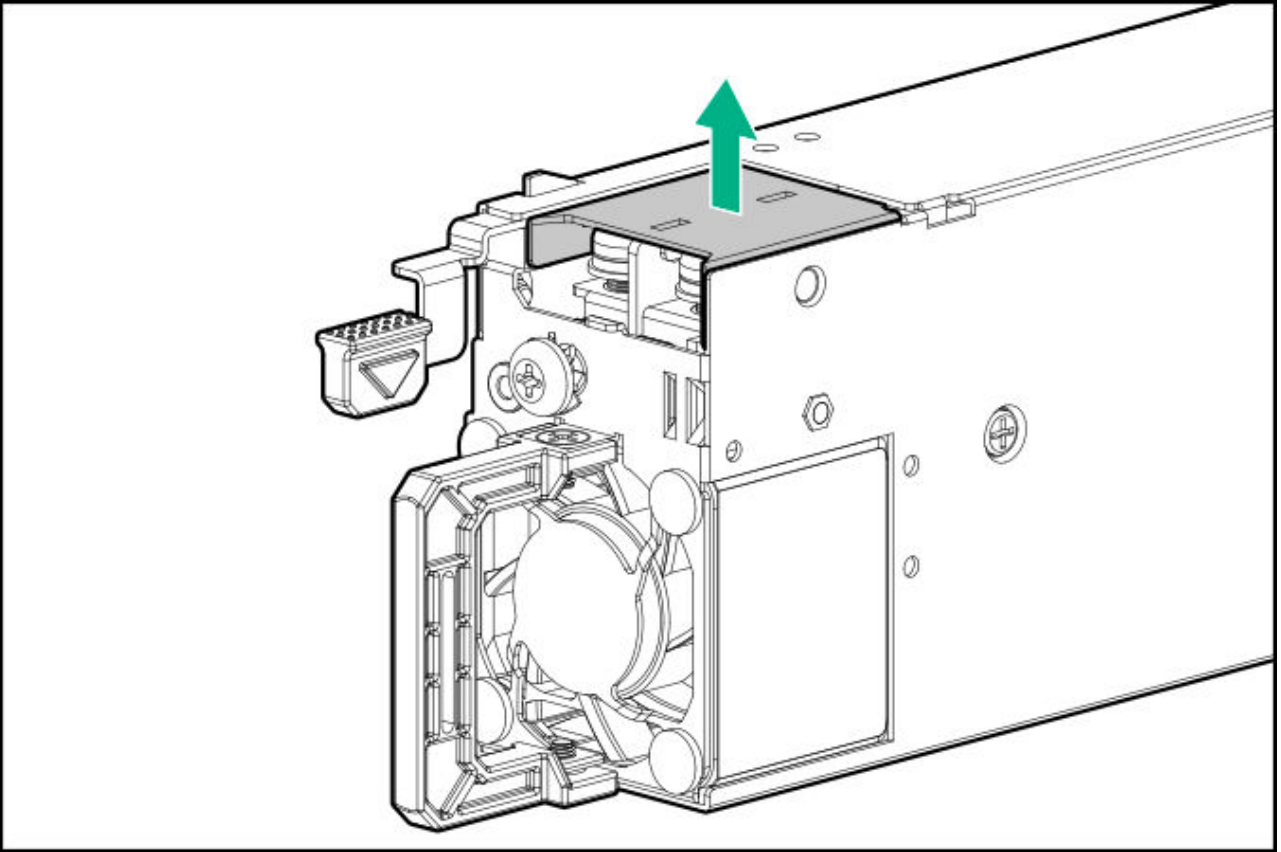


3. Do the following:
  - a. Remove the grounding screw from the front of the power supply.
  - b. Remove the four screws from the -48 V wire and return wire connectors.

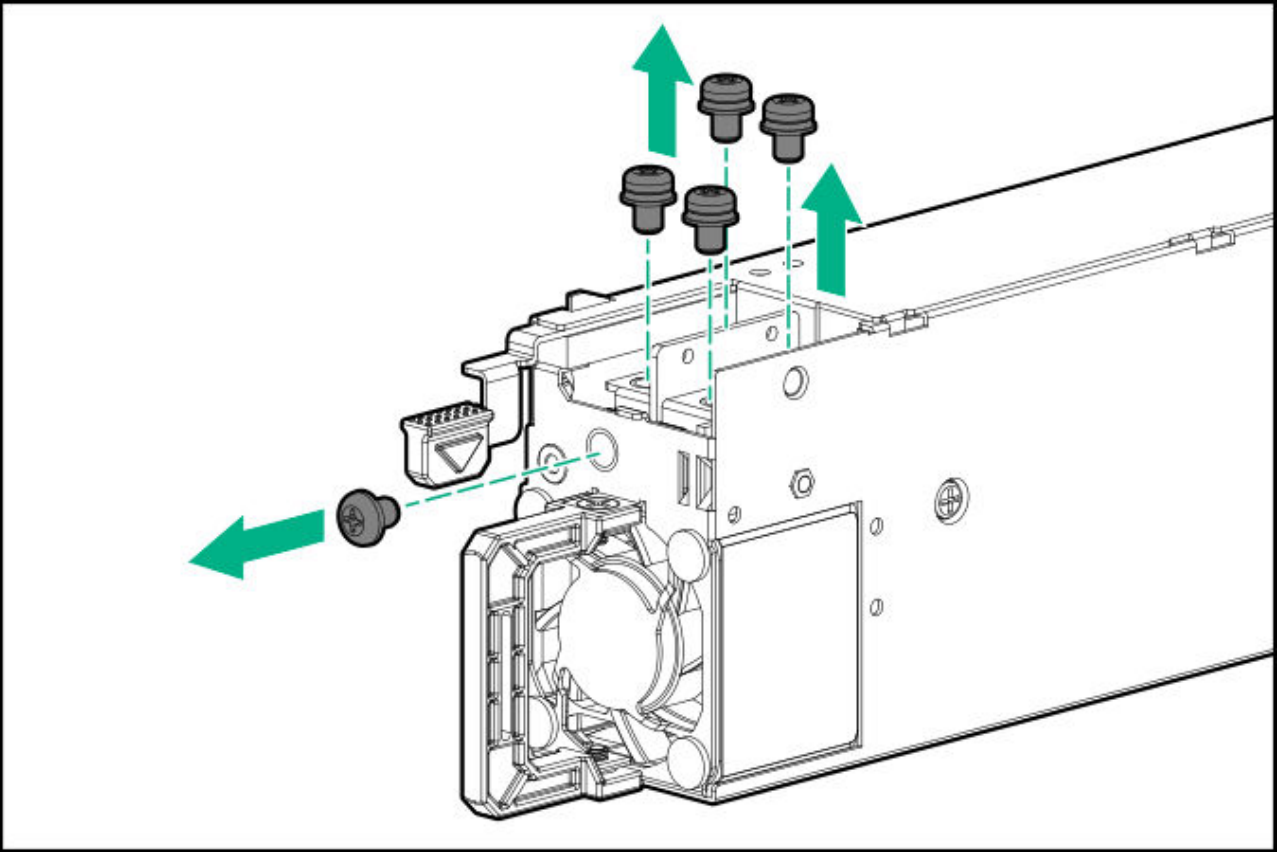

4. Attach the -48 V wire and the return wire to the connectors as marked and tighten to 0.98 N m (8.68 lb-in) of torque.

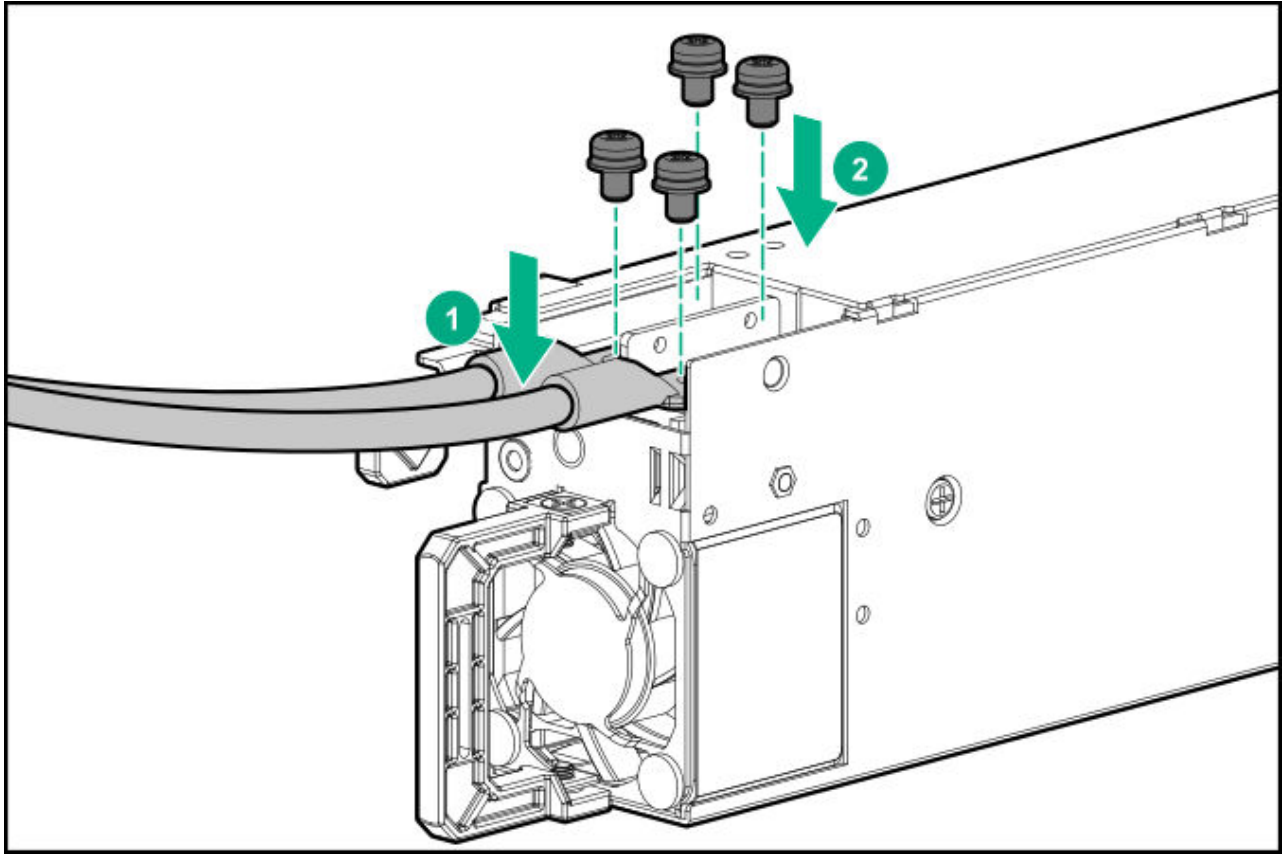

5. Attach the ground (earthed) wire to the ground screw and tighten to 1.47 N m (13 lb-in) of torque.

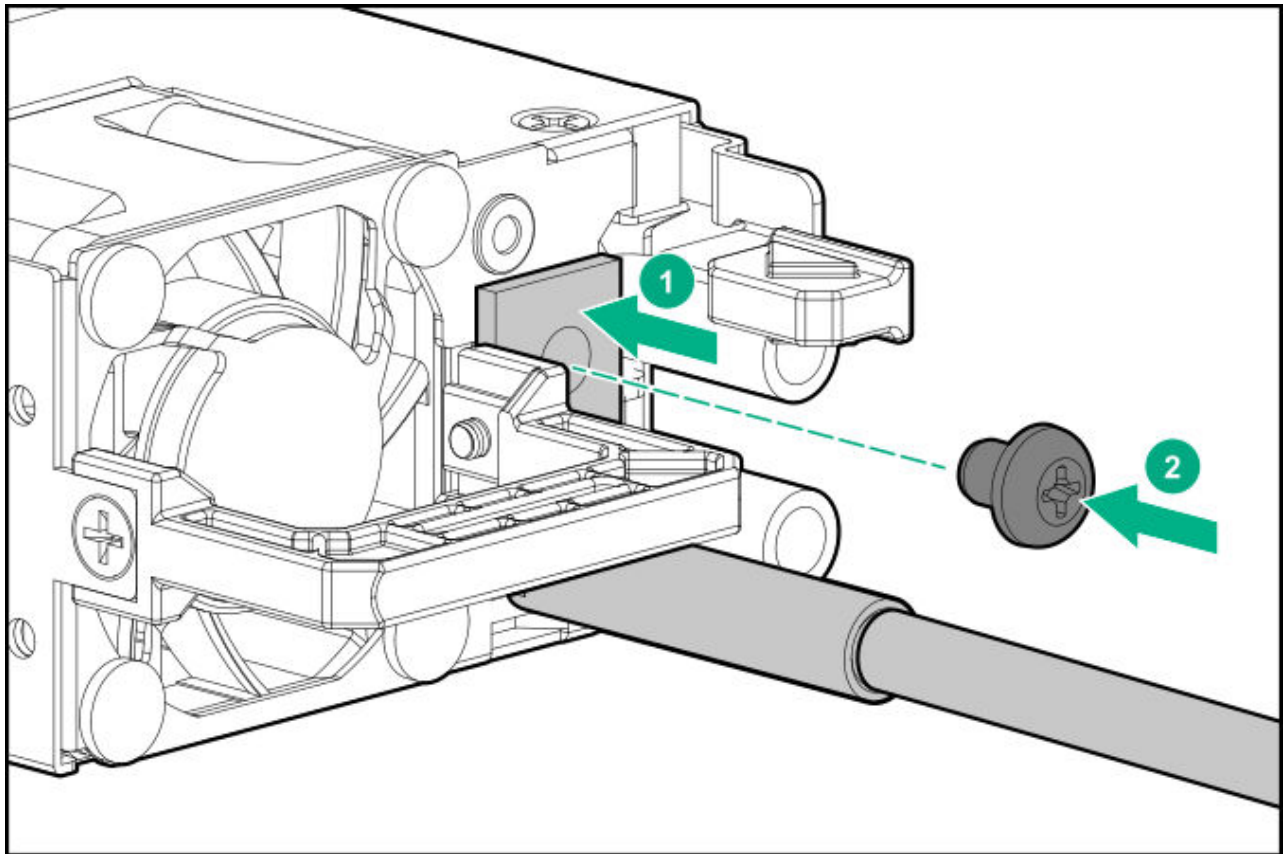


6. Replace the clear plastic cover on the -48 V and return connectors.
7. Secure the power cord, wires, and/or cables in the strain relief strap attached to the power supply handle:
  - a. Unwrap the strain relief strap from the power supply handle.



**CAUTION:** Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.

- b. Secure the wires and cables with the strain relief strap. Roll the extra length of the strap around the power supply handle.

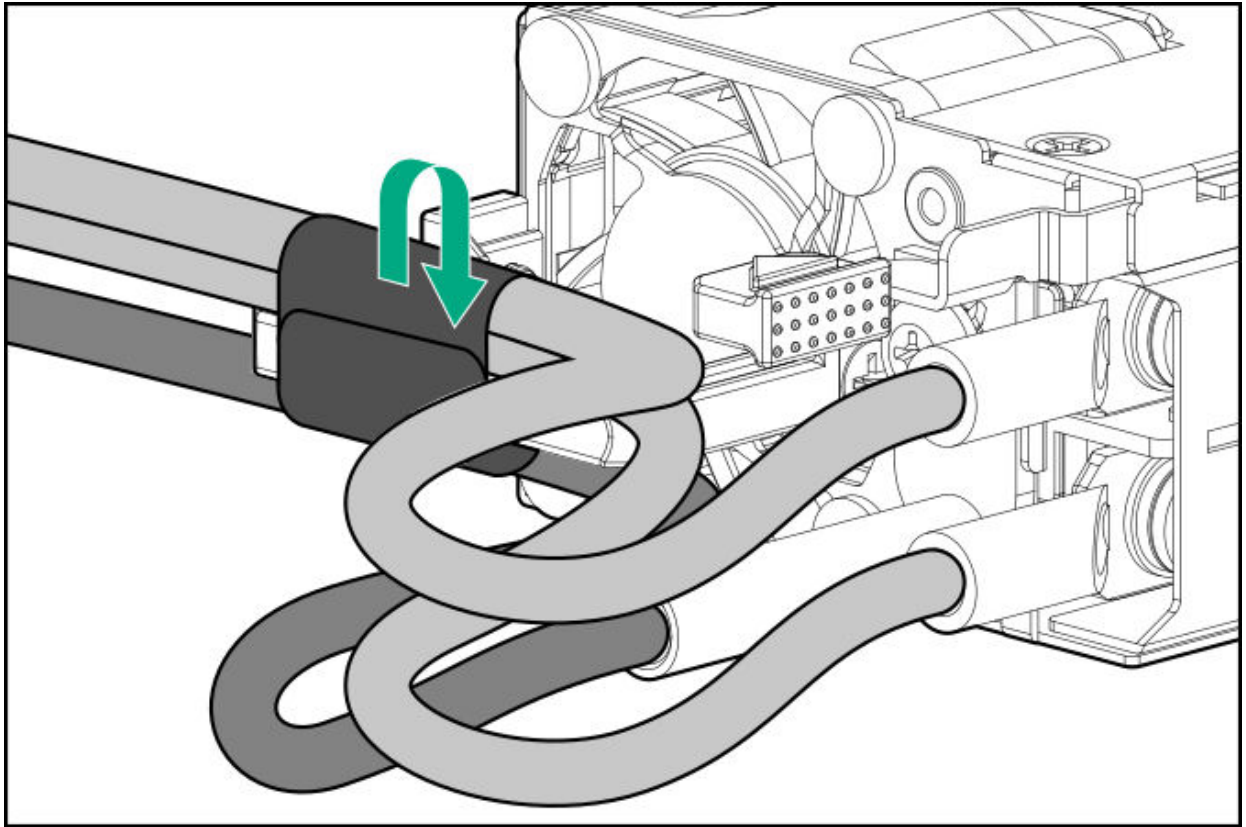

8. Slide the power supply into the bay until it clicks into place.
9. Make sure the -48 VDC power source is off or the PDU breaker is in the off position.
10. Connect the power cord to the -48 VDC power source or PDU.
11. Turn on the -48 V power source or switch the PDU breaker to the on position to supply -48 V to the power supply.
12. Make sure that the power supply LED is green.

# Connecting a DC power cable to a DC power source

## About this task



### **WARNING:**

To reduce the risk of electric shock or energy hazards:

- This equipment must be installed by trained service personnel, as defined by the NEC and IEC 60950-1/IEC 62368-1, the standard for Safety of Information Technology Equipment.
- Connect the equipment to a reliably grounded secondary circuit source. A secondary circuit has no direct connection to a primary circuit and derives its power from a transformer, converter, or equivalent isolation device.
- The overcurrent protection for the DC source must not exceed 45 A.



### **WARNING:**

When installing a DC power supply, the ground wire must be connected before the positive or negative leads.



### **WARNING:**

Remove power from the power supply before performing any installation steps or maintenance on the power supply.



### **CAUTION:**

The server equipment connects the earthed conductor of the DC supply circuit to the earthing conductor at the equipment. For more information, see the documentation that ships with the power supply.



### **CAUTION:**

If a DC connection exists between the earthed conductor of the DC supply circuit and the earthing conductor at the server equipment, the following conditions must be met:

- This equipment must be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode conductor is connected.
- Locate the equipment in the same immediate area (such as adjacent

## Procedure

1. Cut the DC power cord ends no shorter than 150 cm (59.06 in).



### IMPORTANT:

The ring terminals must be UL approved and accommodate 12 gauge wires.



### IMPORTANT:

The minimum nominal thread diameter of a pillar or stud type terminal must be 3.5 mm (0.138 in). The diameter of a screw type terminal must be 5.0 mm (0.197 in).

2. If the power source requires ring tongues, use a crimping tool to install the ring tongues on the power cord wires.
3. Stack each same-colored pair of wires and then attach them to the same power source. The power cord consists of three wires (black, red, and green).

For more information, see the documentation that ships with the power supply.

## Energy pack options

Hewlett Packard Enterprise offers two backup power options to back up write cache content on the controllers in case of an unplanned server power outage.

- [HPE Smart Storage Battery](#)
- [HPE Smart Storage Hybrid Capacitor](#)



### IMPORTANT:

The HPE Smart Storage Hybrid Capacitor is only supported on Gen10 and later servers. For a list of supported controllers, see the [product QuickSpecs](#).

Once installed, the status of the energy pack displays in HPE iLO. For more information, see the HPE iLO user guide on the [Hewlett Packard Enterprise website](#).

## Subtopics

### [HPE Smart Storage Battery](#)

## HPE Smart Storage Hybrid Capacitor

### Minimum firmware versions

### Installing an energy pack

## HPE Smart Storage Battery

The HPE Smart Storage Battery supports the following devices:

- HPE Smart Array SR controllers

A single 96W battery can support up to 24 devices.

After the battery is installed, it might take up to two hours to charge. Controller features requiring backup power are not re-enabled until the battery is capable of supporting the backup power.

This server supports the 96W HPE Smart Storage Battery with the 145mm cable.

## HPE Smart Storage Hybrid Capacitor

The HPE Smart Storage Hybrid Capacitor supports the following devices:

- HPE SmartRAID SR controllers

The capacitor pack can support up to two devices.

This server supports the HPE Smart Storage Hybrid Capacitor with the 145mm cable.

Before installing the HPE Smart Storage Hybrid Capacitor, verify that the system BIOS meets the minimum firmware requirements to support the capacitor pack.



### **IMPORTANT:**

If the system BIOS or controller firmware is older than the minimum recommended firmware versions, the capacitor pack will only support one device.

The capacitor pack is fully charged after the system boots.

# Minimum firmware versions

Product	Minimum firmware version
HPE ProLiant DL380 Gen10 Plus Server system ROM	1.40
HPE Smart Array SR controllers	3.53


## Installing an energy pack

### Prerequisites

Before installing this option, be sure you that have the components included with the hardware option kit.

### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - a. Extending the server from the rack.
  - b. Removing the server from the rack.
4. Remove the access panel.
5. Install the energy pack and connect the energy pack cable.

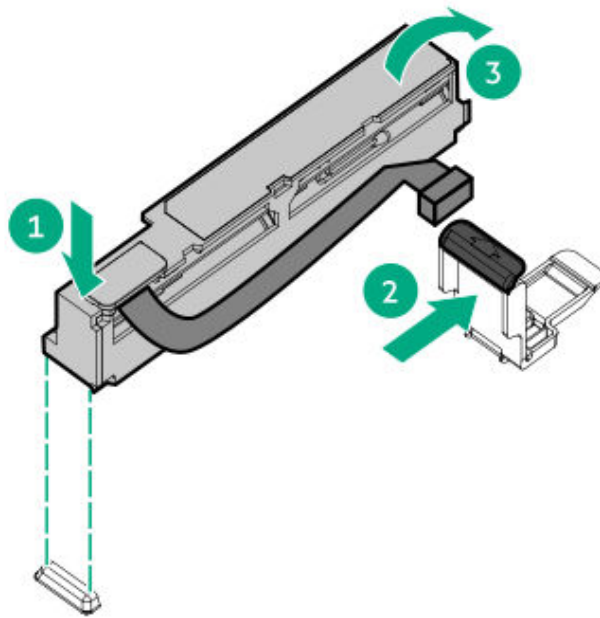

6. Install the access panel.
7. Install the server in the rack.
8. Connect each power cord to the server.
9. Connect each power cord to the power source.
10. Power up the server.

## Results

The installation is complete.

## Memory options



**IMPORTANT:** This server does not support mixing LRDIMMs and RDIMMs. Attempting to mix any combination of these DIMMs can cause the server to halt during BIOS initialization. All memory installed in the server must be of the same type.

### Subtopics

**Memory population information**

**DIMM-processor compatibility**

## Memory population information

For specific memory population information, see the memory population guidelines on the Hewlett Packard Enterprise website (<https://www.hpe.com/docs/memory-population-rules>).

## DIMM-processor compatibility

The installed processor determines the type of DIMM that is supported in the server:

- Third-generation Intel Xeon Scalable processors support DDR4-3200 DIMMs.

Mixing DIMM types is not supported. Install only the supported DDR4-3200 DIMMs in the server.

## Installing a DIMM blank

### About this task


Use the following table to decide if the thermal restrictions of the server require DIMM blanks in all open slots of your configuration.

Processor TDP	DIMM blank installation
105W to 140W	Recommended
230W to 270W	Recommended
150W to 270W	Required

### Procedure

1. [Power down the server.](#)
2. Remove all power:
  - a. Disconnect each power cord from the power source.

- b. Disconnect each power cord from the server.
3. Do one of the following:
  - a. Extend the server from the rack.
  - b. Remove the server from the rack.
4. Remove the access panel.
5. Open the DIMM slot latches.
6. Install the DIMM blank.

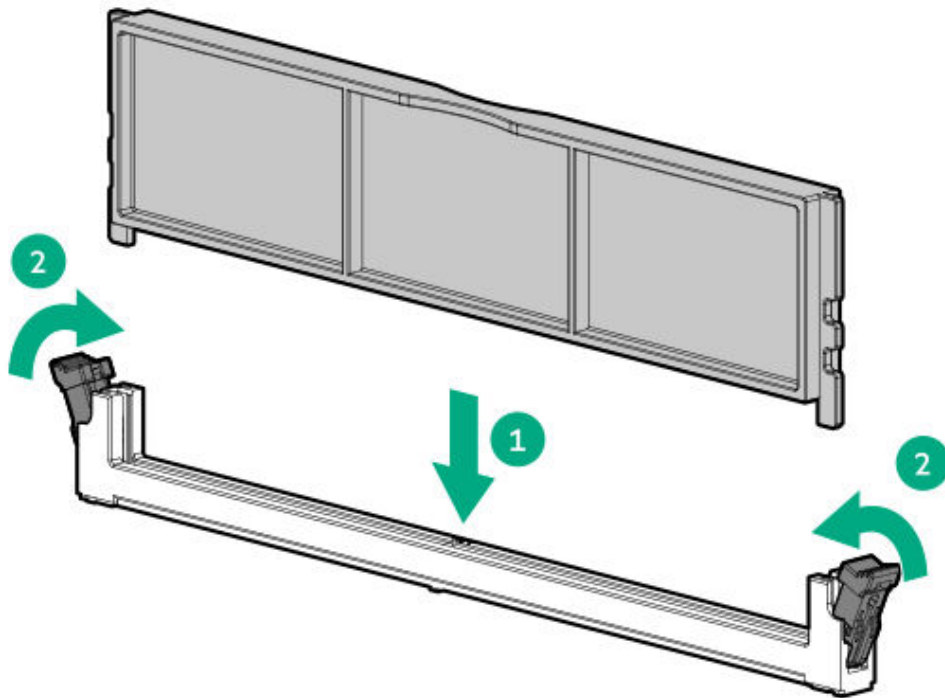

## Installing a DIMM

### Prerequisites

Before installing this option, be sure you have the following:

The components included with the hardware option kit


For more information on specific options, see the server QuickSpecs on the [Hewlett Packard Enterprise website](#).

## About this task

The server supports up to 32 DIMMs.

## Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - a. Extend the server from the rack.
  - b. Remove the server from the rack.
4. Remove the access panel.
5. Open the DIMM slot latches.
6. Install the DIMM.

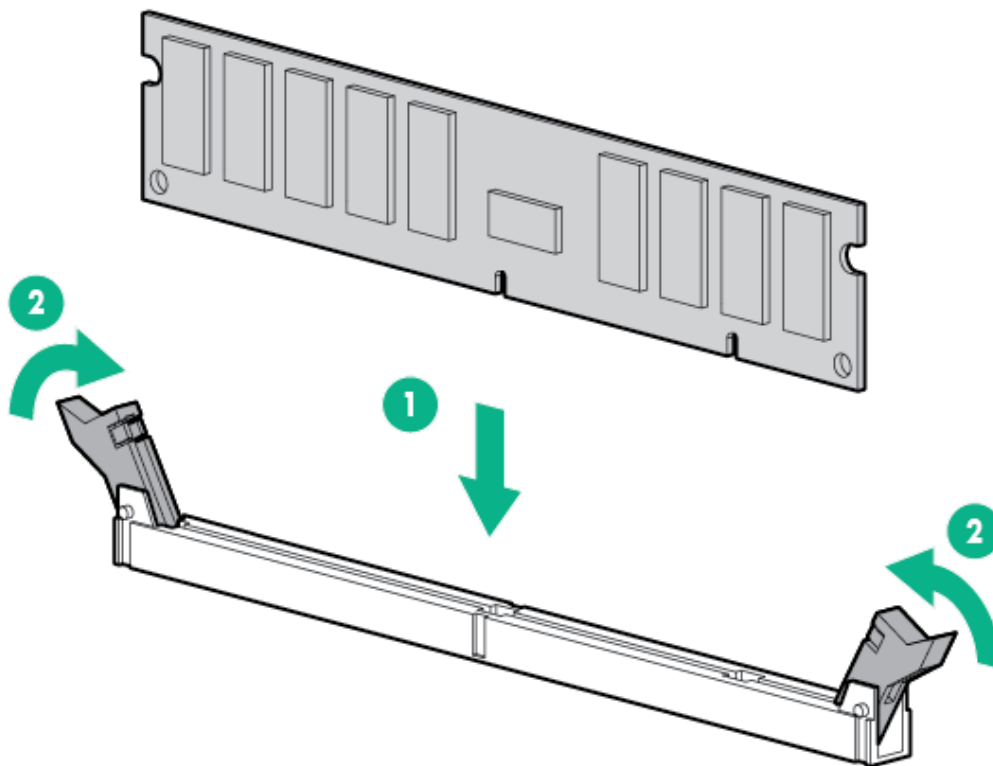

7. Install the access panel.
8. Install the server in the rack.
9. Connect each power cord to the server.
0. Connect each power cord to the power source.
1. Power up the server.

## Results

Use the BIOS/Platform Configuration (RBSU) in the UEFI System Utilities to configure the memory mode.

For more information about LEDs and troubleshooting failed DIMMs, see "[Systems Insight Display combined LED descriptions.](#)"

## Intel Optane persistent memory 200 series for HPE

Intel Optane persistent memory 200 series for HPE offers the flexibility to deploy memory as dense memory (Memory mode) or fast storage (App Direct mode) and enables per-socket memory capacity of up to 6.0 TB. Persistent memory modules, together with traditional volatile DRAM DIMMs, provide fast, high-capacity, cost-effective memory and storage to transform big data workloads and analytics by enabling data to be stored, moved, and processed quickly.

Persistent memory modules use the standard DIMM form factor and are installed alongside DIMMs in a server memory slot. Intel Optane persistent memory 200 series for HPE is designed for use only with third-generation Intel Xeon Scalable processors, and is available in the following capacities:

- 128 GB
- 256 GB
- 512 GB

### Subtopics

**[Persistent memory module-processor compatibility](#)**

**[Persistent memory module population information](#)**

**[System requirements for persistent memory module support](#)**

**[Installing persistent memory modules](#)**

**[Configuring the server for Intel Optane persistent memory 200 series for HPE](#)**

## Persistent memory module-processor compatibility

Intel Optane persistent memory 200 series for HPE is supported only in servers with second-generation Intel Xeon Scalable processors installed.

## Persistent memory module population information

For specific population and configuration information, see the memory population guidelines on the Hewlett Packard Enterprise website (<https://www.hpe.com/docs/memory-population-rules>).

## System requirements for persistent memory module support



### IMPORTANT:

Hewlett Packard Enterprise recommends that you implement best-practice configurations such as clustered configurations for high availability (HA).

Before installing persistent memory modules, make sure that the following components and software are available:

- A supported HPE ProLiant Gen10 Plus server or Synergy compute module using third-generation Intel Xeon Scalable processors.

For more information, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/support/persistentmemoryQS>).

- HPE DDR4 Standard Memory RDIMMs or LRDIMMs (the number will vary based on your chosen configuration).
- Supported firmware and drivers:
  - System ROM version 1.40 or later
  - Server Platform Services (SPS) Firmware version 04.04.04.053
  - HPE iLO 5 Firmware version 2.44
  - HPE Innovation Engine Firmware version 1.0.0.20 or later

Download the required firmware and drivers from the Hewlett Packard Enterprise website (<https://www.hpe.com/info/persistentmemory>).

- A supported operating system:
  - Windows Server 2016 with persistent memory drivers from Hewlett Packard Enterprise
  - Windows Server 2019
  - Red Hat Enterprise Linux 7.9 and later
  - Red Hat Enterprise Linux 8.2 and later
  - SUSE Linux Enterprise Server 12 SP5 and later
  - SUSE Linux Enterprise Server 15 SP2 and later
  - VMware vSphere 7.0 U2 and later
  - VMware vSphere 6.7 U3 with P03
- Hardware and licensing requirements for optional encryption of the persistent memory modules:
  - HPE TPM 2.0 (local key encryption)
  - HPE iLO Advanced License (remote key encryption)
  - Key management server (remote key encryption)

For more information, see the Intel Optane persistent memory 200 series for HPE User Guide on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/persistentmemory-docs>).

## Installing persistent memory modules

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- A T-10 Torx screwdriver might be needed to unlock the access panel.

### About this task

Use this procedure only for new persistent memory module installations. If you are migrating this persistent memory module from another server, see the Intel Optane persistent memory 200 series for HPE User Guide on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/persistentmemory-docs>).

## Procedure

1. Observe the following alerts:



### CAUTION:

DIMMs and persistent memory modules are keyed for proper alignment. Align notches on the DIMM or persistent memory module with the corresponding notches in the slot before installing the component. Do not force the DIMM or persistent memory module into the slot. When installed properly, not all DIMMs or persistent memory modules will face in the same direction.



### CAUTION:

Electrostatic discharge can damage electronic components. Be sure you are properly grounded before beginning this procedure.



### CAUTION:

Failure to properly handle persistent memory modules can damage the component and the system board connector.




### IMPORTANT:

Hewlett Packard Enterprise recommends that you implement best-practice configurations such as clustered configurations for high availability (HA).

2. Power down the server ([Power down the server](#)).
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Do one of the following:
  - a. Extend the server from the rack ([Extending the server from the rack](#)).
  - b. Remove the server from the rack ([Removing the server from the rack](#)).
5. Place the server on a flat, level work surface.
6. [Remove the access panel](#).
7. Open the DIMM slot latches.

8. Install the persistent memory module.

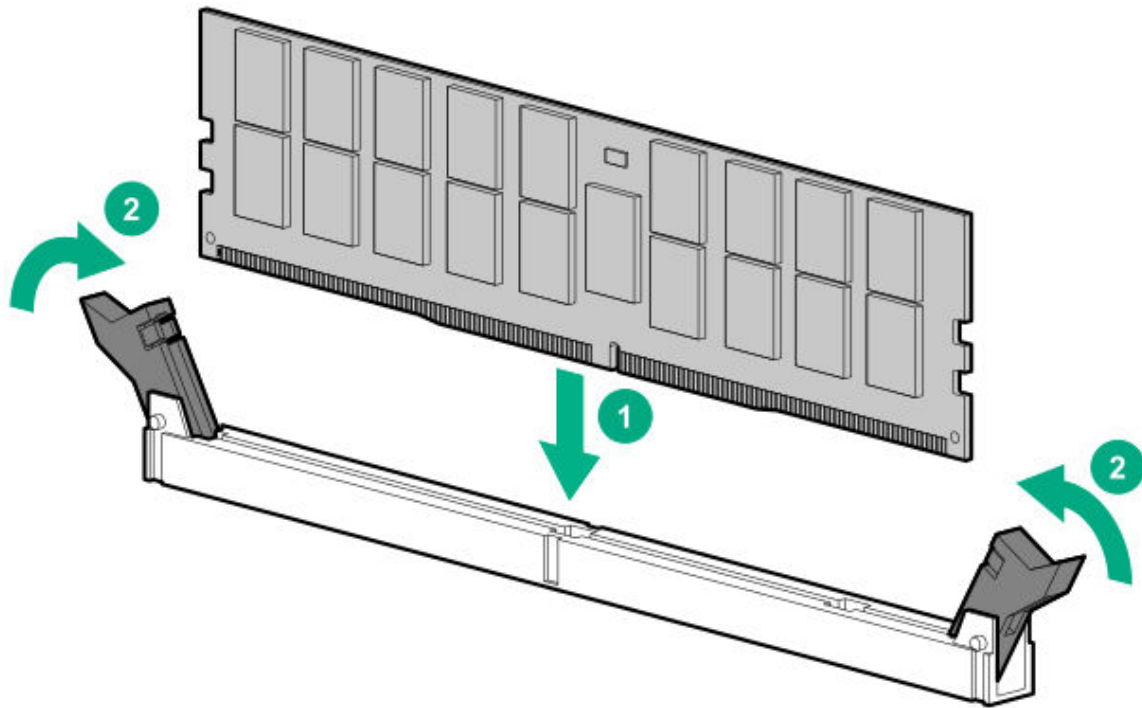

9. Install the access panel ([Install the access panel](#)).

10. Slide or install the server into the rack.

11. If removed, reconnect all power cables.

12. Power up the server.

13. [Configure the server for Intel Optane persistent memory for HPE.](#)

## Configuring the server for Intel Optane persistent memory 200 series for HPE

After installing persistent memory modules, configure the server for Intel Optane persistent memory for HPE.



### IMPORTANT:

Always follow recommendations from your software application provider for high-availability best practices to ensure maximum uptime and data protection.

A number of configuration tools are available, including:

- UEFI System Utilities—Configure the server by using the UEFI System Utilities through the Remote Console. To access the UEFI System Utilities, press **F9** during POST.
- iLO RESTful API—Use the iLO RESTful API through tools such as the RESTful Interface Tool (ilorest) or other third-party tools.

For more information, see the Intel Optane persistent memory 200 series for HPE User Guide on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/persistentmemory-docs>).


## Fan options



**CAUTION:** To avoid damage to server components, fan blanks must be installed in fan bays 1 and 2 in a single-processor configuration.



**CAUTION:** To avoid damage to the equipment, do not operate the server for extended periods of time if the server does not have the optimal number of fans installed. Although the server might boot, Hewlett Packard Enterprise does not recommend operating the server without the required fans installed and operating.

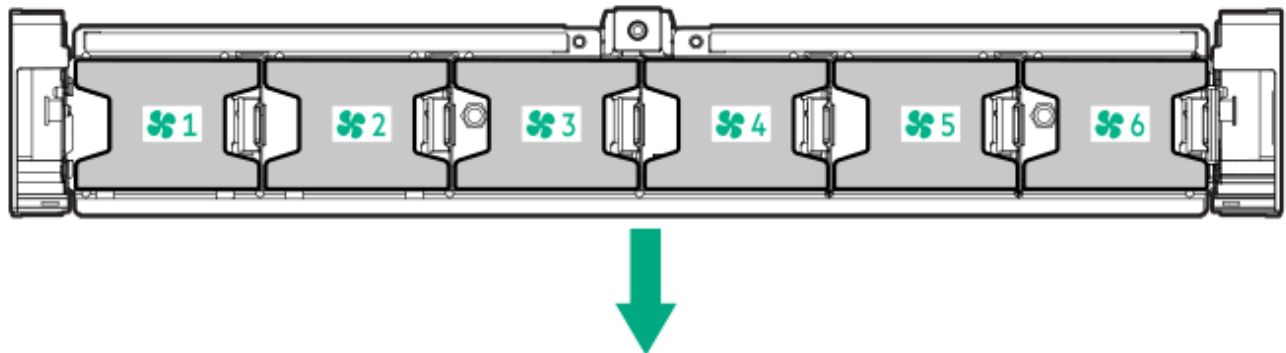

Valid fan configurations are listed in the following table.

**Fan bay 1**  
**o**  
**n**  
**f**  
**i**  
**g**  
**u**  
**r**  
**a**  
**t**  
**i**  
**o**  
**n**

**Fan bay 2**

**Fan bay 3**

**Fan bay 4**

**Fan bay 5**

**Fan bay 6**

---

Fan blank  
p  
r  
o  
c  
e  
s  
s  
o  
r

Fan blank

Fan

Fan

Fan

Fan

---

Fan  
p  
r  
o  
c  
e  
s  
s  
o  
r  
2  
4  
-  
S  
F  
F  
o  
r  
1  
2  
-  
L  
F  
F  
c  
o

Fan

Fan

Fan

Fan

Fan

Fan bay 1

Fan bay 2

Fan bay 3

Fan bay 4

Fan bay 5

Fan bay 6

o  
n  
f  
i  
g  
u  
r  
a  
t  
i  
o  
n

---

n  
f  
i  
g  
u  
r  
a  
t  
i  
o  
n  
w  
i  
t  
h  
h  
i  
g  
h  
-  
p  
e  
r  
f  
o  
r  
m  
a  
n  
c  
e  
f  
a  
n  
s

---

Fan  
p  
r  
o

Fan

Fan

Fan

Fan

Fan

Fan bay 1	Fan bay 2	Fan bay 3	Fan bay 4	Fan bay 5	Fan bay 6
o					
n					
fi					
g					
u					
r					
a					
t					
i					
o					
n					

Configuration

For a single-processor configuration, excluding 24-SFF and 12-LFF configurations, four fans and two blanks are required in specific fan bays for redundancy. A fan failure or missing fan causes a loss of redundancy. A second fan failure or missing fan causes an orderly shutdown of the server.

For a dual-processor configuration or single-processor 24-SFF or 12-LFF configurations, six fans are required for redundancy. A fan failure or missing fan causes a loss of redundancy. A second fan failure or missing fan causes an orderly shutdown of the server.

High-performance fans might be necessary in 24-SFF and 12-LFF configurations for the following installations:

- Optional GPU riser installations
- ASHRAE compliant configurations

For more information, see the [Hewlett Packard Enterprise website](#).

The server supports variable fan speeds. The fans operate at minimum speed until a temperature change requires a fan speed increase to cool the server. The server shuts down during the following temperature-related scenarios:

- At POST and in the OS, iLO performs an orderly shutdown if a cautionary temperature level is detected. If the server hardware detects a critical temperature level before an orderly shutdown occurs, the server performs an immediate shutdown.
- When the Thermal Shutdown feature is disabled in the BIOS/Platform Configuration (RBSU), iLO does not perform an orderly shutdown when a cautionary temperature level is detected. Disabling this

feature does not disable the server hardware from performing an immediate shutdown when a critical temperature level is detected.



**CAUTION:** A thermal event can damage server components when the Thermal Shutdown feature is disabled in the BIOS/Platform Configuration (RBSU).

## Subtopics

### Installing high-performance fans

## Installing high-performance fans

### About this task




**CAUTION:** Caution: To prevent damage server, ensure that all DIMM latches are closed and locked before installing the fans.



**CAUTION:** Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

### Procedure


1. Extend the server from the rack.
2. Remove the access panel.
3. If installed, remove all fan blanks.

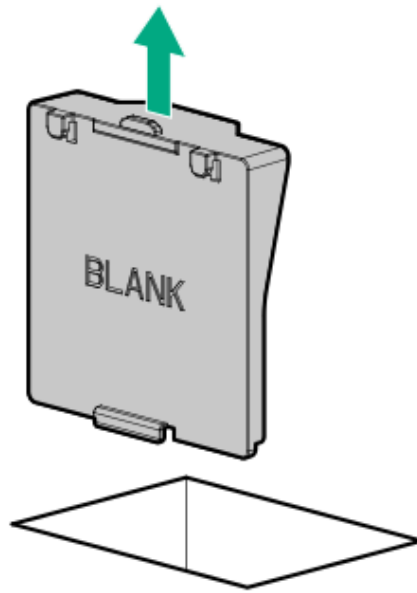


4. Remove the air baffle.
5. Remove all standard fans.



**IMPORTANT:** Do not mix standard fans and high-performance fans in the same server.

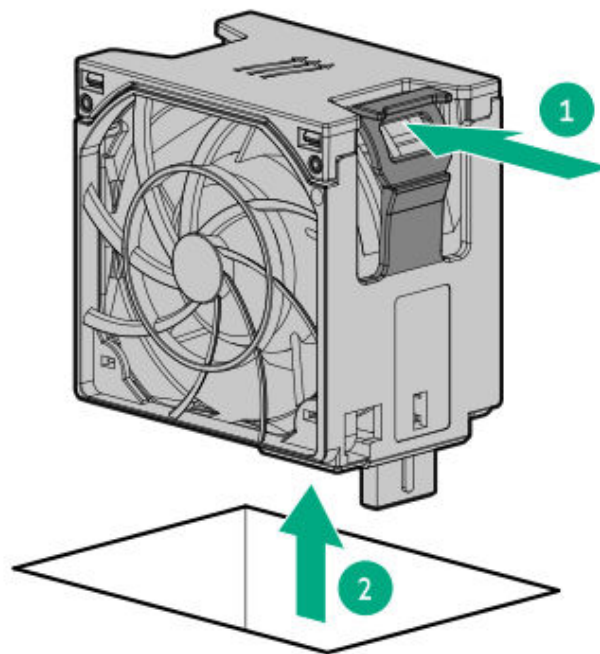

6. Install high-performance fans in all fan bays.

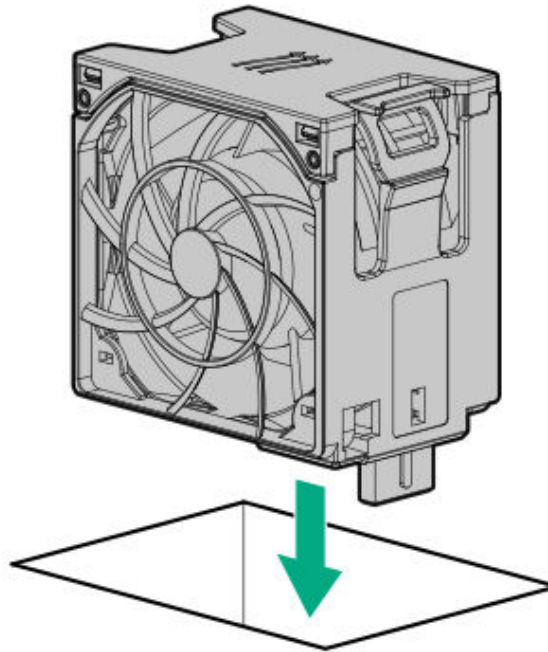

7. Install the air baffle.

8. Install the access panel.

### Results

The installation is complete.

## Drive options

Depending on the configuration, this server supports SAS, SATA, NVMe, and M.2 drives. For more information on drive support, see the product [QuickSpecs](#).

When adding hard drives to the server, observe the following general guidelines:

- The system automatically sets all device numbers.
- For drive numbering, see [Drive bay numbering](#).
- If using only one hard drive, install it in the bay with the lowest device number.

- To provide the greatest storage space efficiency, group identical capacity drives into the same drive array.
- The NVMe SSD is a PCIe bus device. Do not remove NVMe drives without allowing the device to cease activity. Removing the drive while active can cause data loss.

## Subtopics

### Drive guidelines

#### Installing a hot-plug SAS, SATA or NVMe drive

#### Installing an M.2 drive

## Drive guidelines

Depending on the configuration, the server supports SAS, SATA, and NVMe drives.

Observe the following general guidelines:

- The system automatically sets all drive numbers.
- If only one hard drive is used, install it in the bay with the lowest drive number.  
For drive numbering, see [Drive bay numbering](#).
- The NVMe SSD is a PCIe bus device. Devices attached to a PCIe bus cannot be removed without allowing the device and bus to complete and cease the signal/traffic flow.  
Do not remove an NVMe SSD from the drive bay while the Do Not Remove button LED is flashing. The Do Not Remove button LED flashes to indicate that the device is still in use. Removal of the NVMe SSD before the device has completed and ceased signal/traffic flow can cause loss of data.
- Drives with the same capacity provide the greatest storage space efficiency when grouped into the same drive array.

## Installing a hot-plug SAS, SATA or NVMe drive

### About this task




**CAUTION:** To prevent improper cooling and thermal damage, do not operate the server unless all drive and device bays are populated with either a component or a blank.


## Procedure

### 1. Remove the drive blank:

- LFF drive blank

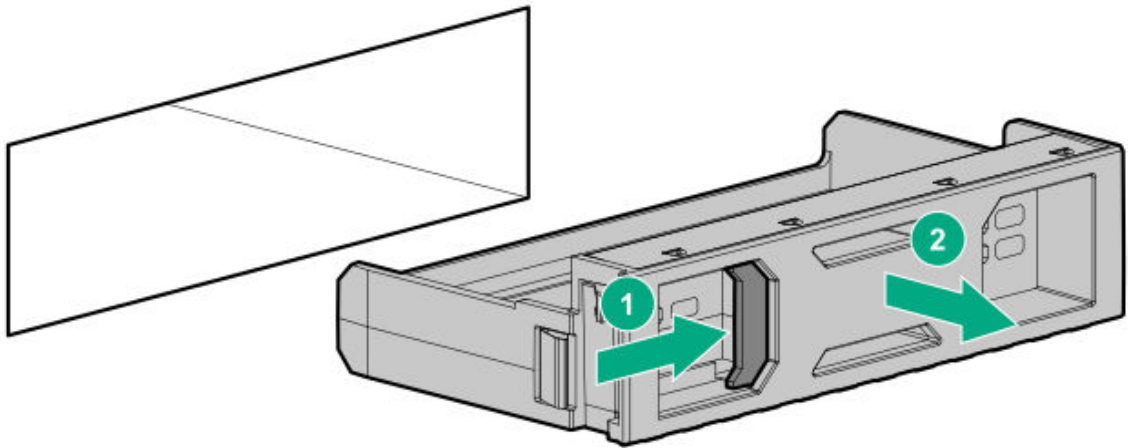


- SFF drive blank

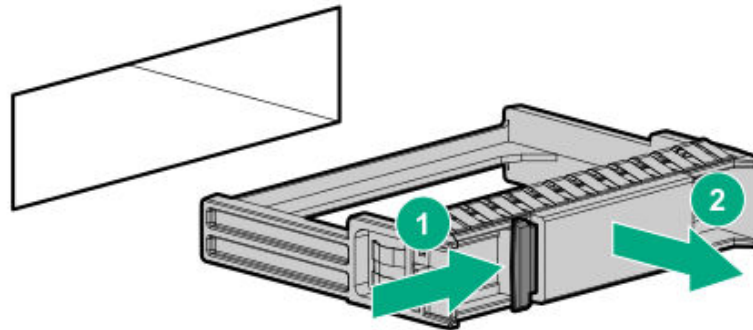


### 2. Prepare the drive.

- LFF drive

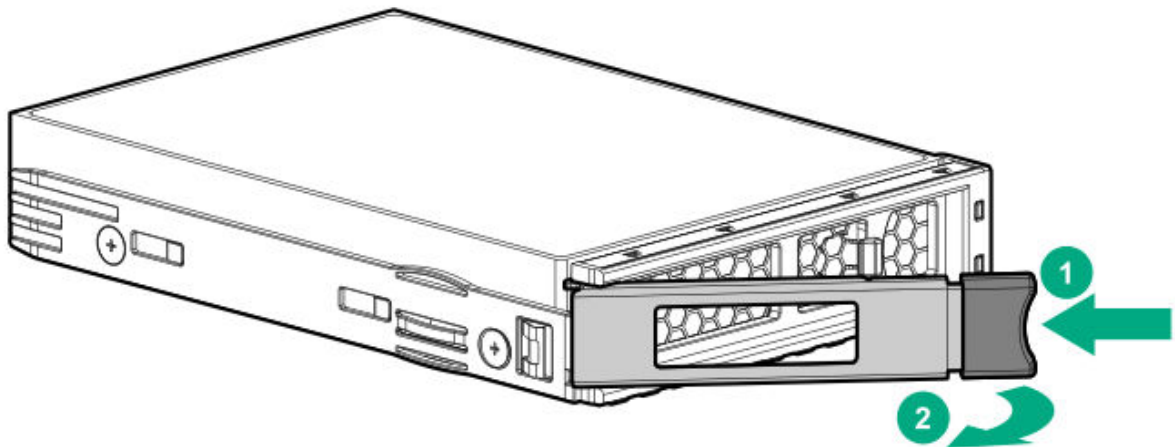


- SFF drive

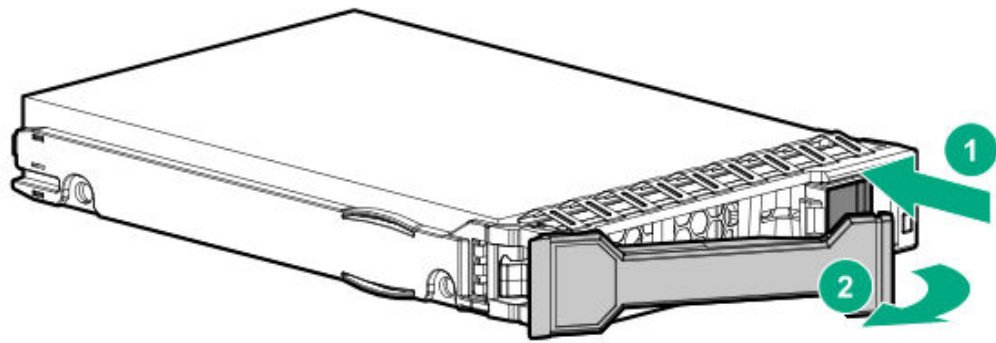


3. Install the drive.

- LFF drive

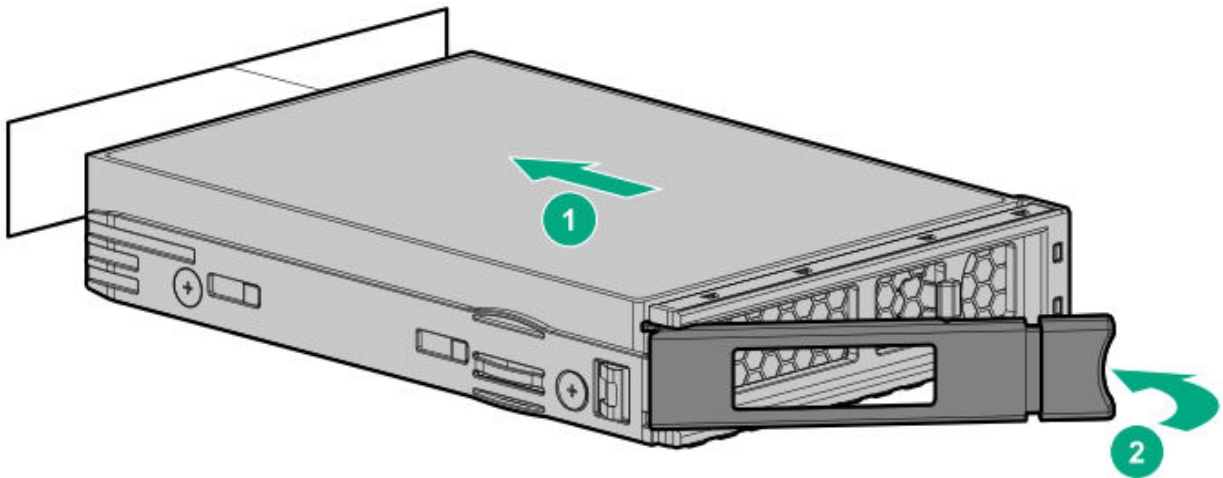

- SFF drive

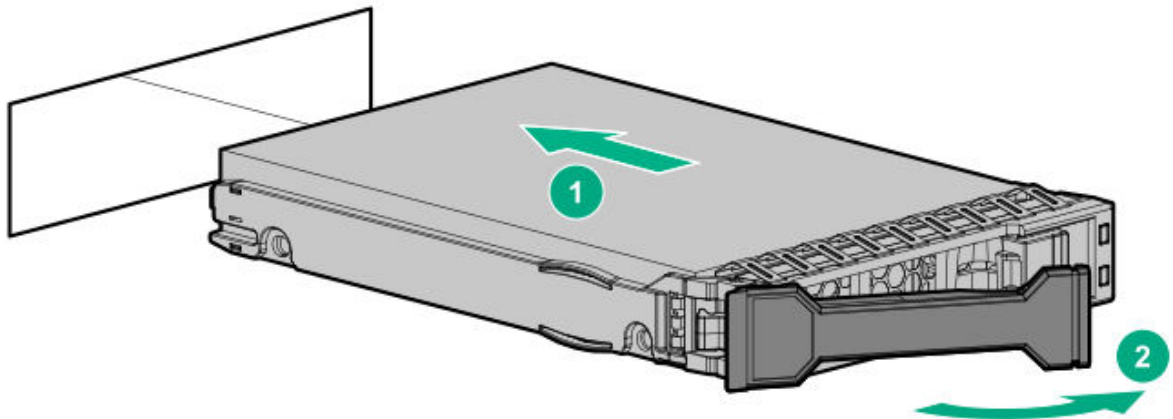

4. Determine the status of the drive from the drive LED definitions.

5. To configure drive arrays, see the following documentation for detailed instructions:

- HPE SR Gen10 Plus Software RAID User Guide

- HPE SR Gen10 Plus Controller User Guide at <https://hpe.com/support/SR-Gen10Plus-UG>
- HPE MR Gen10 Plus Controller User Guide at <https://hpe.com/support/MR-Gen10Plus-UG>

## Installing an M.2 drive

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- The components included with the hardware option kit
- T-10 Torx screwdriver

### About this task

This procedure is for replacing M.2 drives located on an expansion card, riser, or the system board only. Do not use this procedure to replace uFF drives.

### Procedure

1. [Power down the server.](#)
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - [Extend the server from the rack.](#)
  - [Remove the server from the rack.](#)
4. [Remove the access panel.](#)
5. [Remove the riser cage.](#)
6. Install the drive.

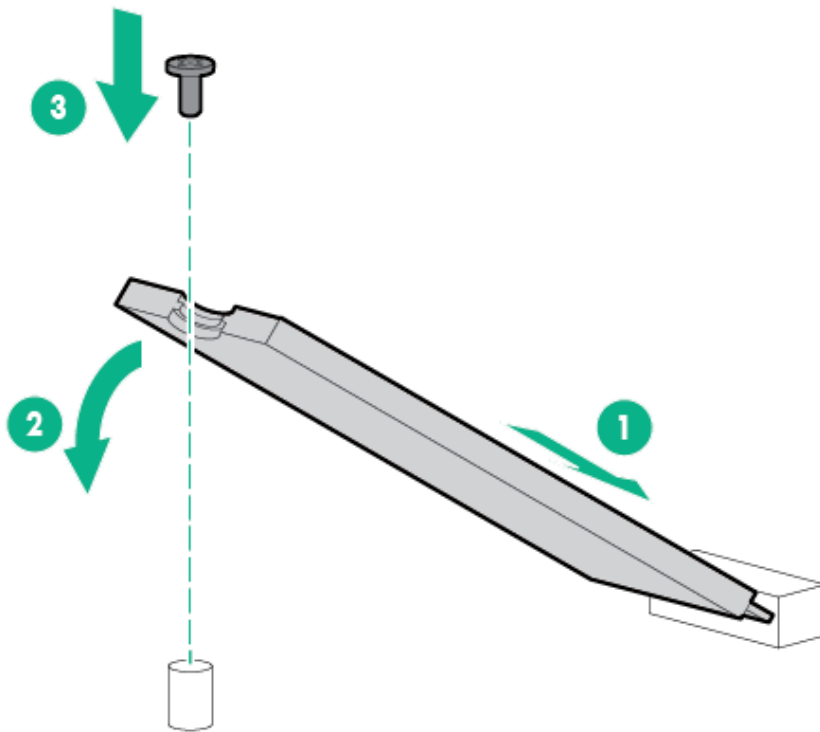

## Results

The installation is complete.

## Installing a Universal Media Bay

### Prerequisites


Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 Torx screwdriver


### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.


3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.
6. Remove the fan cage.
7. Remove the bay blank.

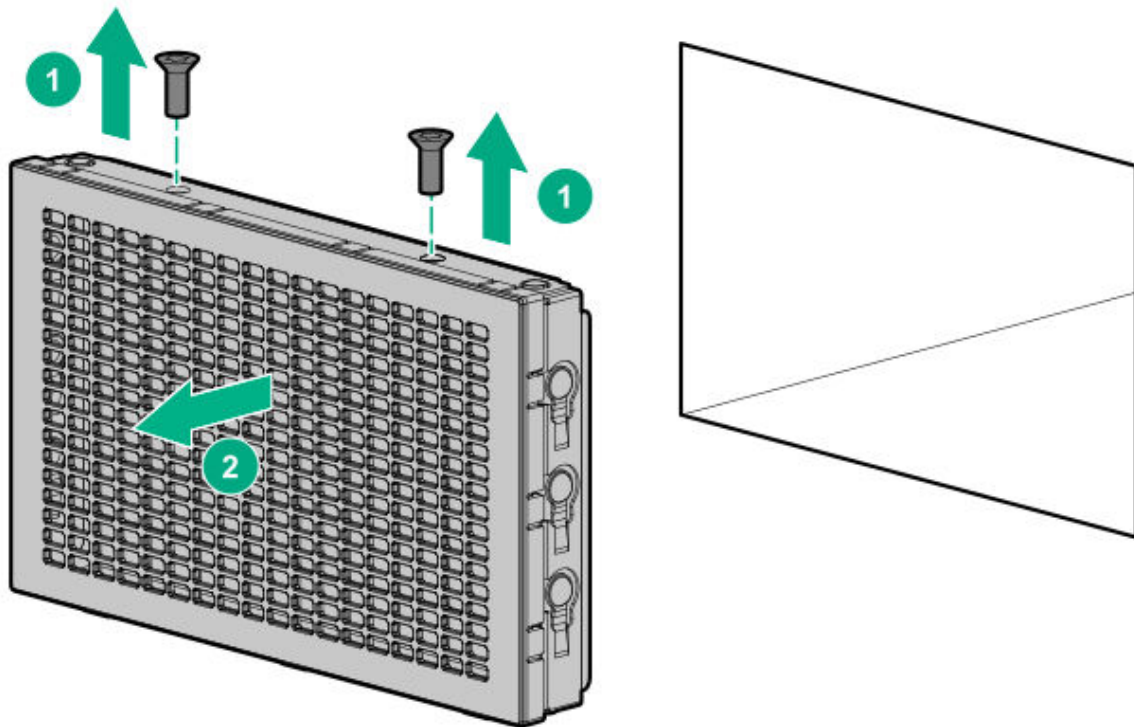

8. Route the USB and video cables through the opening.
9. If installing a two-bay SFF front drive cage, install the drive cage.
10. Install the universal media bay.

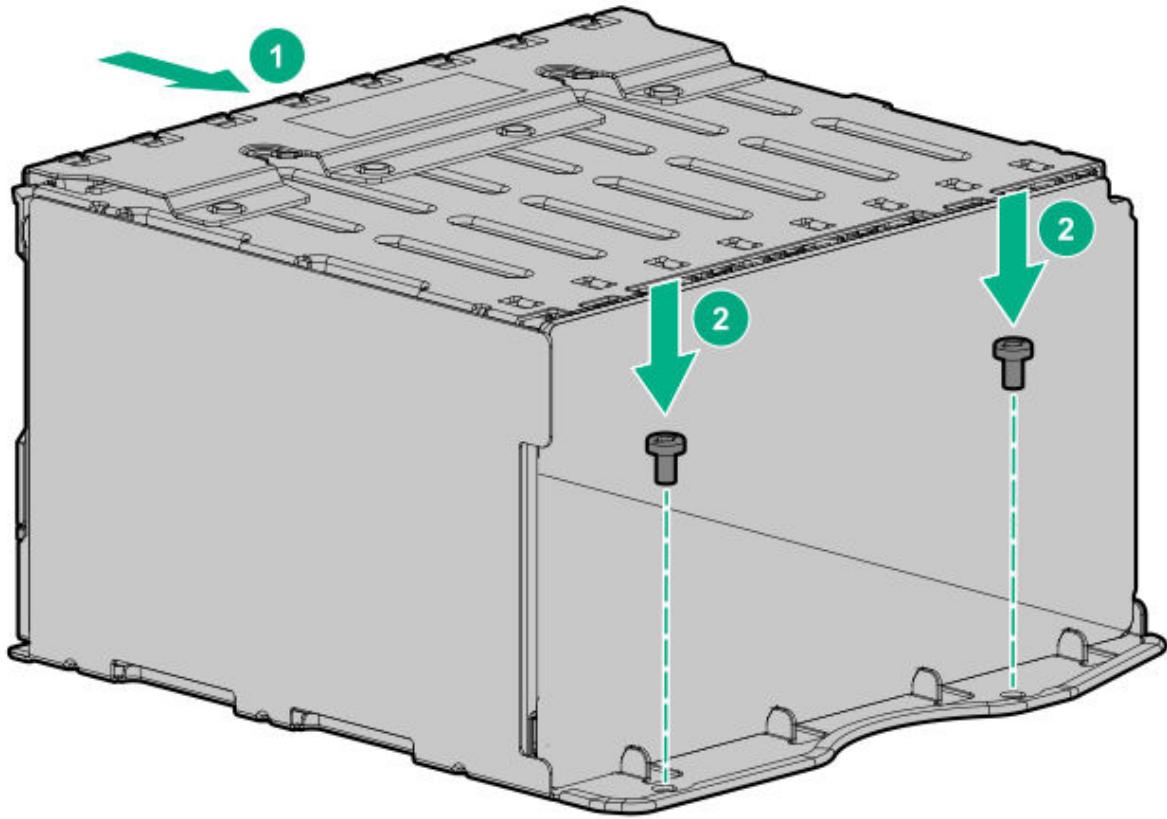

.1. (Optional) Install the optical disk drive.

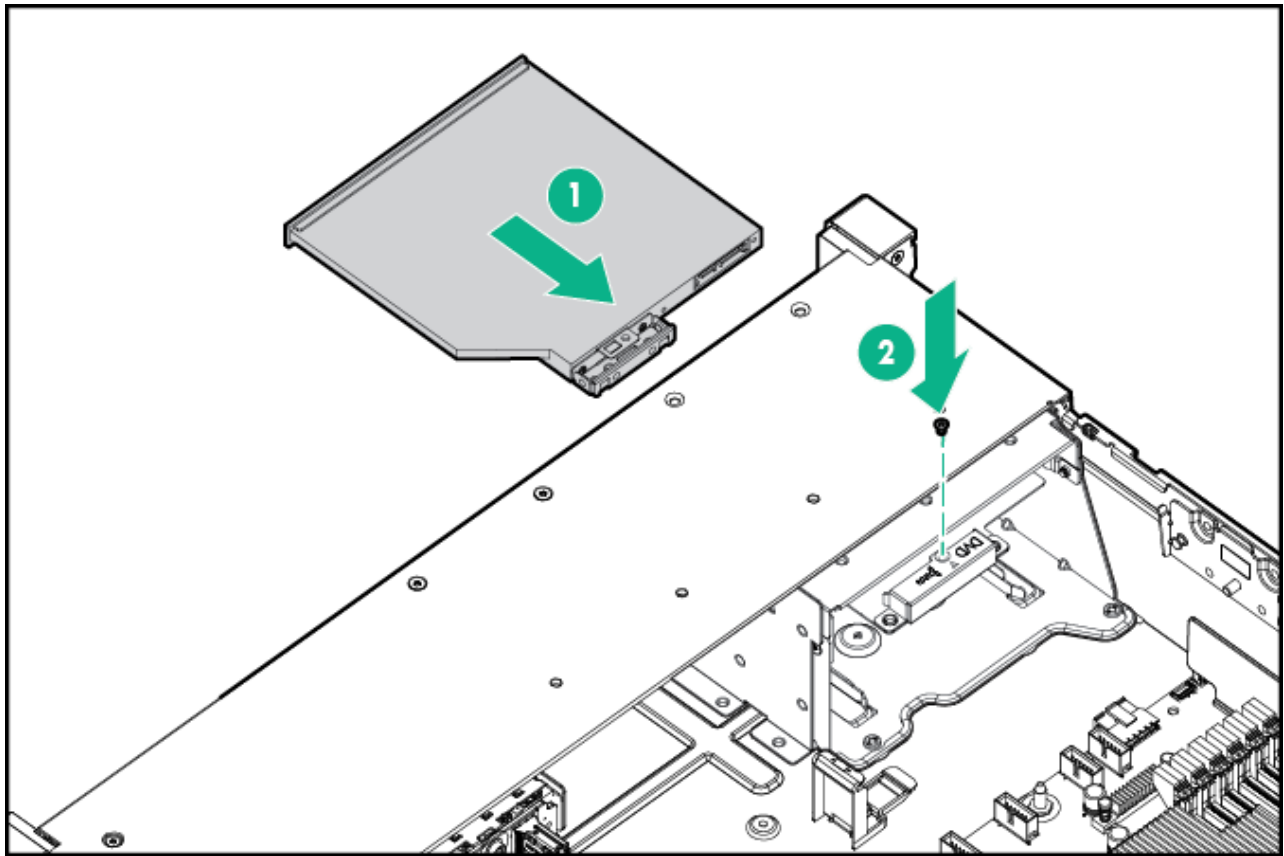

- .2. Connect the cables.
- .3. Install the fan cage.
- .4. Install the air baffle.
- .5. Install the access panel.
- .6. Slide the server into the rack.
- .7. Connect each power cord to the server.
- .8. Connect each power cord to the power source.
- .9. Power up the server.

### **Results**

The installation is complete.

# Storage controller options

The server supports the following storage controllers:

- Embedded controllers  
Enabled through UEFI System Utilities and configured using either System Utilities or the HPE Smart Storage Administrator (Intelligent Provisioning).
- Type-a controllers  
Type-a controllers install in the type-a storage controller slot.
- Type-p controllers  
Type-p controllers install in a PCIe expansion slot.

For a complete list of supported storage controller models, see the server QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

## Subtopics

### Installing a storage controller

## Installing a storage controller

### Prerequisites

Before you perform this procedure, make sure that you have the components included with the hardware option kit.


### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Do one of the following:

- Remove the air baffle.
- If installed, remove the 4 LFF midplane drive cage.

6. Do one of the following:

- For Type-a Smart Array controllers, install the controller in the Smart Array modular controller connector.

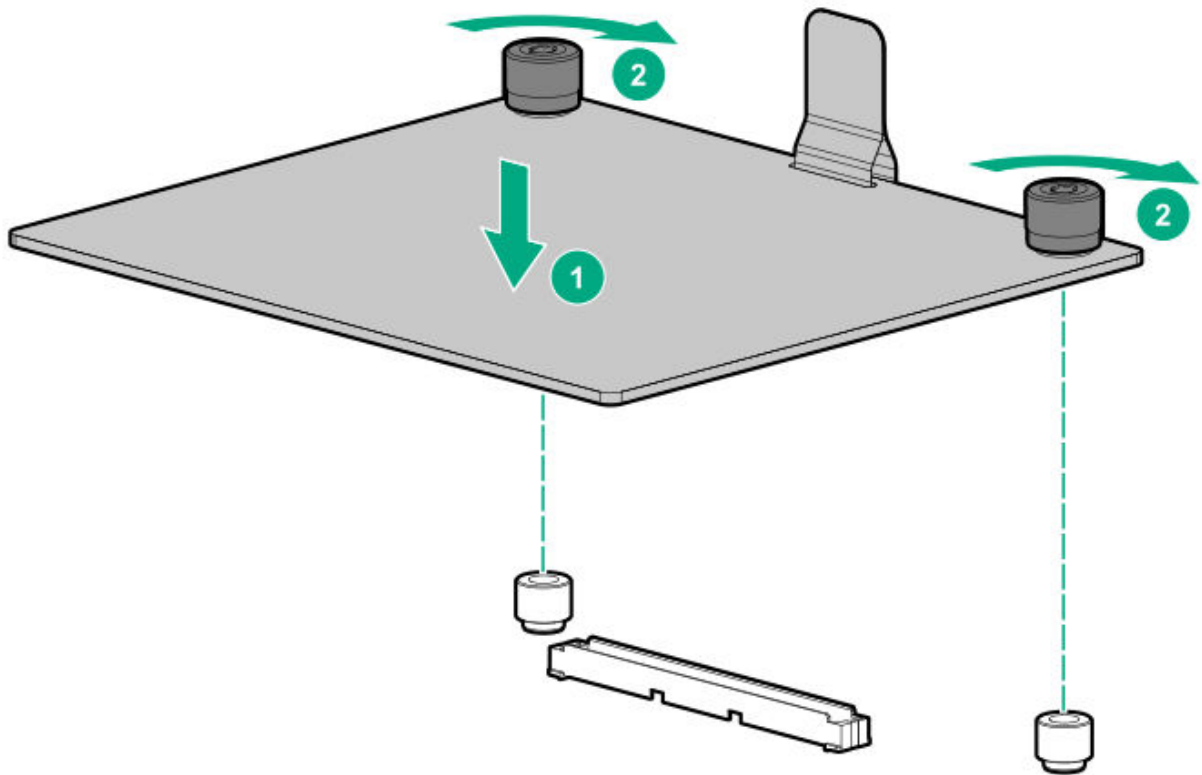

- For Type-p Smart Array controllers, install the controller in a compatible expansion slot.

7. Cable the controller.

## Results

The installation is complete.

## Riser and riser cage options

### Subtopics

[Installing primary and secondary risers](#)

[Installing tertiary risers](#)

[Installing a secondary riser cage](#)

[Installing a tertiary riser cage](#)

## Installing primary and secondary risers


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- The components included with the hardware option kit
- T-10 Torx screwdriver

### Procedure

1. [Power down the server.](#)
2. Do one of the following:
  - Disconnect each power cord from the power source.
  - Disconnect each power cord from the server.
3. Do one of the following:
  - [Extend the server from the rack.](#)
  - [Remove the server from the rack.](#)
4. [Remove the access panel.](#)
5. [Remove the riser cage.](#)
6. Remove the riser board.

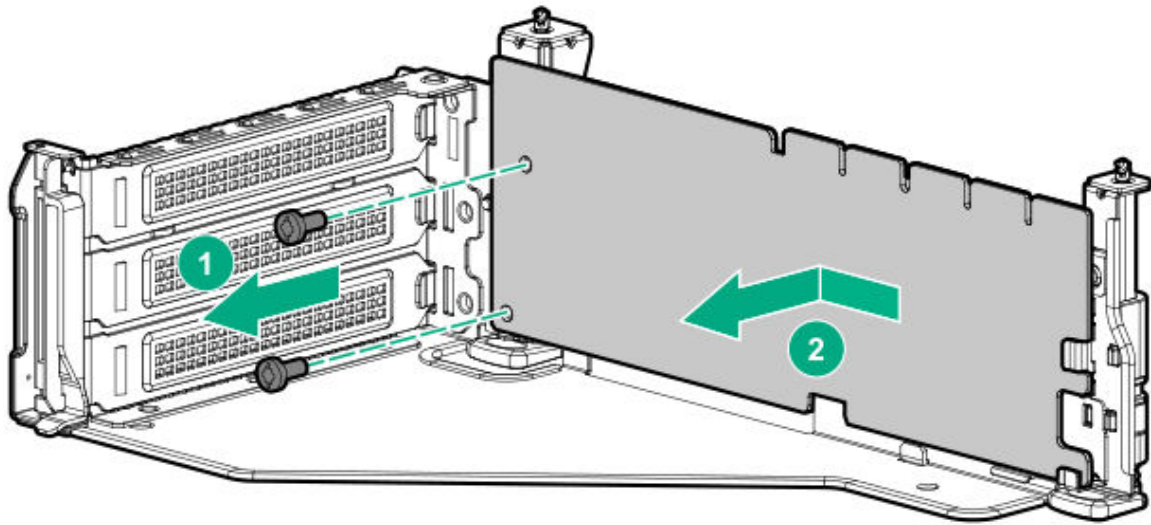


7. Install the riser.

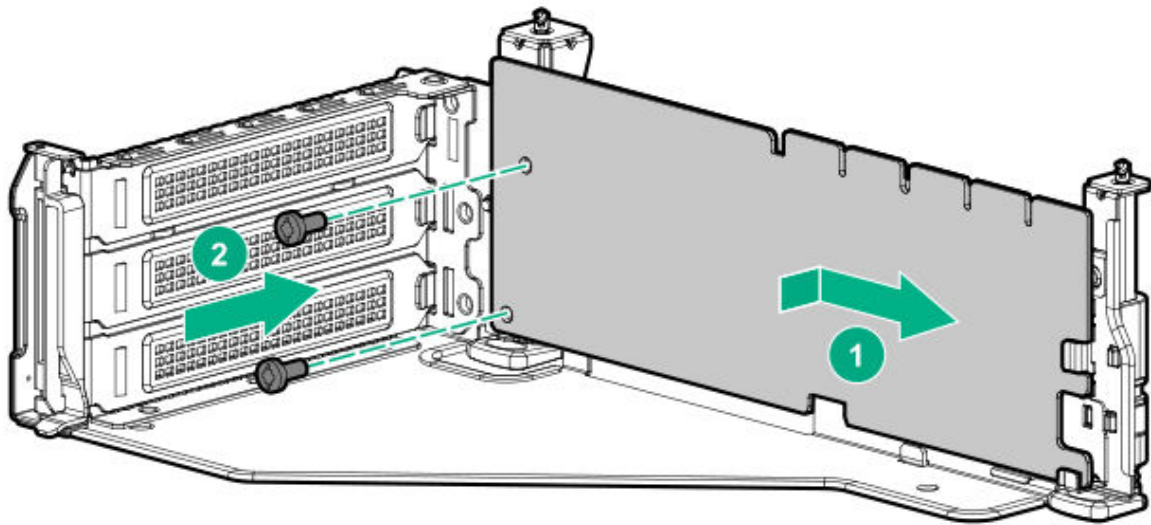

8. If needed, install an expansion board.

9. If needed, connect data cables to the riser or expansion board.

10. Install the riser cage:

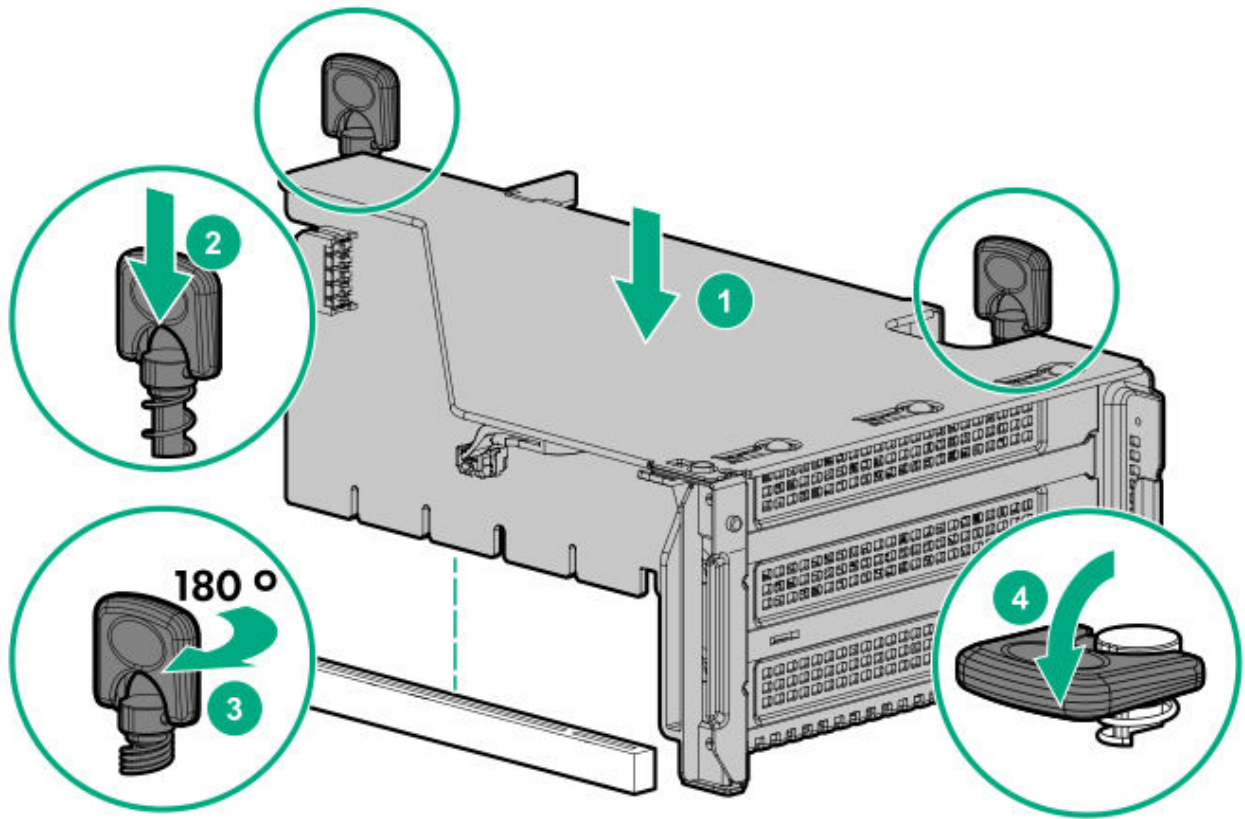

.1. If needed, connect data cables to the drive backplane.

### Results

The installation is complete.

## Installing tertiary risers

### Prerequisites


Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 Torx screwdriver
- A tertiary riser cage is required to install this option.


### Procedure

1. Power down the server.

2. Do one of the following:
  - Disconnect each power cord from the power source.
  - Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the riser cage.
6. Install the riser.

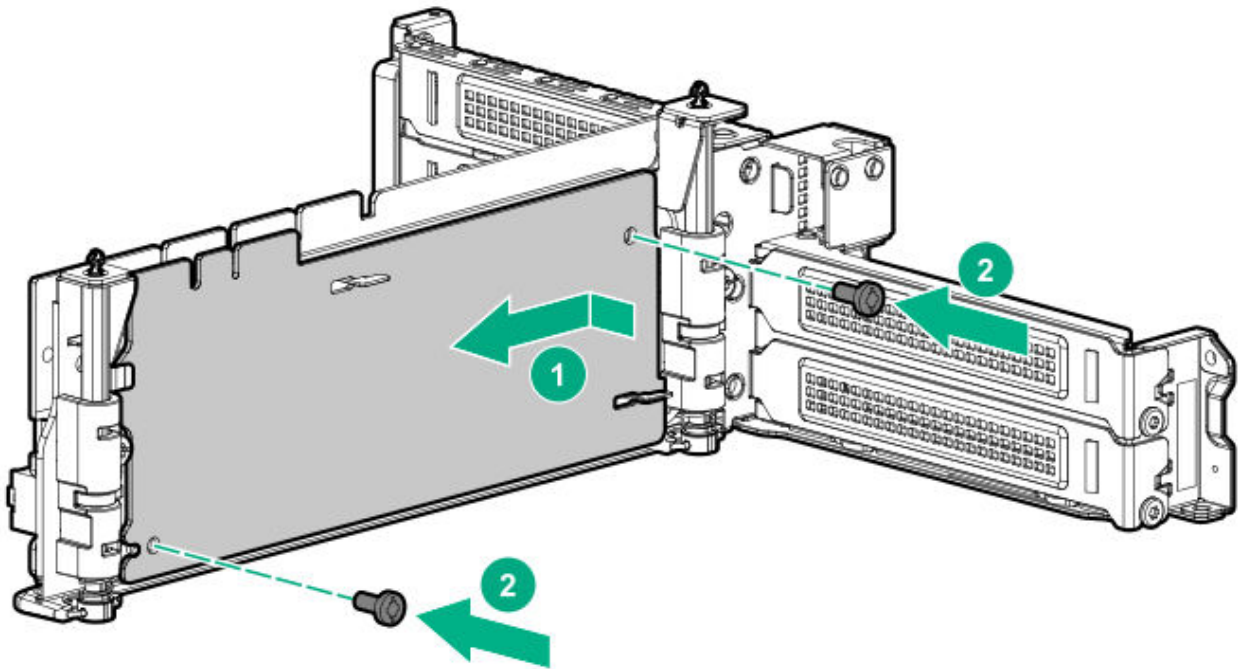

7. If needed, install an expansion board.
8. If needed, connect data cables to the riser or expansion board.
9. Install the tertiary riser cage:

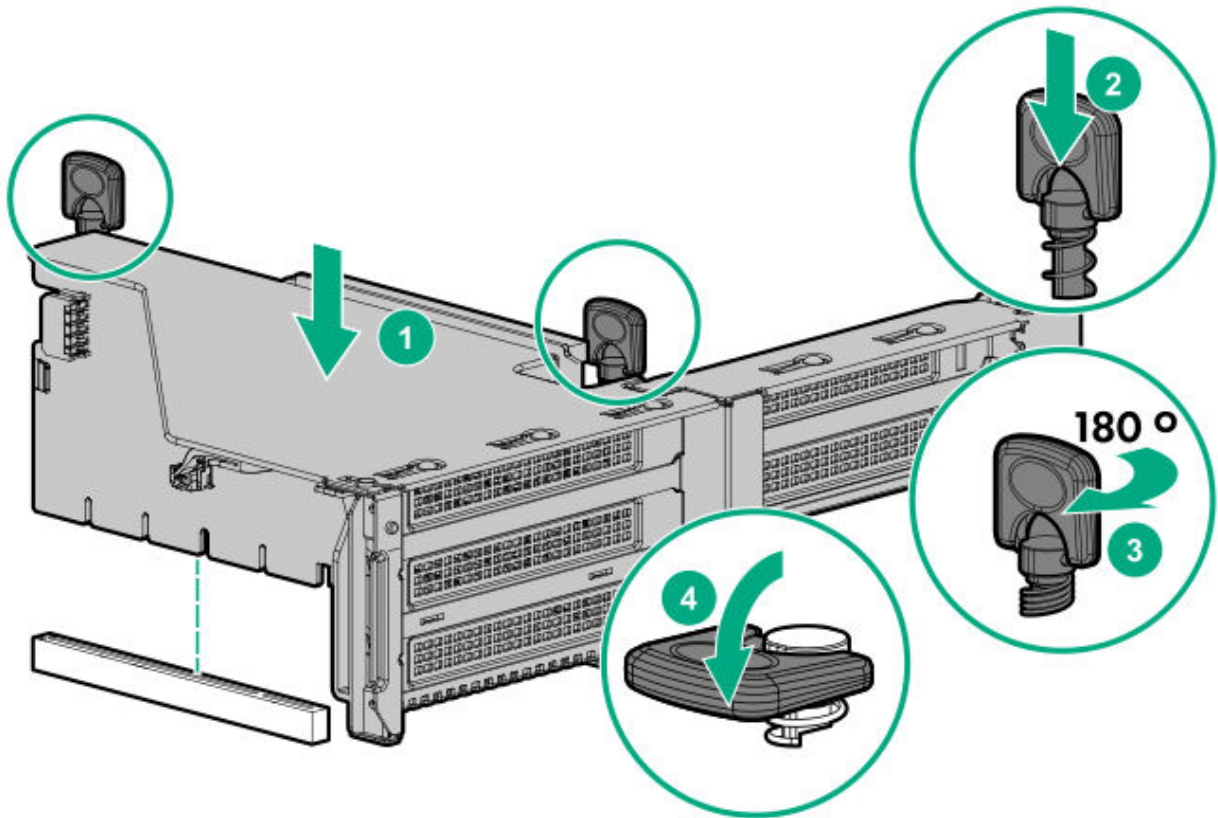

.0. If needed, connect cables to drive backplane.

### Results

The installation is complete.

## Installing a secondary riser cage

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 Torx screwdriver


## Procedure

1. Observe the following alert:




**CAUTION:** To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.

2. Power down the server.
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
5. Remove the access panel.
6. Remove the rear wall blank.

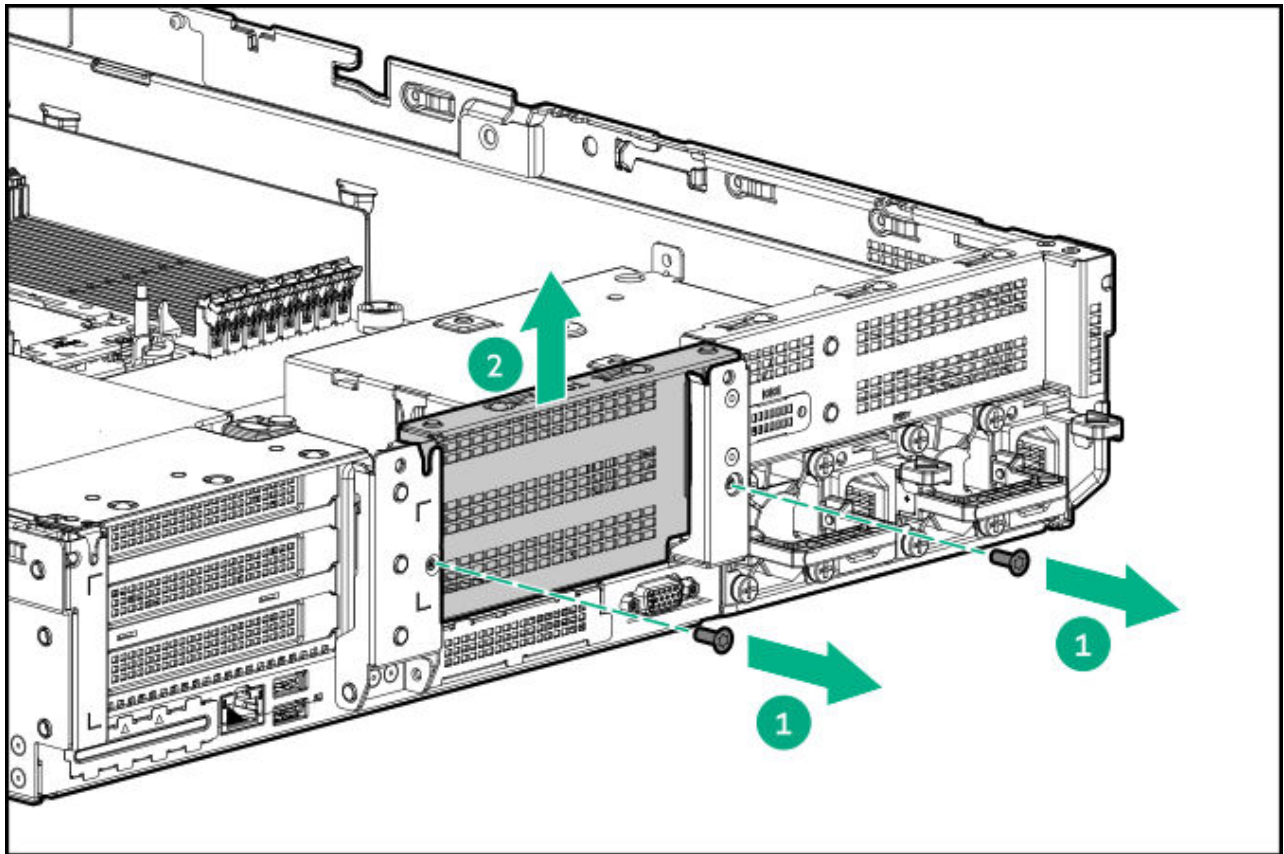

7. Install any expansion boards, if needed.
8. Install the riser cage:

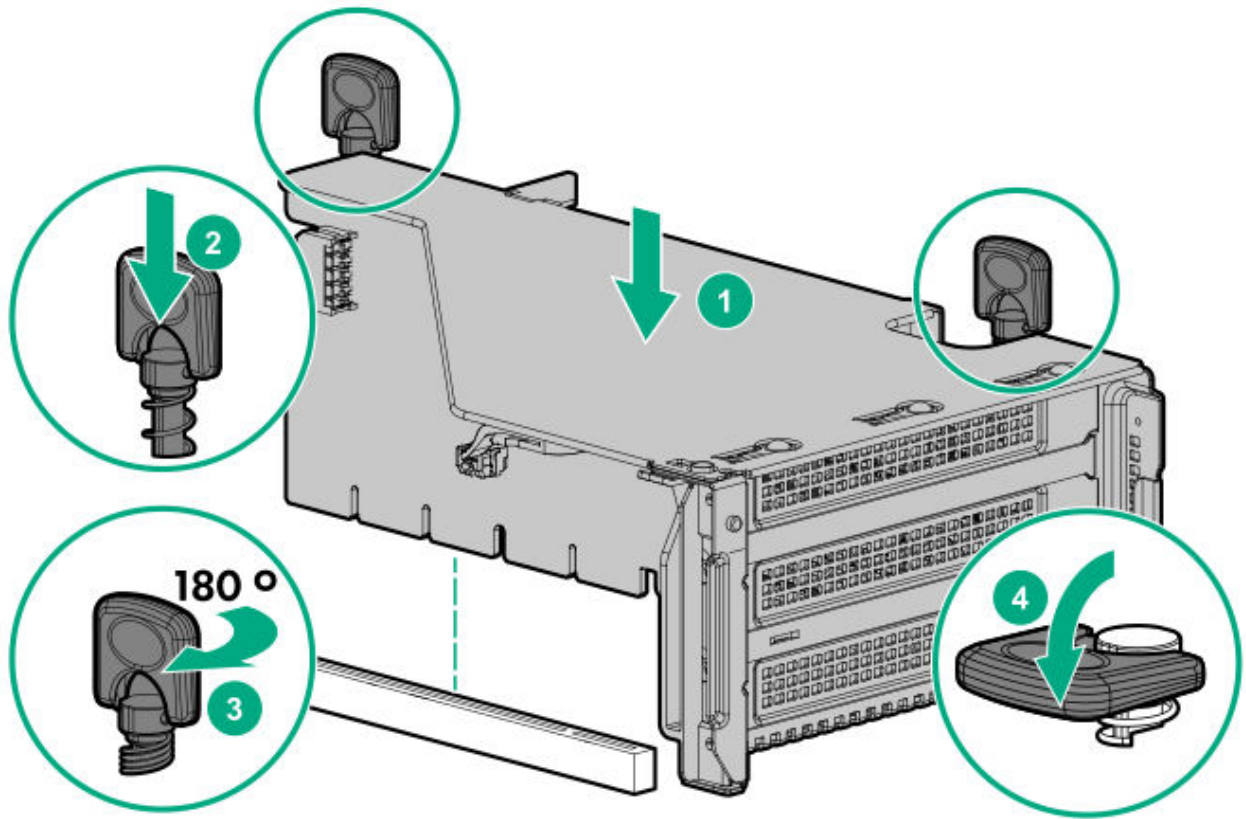

## Results

The installation is complete.

## Installing a tertiary riser cage

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 Torx screwdriver



## Procedure

1. Observe the following alert.




**CAUTION:** To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.


2. Power down the server.
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
5. Remove the access panel.
6. Remove the rear wall blanks.

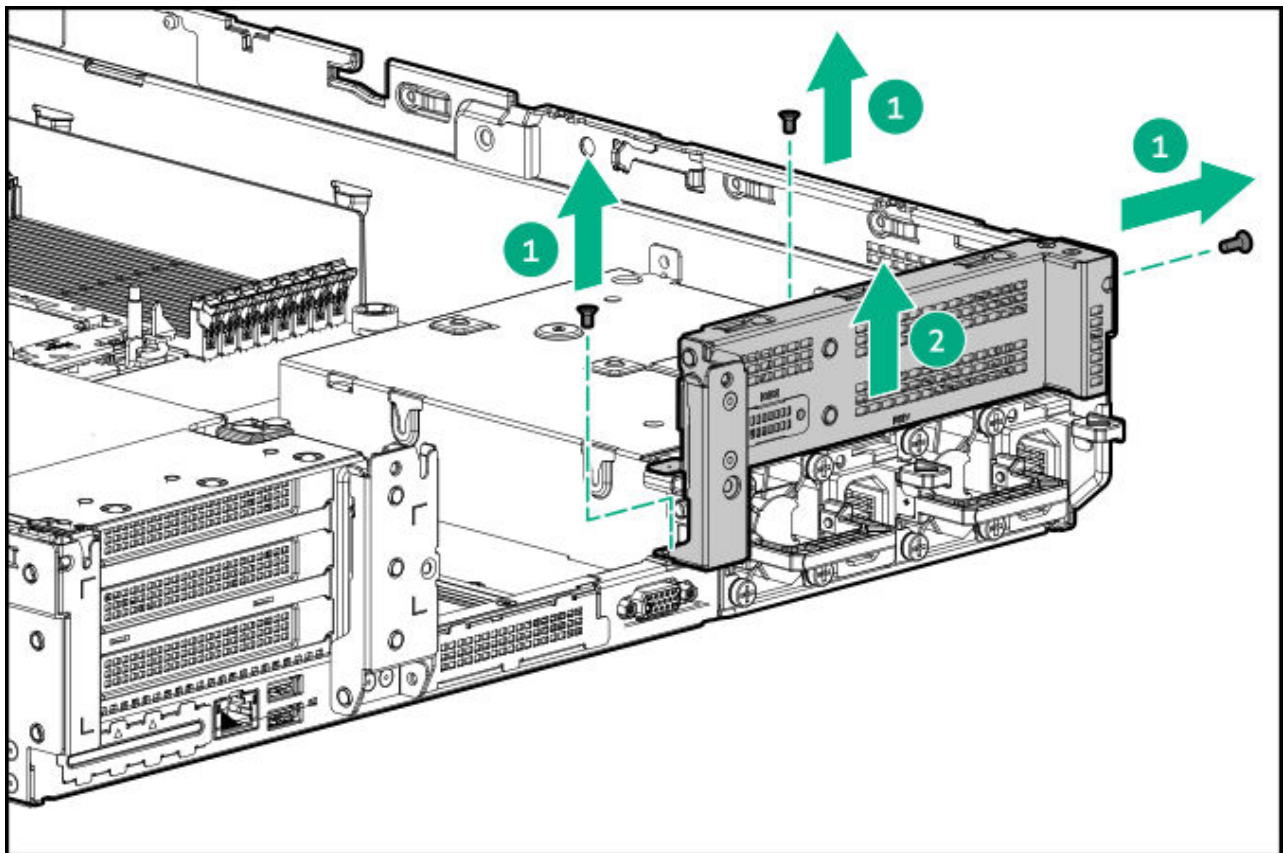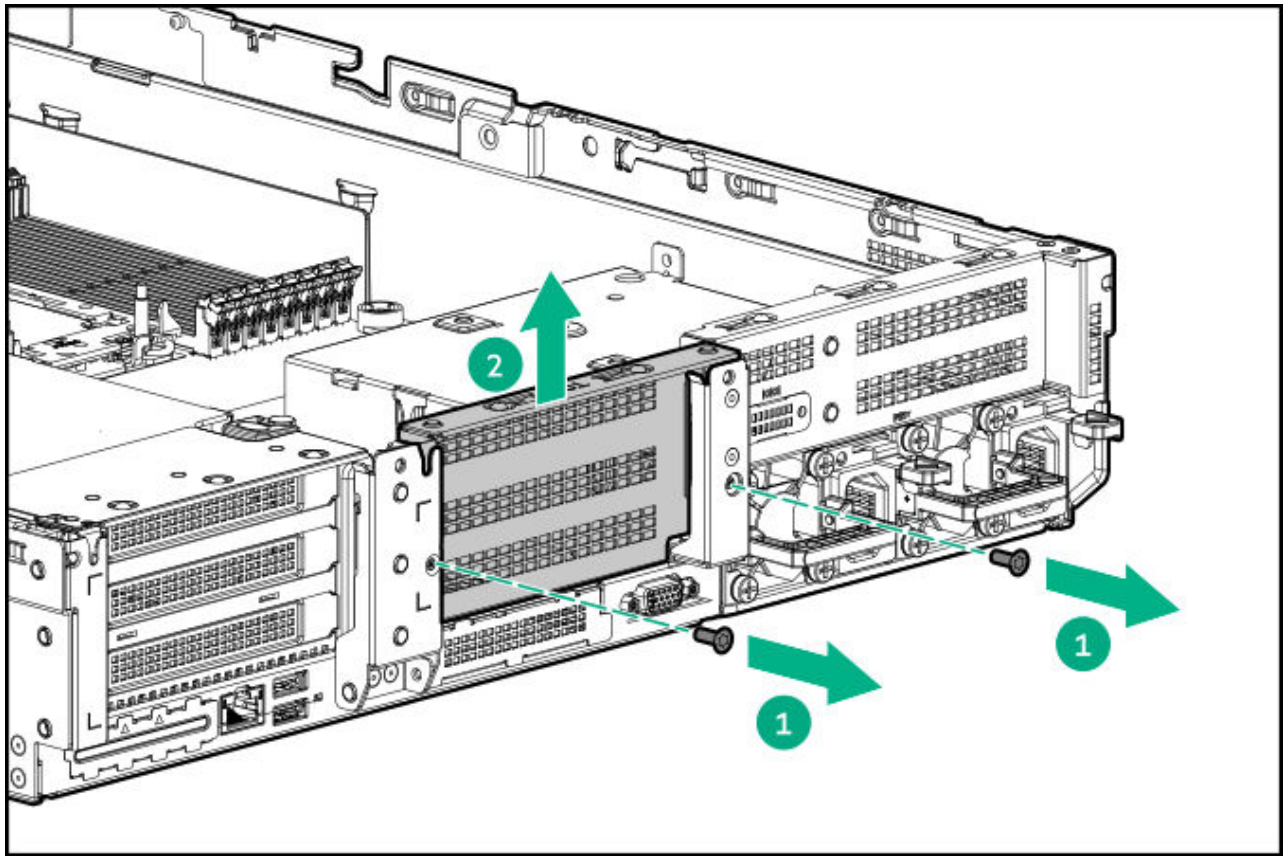

7. Install the rear blank from the option kit.

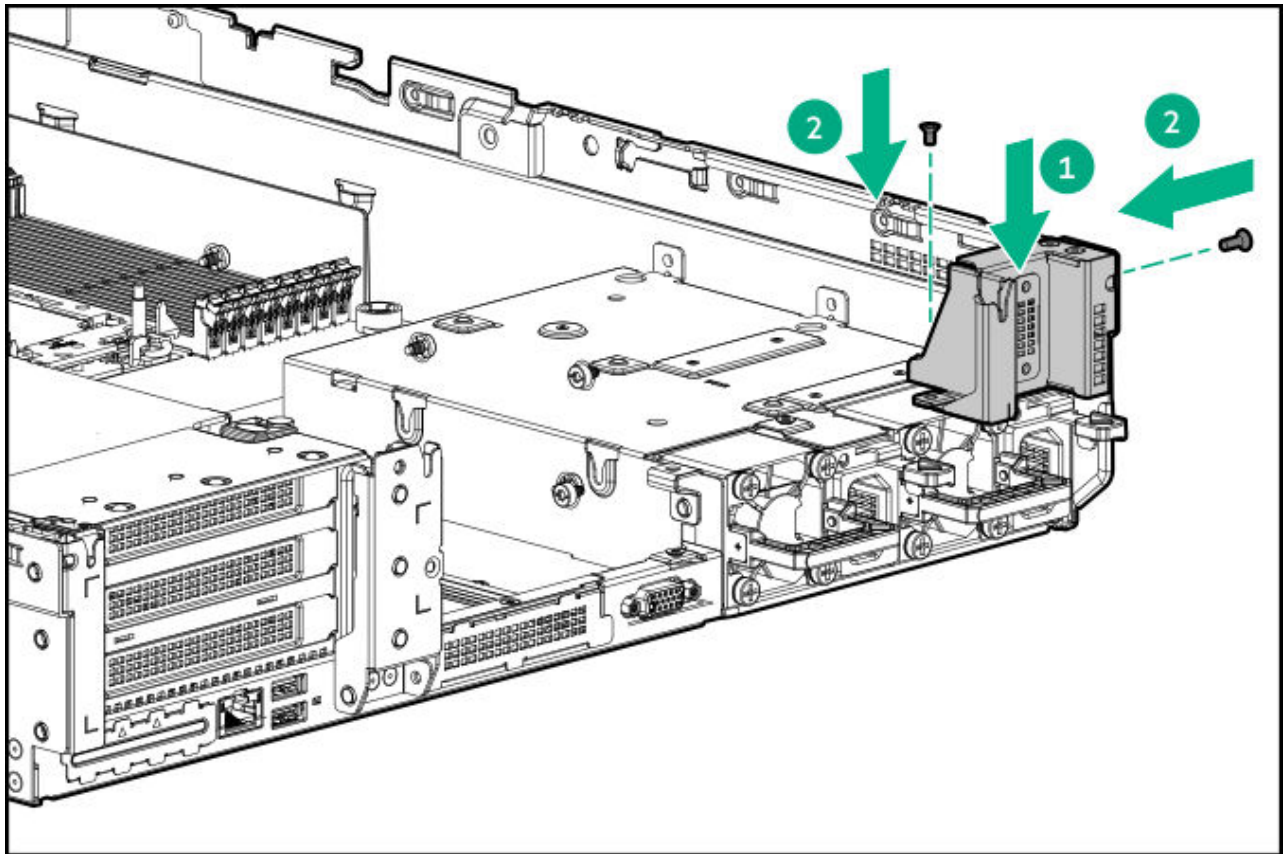

8. Install any expansion boards, if needed
9. Install the tertiary riser cage:

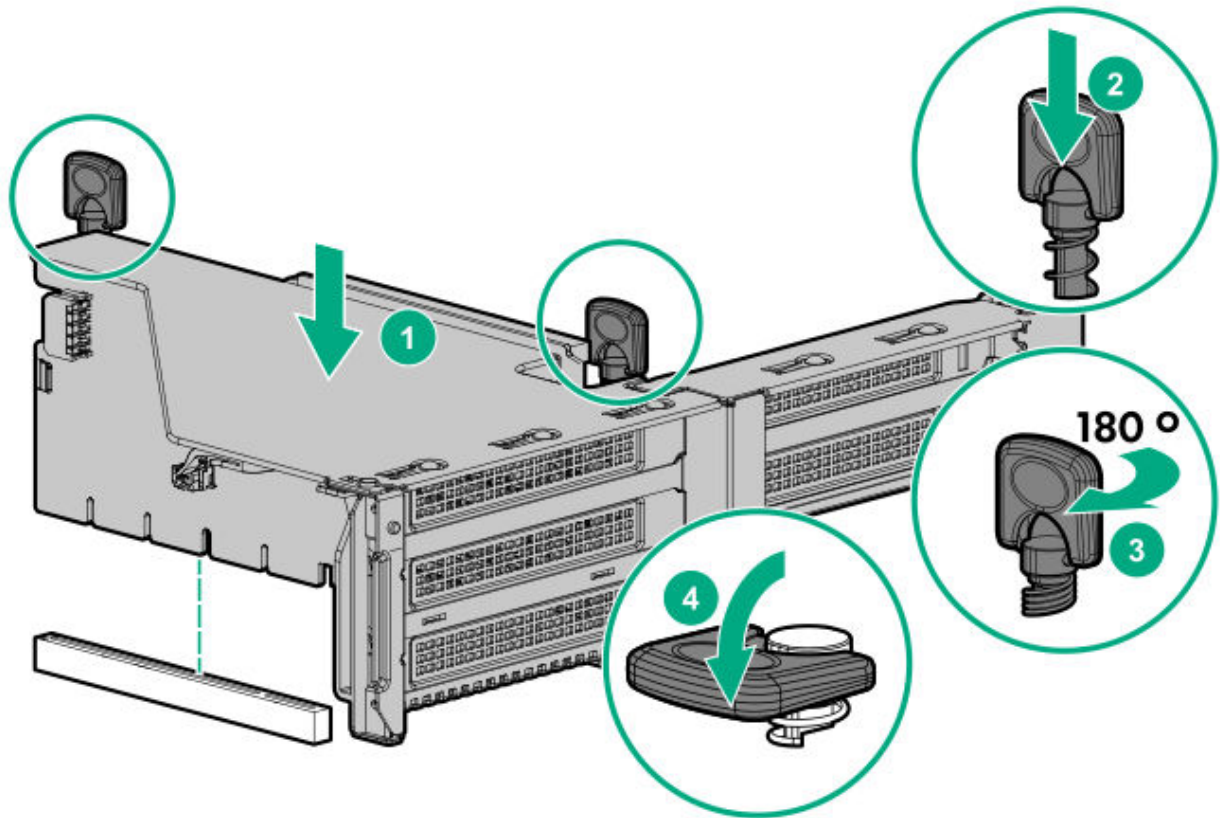

## Results

The installation is complete.

## Expansion slots

### Subtopics

[Supported PCIe form factors](#)


[Installing expansion boards](#)

[Accelerator options](#)

## Supported PCIe form factors

All slots support full-height expansion cards. Use the following information to find supported lengths for each slot.

## Slot description example

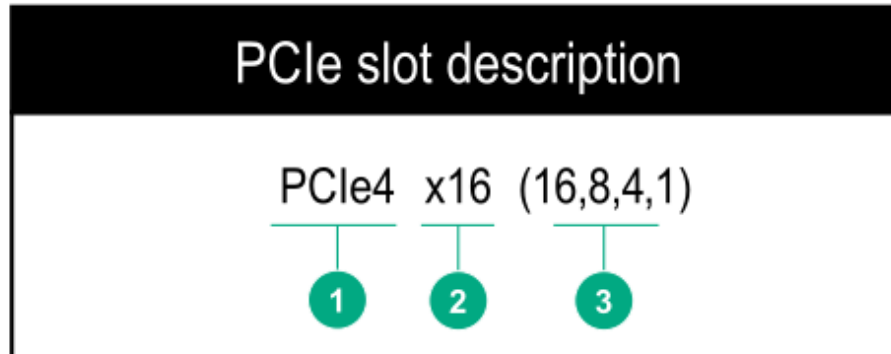

### Primary riser connector

PCIe slot and card length	3-slot riser*	2-slot riser (Optional)	2-slot riser (Optional)
Slot 1 - Full-length/Full-height (FL/FH)	PCIe4 x8 (8, 4, 2, 1)	—	PCIe3 x16 (16, 8, 4, 2, 1)
Slot 2 - Full-length/Full-height (FL/FH)	PCIe4 x16 (16, 8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)
Slot 3 - Half-length/Full-height (HL/FH)	PCIe4 x8 (8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)	—

\*The server ships with one PCIe3 riser cage installed in the primary riser cage connector.

### Secondary riser connector

PCIe slot and card length	3-slot riser*	2-slot riser (Optional)	2-slot riser (Optional)
Slot 4 - Full-length/Full-height (FL/FH)	PCIe3 x8 (8, 4, 2, 1)	—	PCIe3 x16 (16, 8, 4, 2, 1)
Slot 5 - Full-length/Full-height (FL/FH)	PCIe3 x16 (16, 8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)
Slot 6 - Half-length/Full-height (HL/FH)	PCIe3 x8 (8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)	—

## Tertiary riser connector

PCIe slot and card length	2-slot riser (Optional)	1-slot riser (Optional)
Slot 7 - Full-length/Full-height (FL /FH)	PCIe3 x8 (8, 4, 2, 1)	PCIe3 x16 (16, 8, 4, 2, 1)
Slot 8 - Half-length/Full-height (H L/FH)	PCIe3 x8 (8, 4, 2, 1)	—

## Installing expansion boards

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

The components included with the hardware option kit

### About this task



**WARNING:** To reduce the risk of personal injury, electric shock, or damage to the equipment, remove the power cord to remove power from the server. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.



**CAUTION:** To prevent improper cooling or thermal damage, do not operate the server unless all PCI slots have either an expansion slot cover or an expansion board installed.

To install the component:


### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.


- Remove the server from the rack.

4. Remove the access panel.


5. Remove the riser cage.

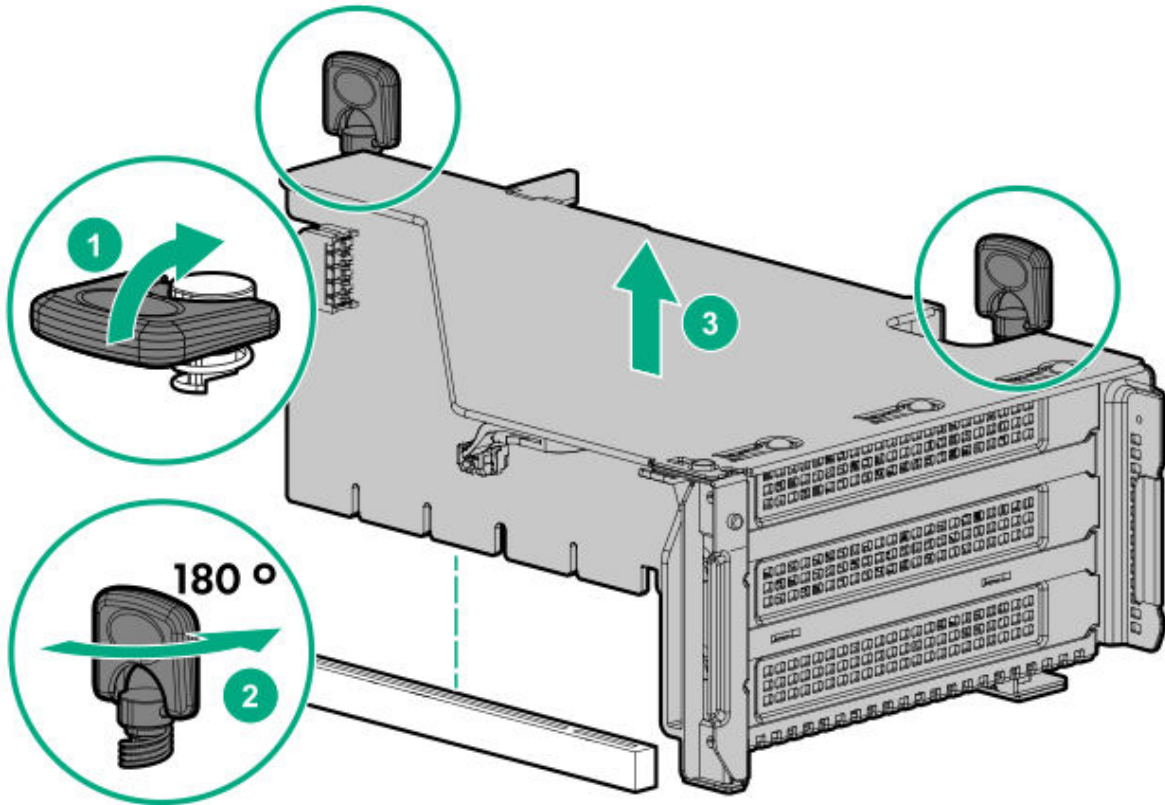

6. Identify and then remove the PCIe blank from the riser cage.

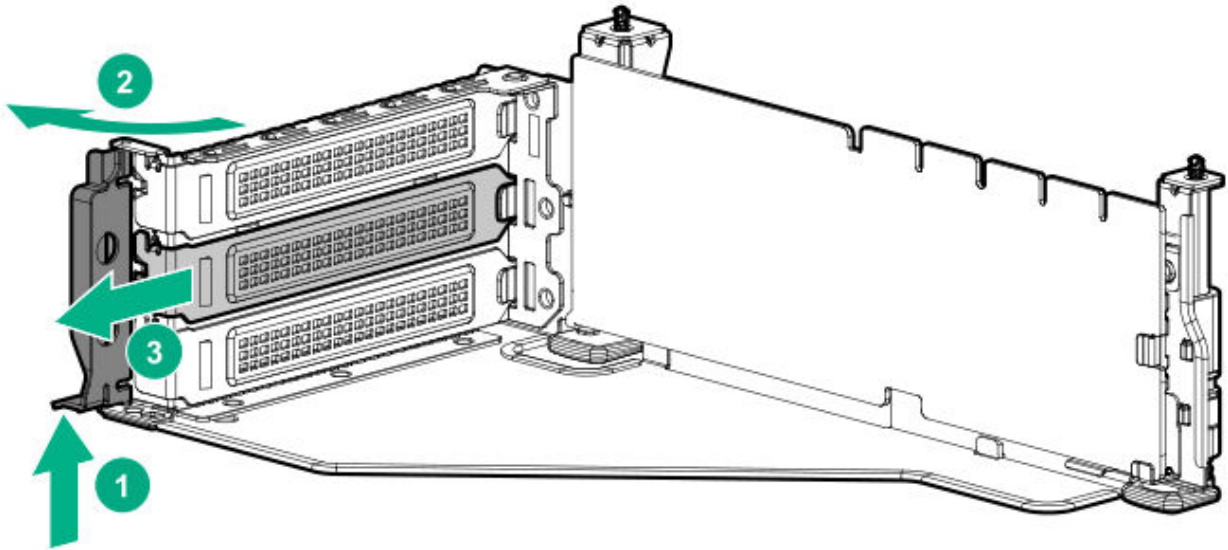


7. Install the expansion board.

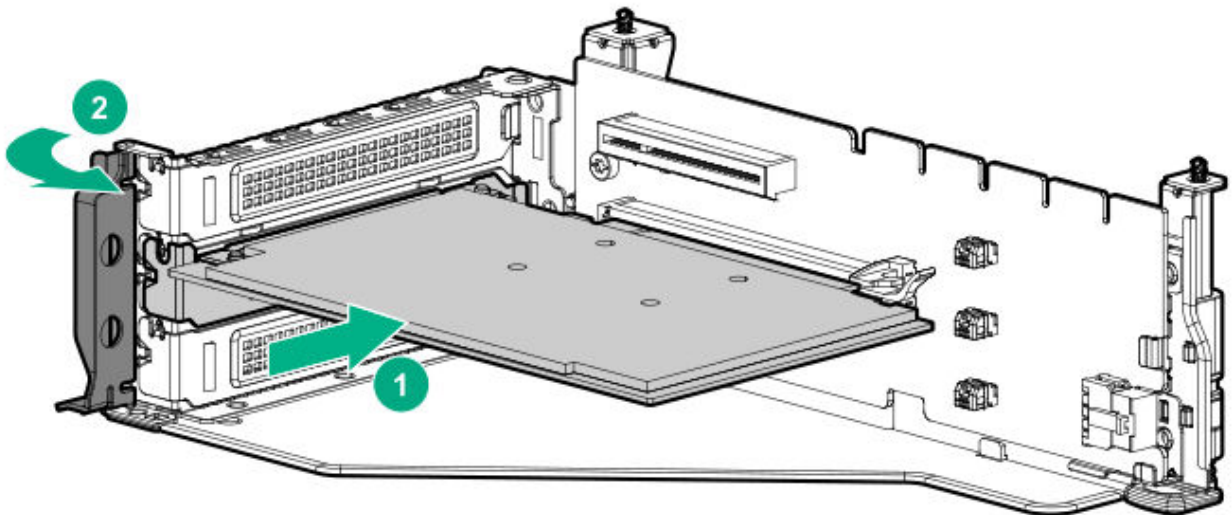

8. If internal cables are required for the expansion board, connect the cables.

9. Install the riser cage.

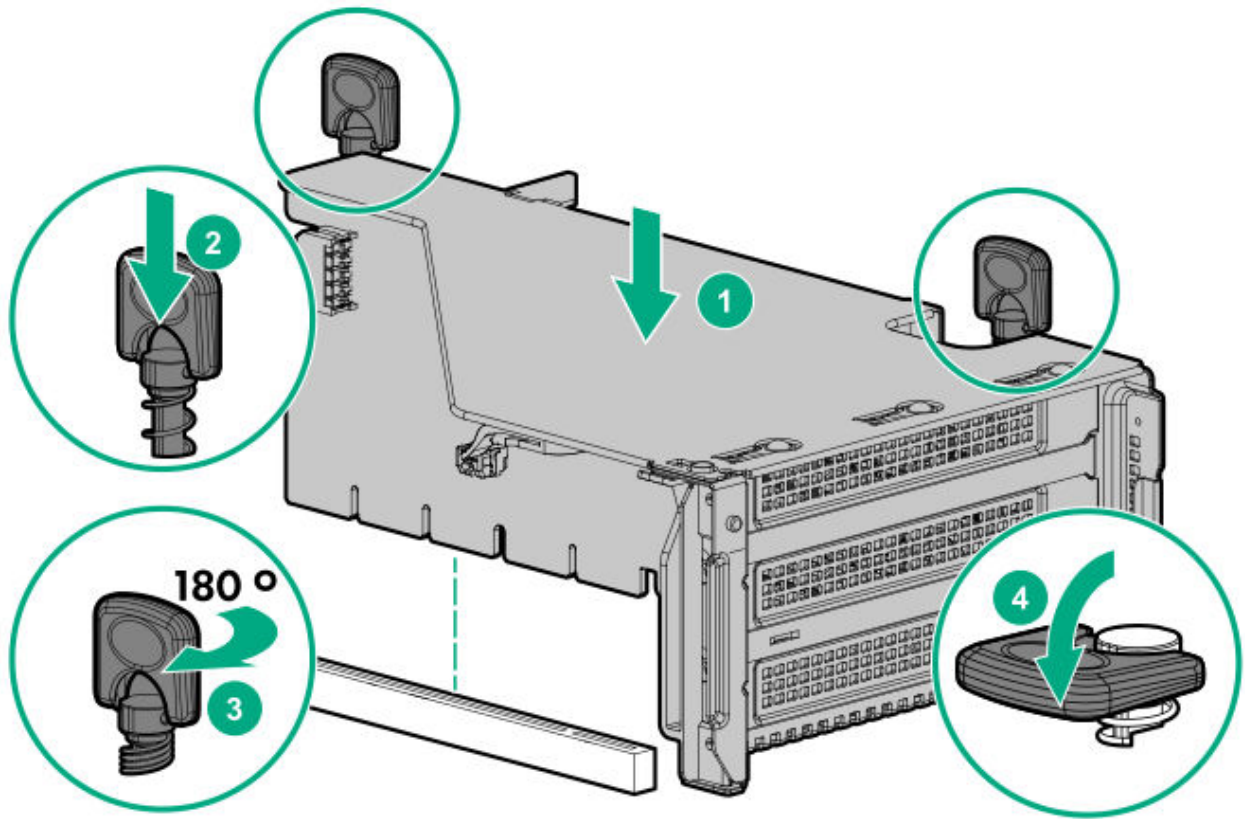

- .0. Install the access panel.
- .1. Slide the server into the rack.
- .2. Connect each power cord to the server.
- .3. Connect each power cord to the power source.
- .4. Power up the server.

## Results

The installation is complete.

## Accelerator options

This server supports various accelerator options to meet your computational and graphics workload requirements. For a list of supported accelerator models, see the server QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>).

- PCIe workload accelerators – These options are PCIe card-based, direct-attach solutions that use solid-state storage technology directly on the PCI bus to boost I/O performance and reduce latency to scale in line with your processing requirements.
- Computational and graphics accelerators – These options deliver accelerated compute performance for a range of deep learning, high-performance computing (HPC), and graphics-intensive applications.

## Subtopics

### Installing an accelerator or GPU

## Installing an accelerator or GPU

### Prerequisites

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-30 Torx screwdriver
- T-10 Torx screwdriver
- High-performance heatsinks must be installed with this option.

### About this task

An accelerator or GPU can be installed into the primary, secondary, or tertiary position. This procedure shows an installation in the secondary position.

### Procedure

1. Observe the following alert.




**CAUTION:** To prevent improper cooling and thermal damage, do not operate the server unless all PCIe slots have either an expansion slot cover or an expansion board installed.

2. Power down the server.
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Do one of the following:


- Extending the server from the rack.
  - Removing the server from the rack.
5. Remove the access panel.
  6. Removing the air baffle or midplane drive cage.
  7. Install the appropriate retention clip onto the air baffle.

Install the clip that supports your configuration. Primary, secondary, and tertiary positions are shown.

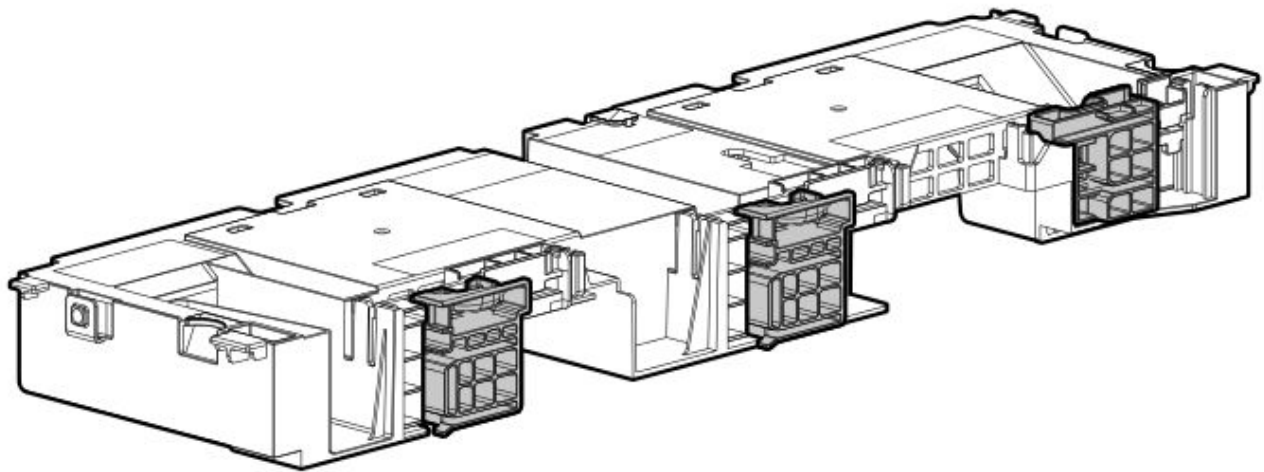

8. Install high-performance heatsinks.
9. Install the air baffle.
10. Remove the rear wall blank.


The secondary rear wall blank is shown.

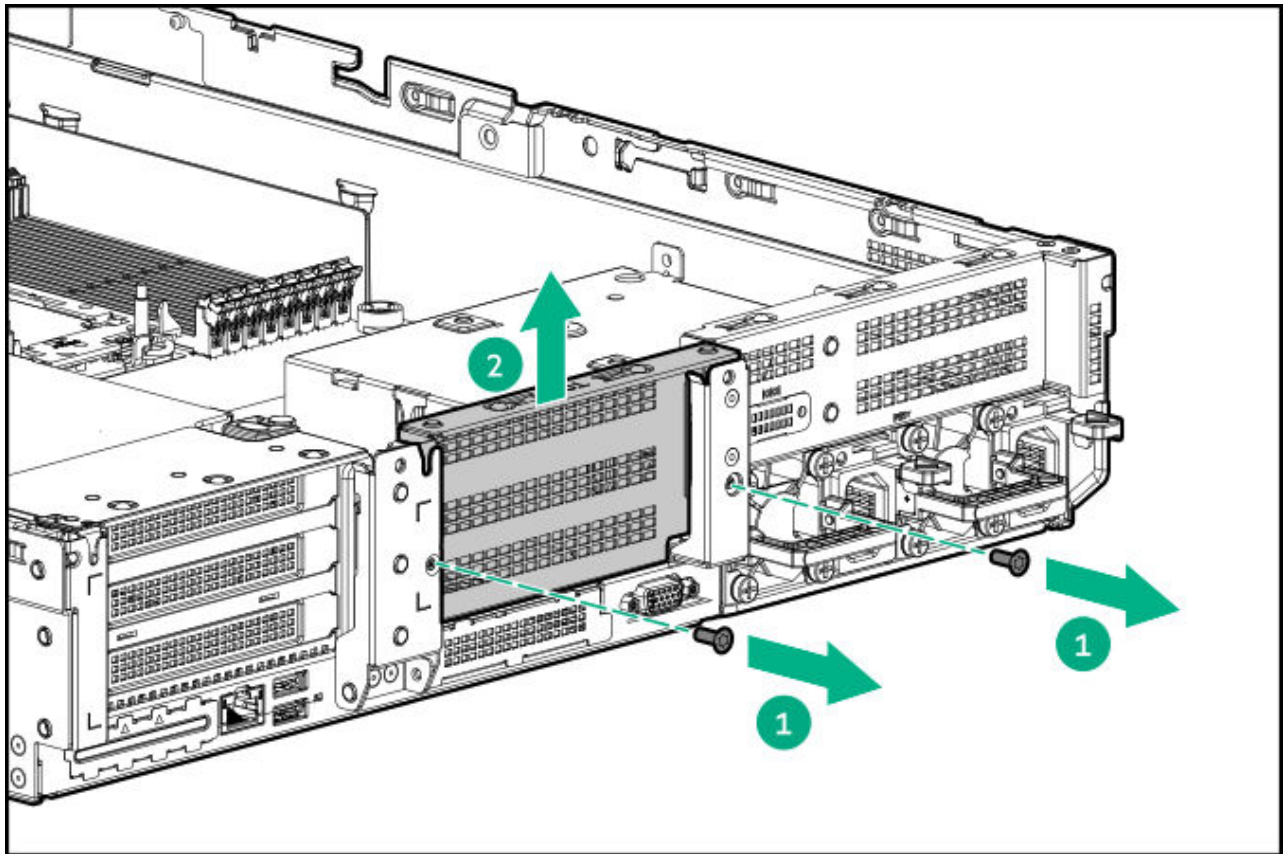


To install a riser card in the primary riser cage, see "[Removing a riser cage](#)".

To install a riser card in the tertiary riser cage, see "[Installing tertiary risers](#)".

1. Remove the PCIe blank.

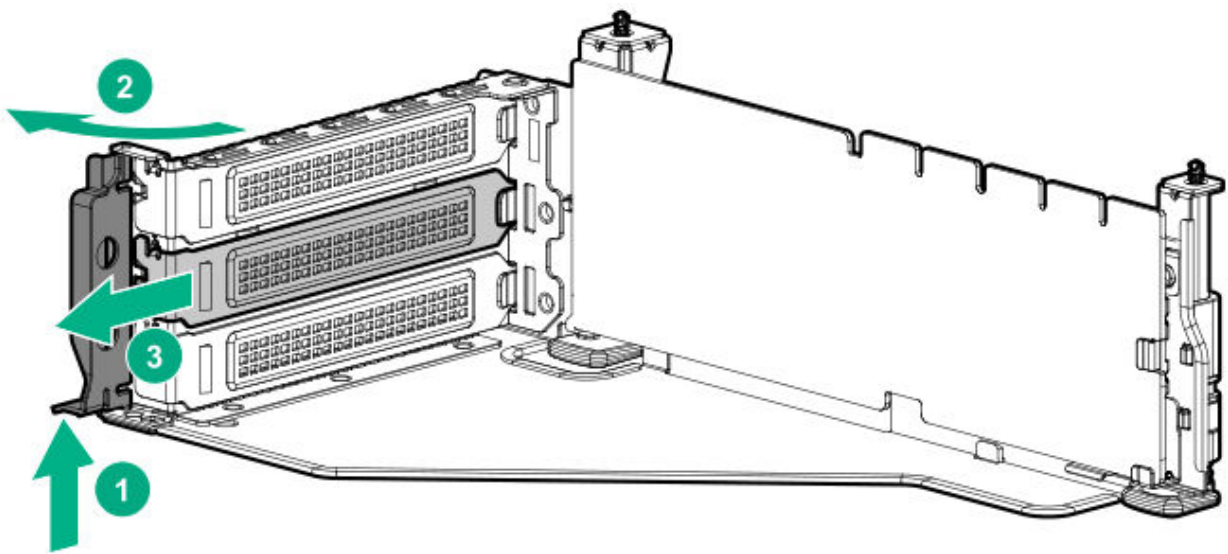


.2. Install the card into the riser.

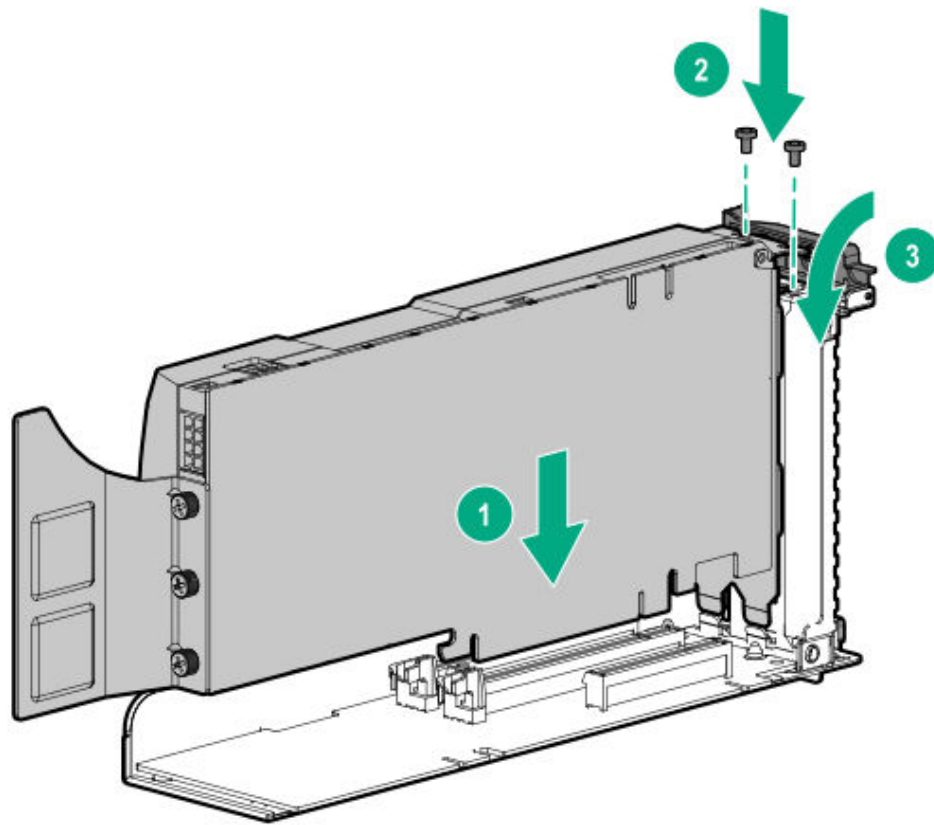


.3. If required, connect the power cable from the card to the riser.


.4. For full-length cards, open the retention clips.

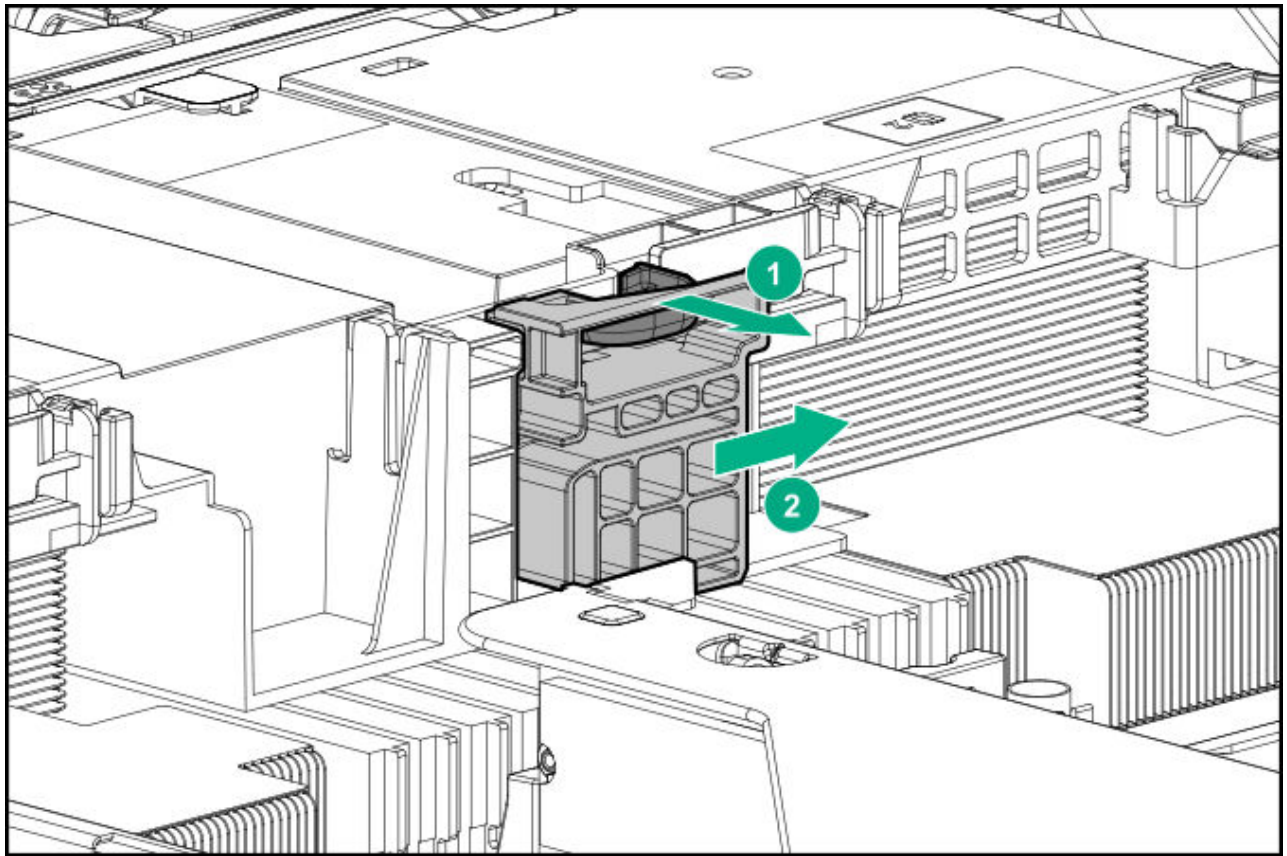

.5. Install the riser cage.

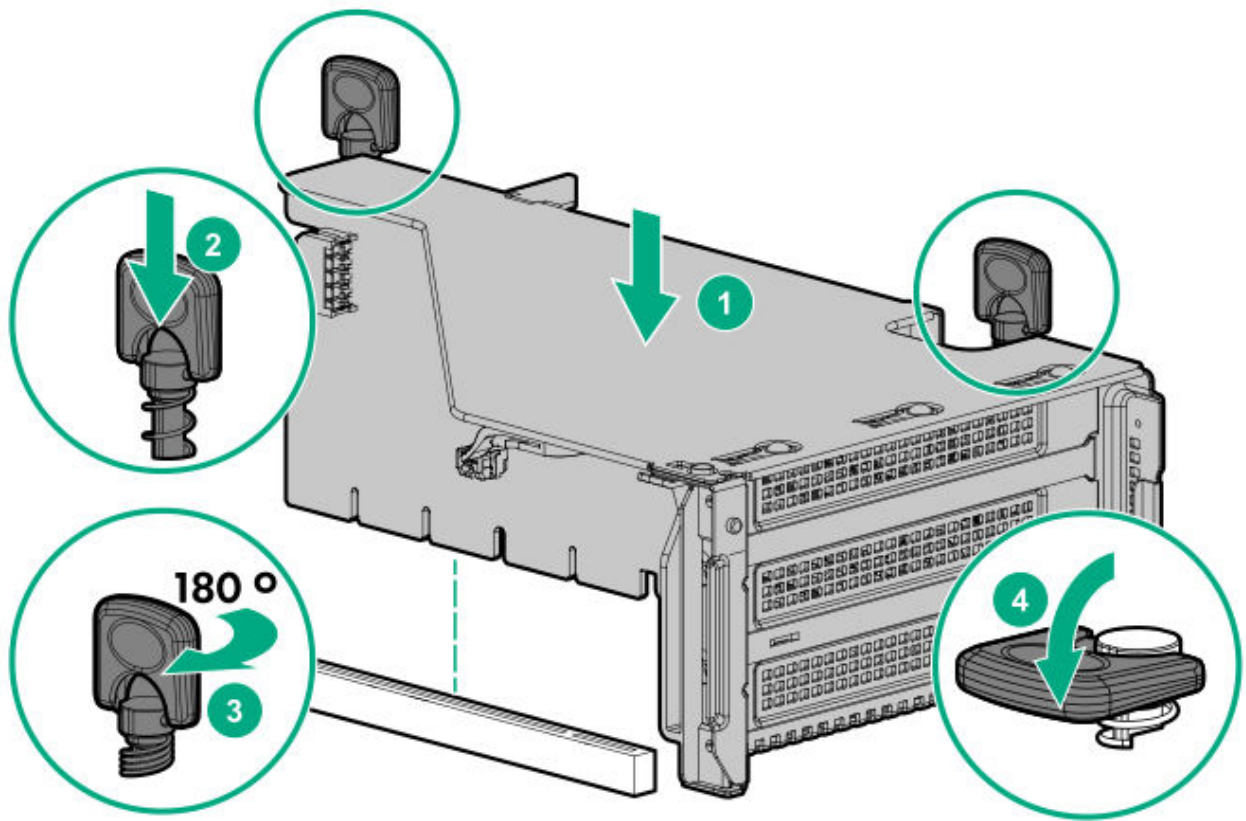

.6. For full-length cards, slide the retention clips to the locked position.

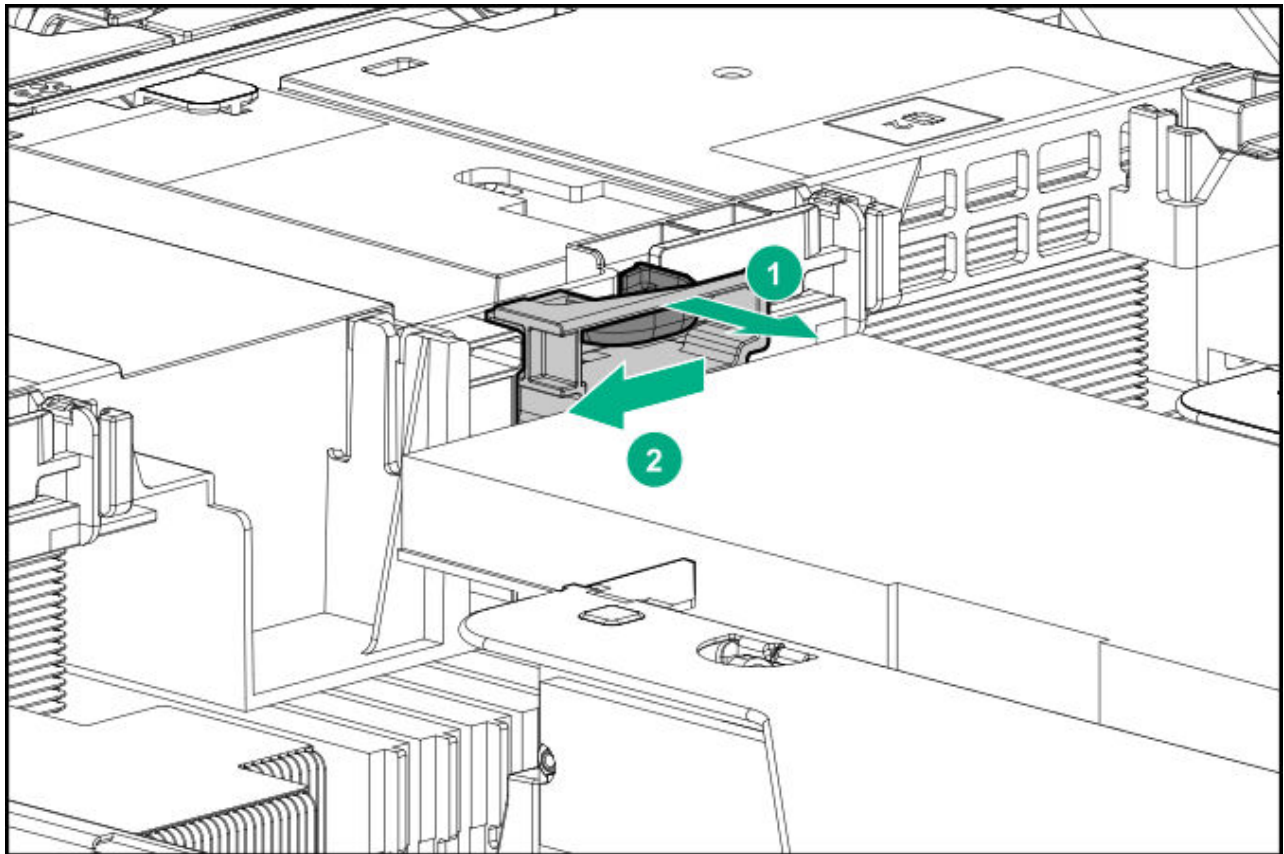

## Results

The installation is complete.

## Drive cage options

### Subtopics

**[Installing a front 8NVMe drive cage](#)**

**[Installing a front 8 SFF SAS/SATA drive cage in box 1](#)**

**[Installing a front 8 SFF SAS/SATA drive cage in box 2](#)**

**[Installing a front/tertiary 2 SFF NVMe/SAS/SATA stackable drive cage](#)**

**[Installing a midplane drive cage](#)**

**[Installing a rear 2 SFF SAS/SATA drive cage in the primary or secondary riser](#)**

**[Installing a rear 2 SFF SAS/SATA drive cage over the power supplies](#)**

**[Installing a rear 2LFF SAS/SATA drive cage in the primary or secondary riser](#)**

# Installing a front 8NVMe drive cage

## Prerequisites

High-performance fans are required when installing this option.

## About this task

The drive cage can be installed in any box. This procedure covers installing the drive cage in box 1.

## Procedure

1. Observe the following alerts.





**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.




**CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause ESD.

2. Power down the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.
6. Remove the fan cage.
7. Remove the blank.

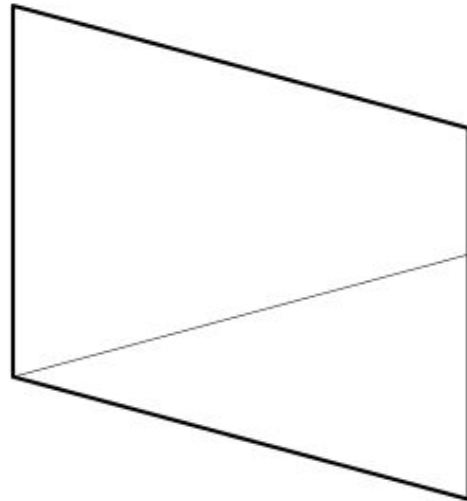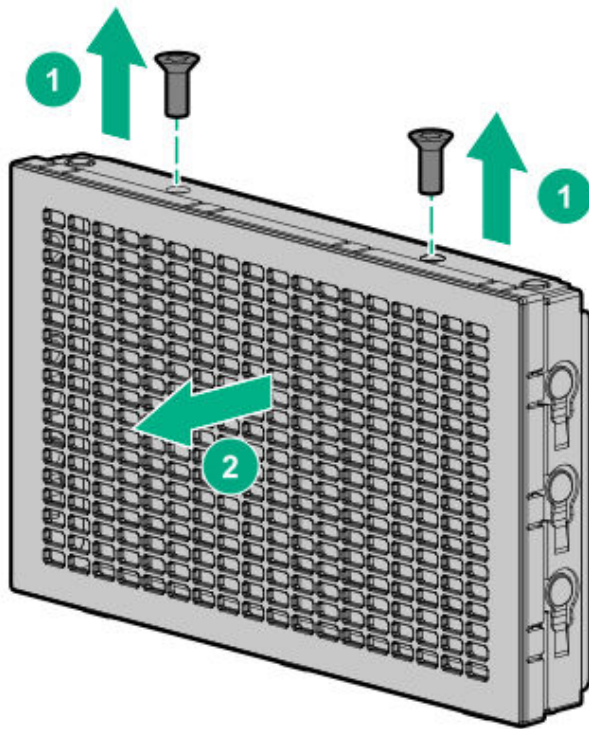

8. Install the drive cage:
  - a. Remove all drive blanks.
  - b. Install the drive cage.

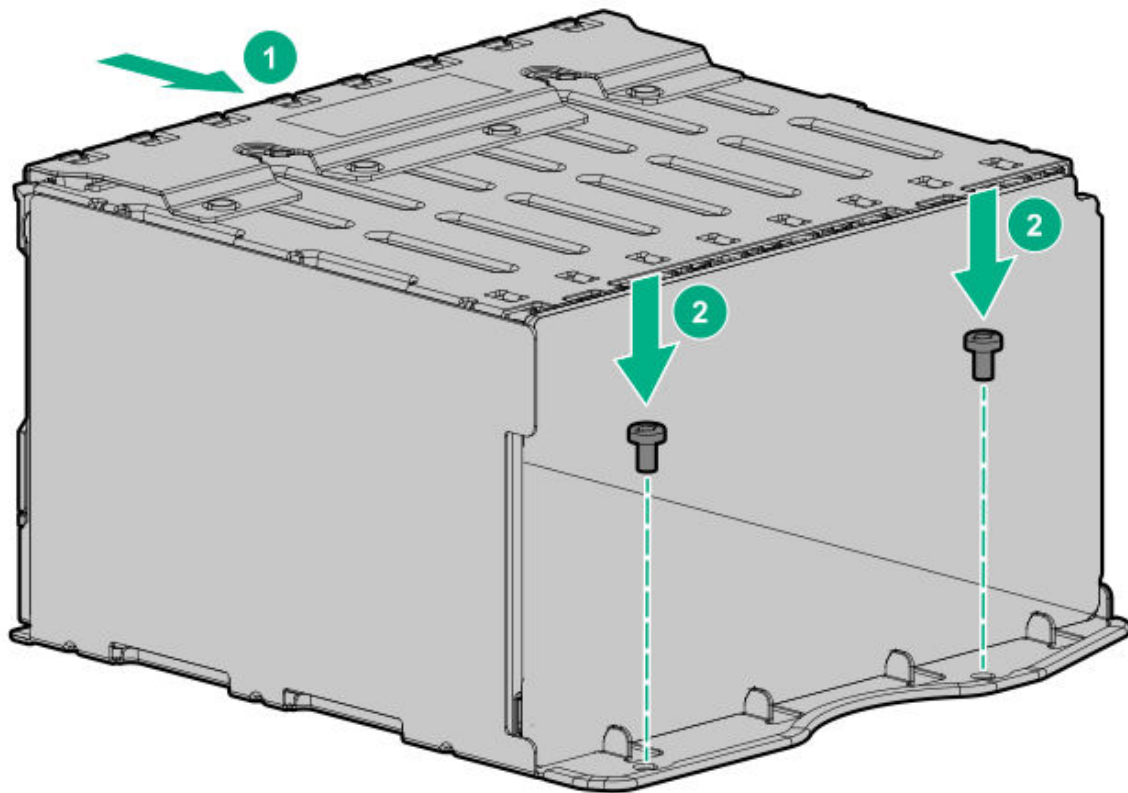

9. Install the associated NVMe riser.
10. Connect the power cable to the drive backplane power connector.
11. Connect the data cables from the drive backplane to the NVMe riser.
12. Install drives or drive blanks.

### Results

The installation is complete.

## Installing a front 8 SFF SAS/SATA drive cage in box 1


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- T-15 Torx screwdriver
- The components included with the hardware option kit

## Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.
6. Remove the fan cage.
7. Remove the bay blank.

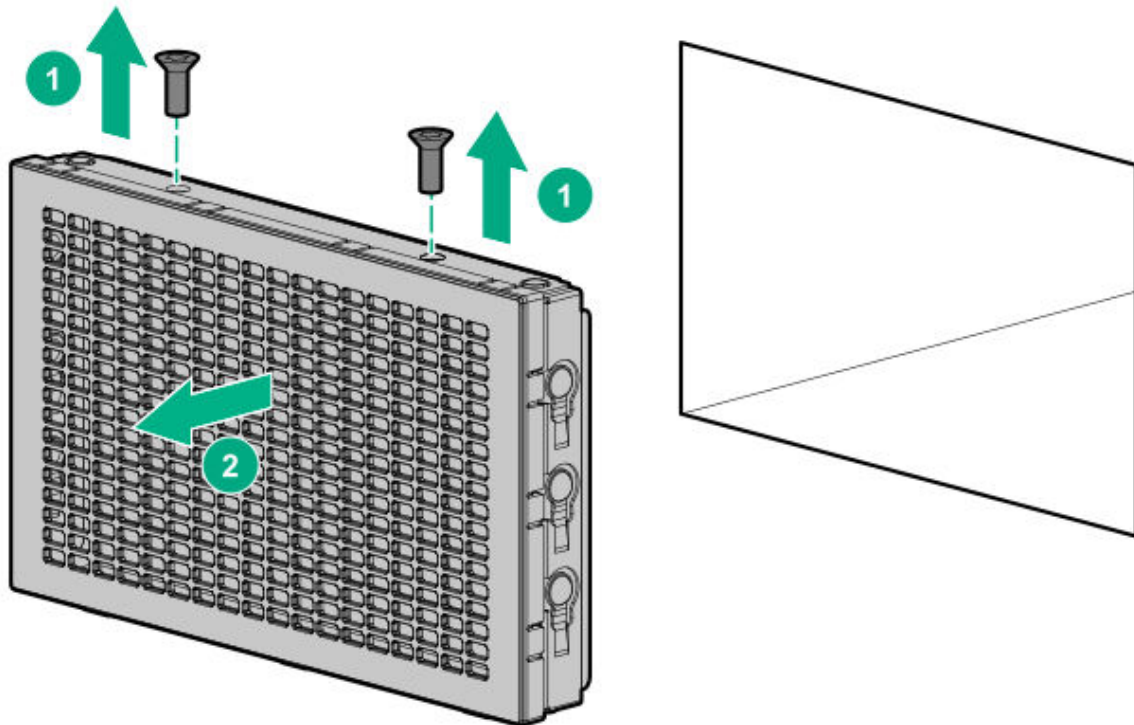

8. Install the 8 SFF front drive cage option.

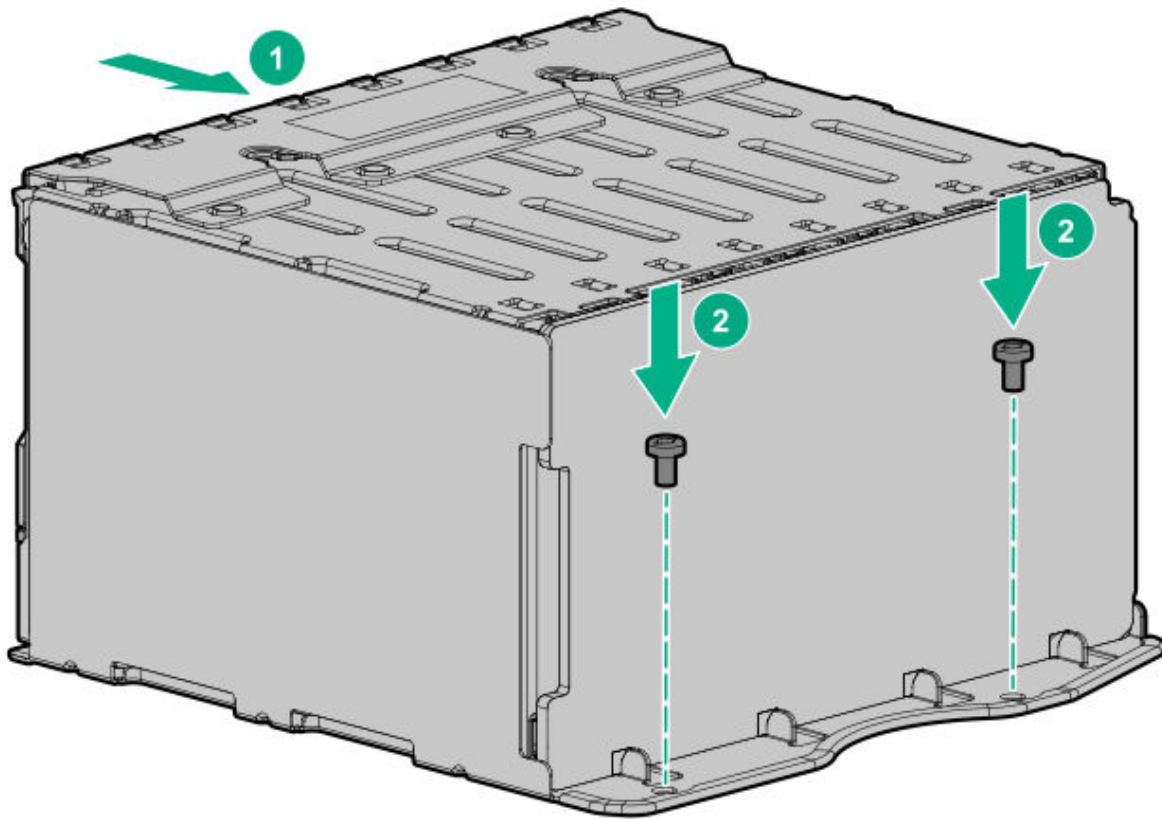

9. Connect the power and data cables.
- .0. Install the fan cage.
- .1. Install the air baffle.
- .2. Install the access panel.
- .3. Slide the server into the rack.
- .4. Connect each power cord to the server.
- .5. Connect each power cord to the power source.
- .6. Power up the server.

## Installing a front 8 SFF SAS/SATA drive cage in box 2


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- T-15 Torx screwdriver
- The components included with the hardware option kit

### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.
6. Remove the fan cage.
7. Remove the bay blank.

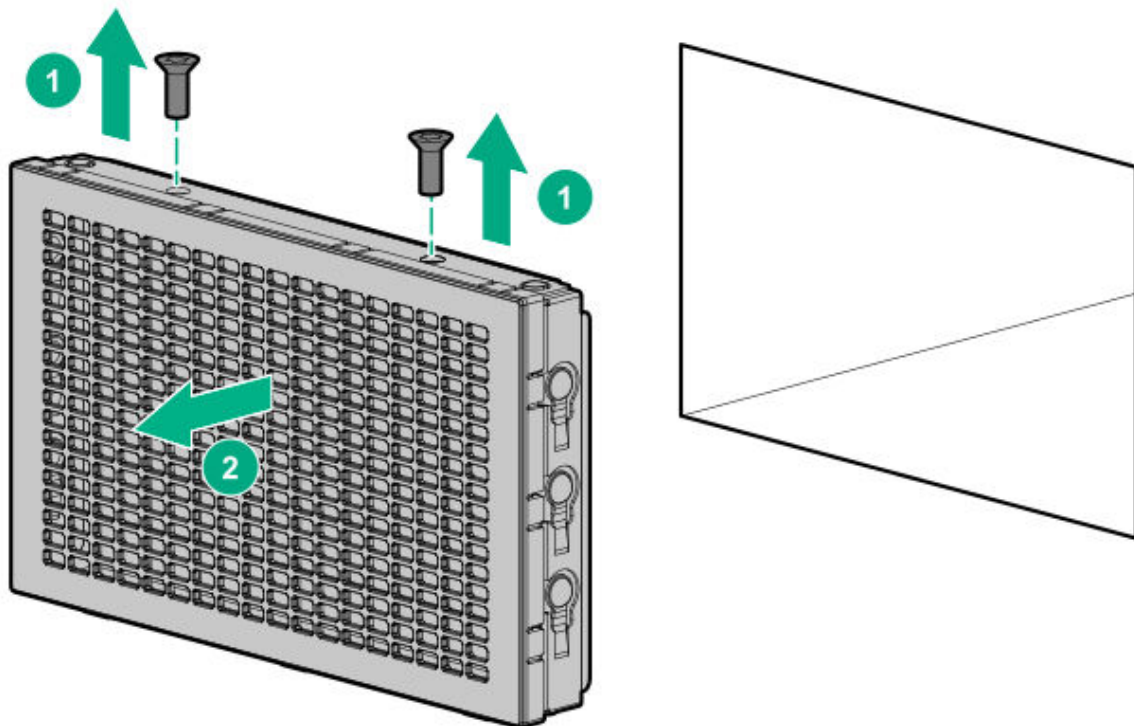

8. Install the 8 SFF front drive cage option.

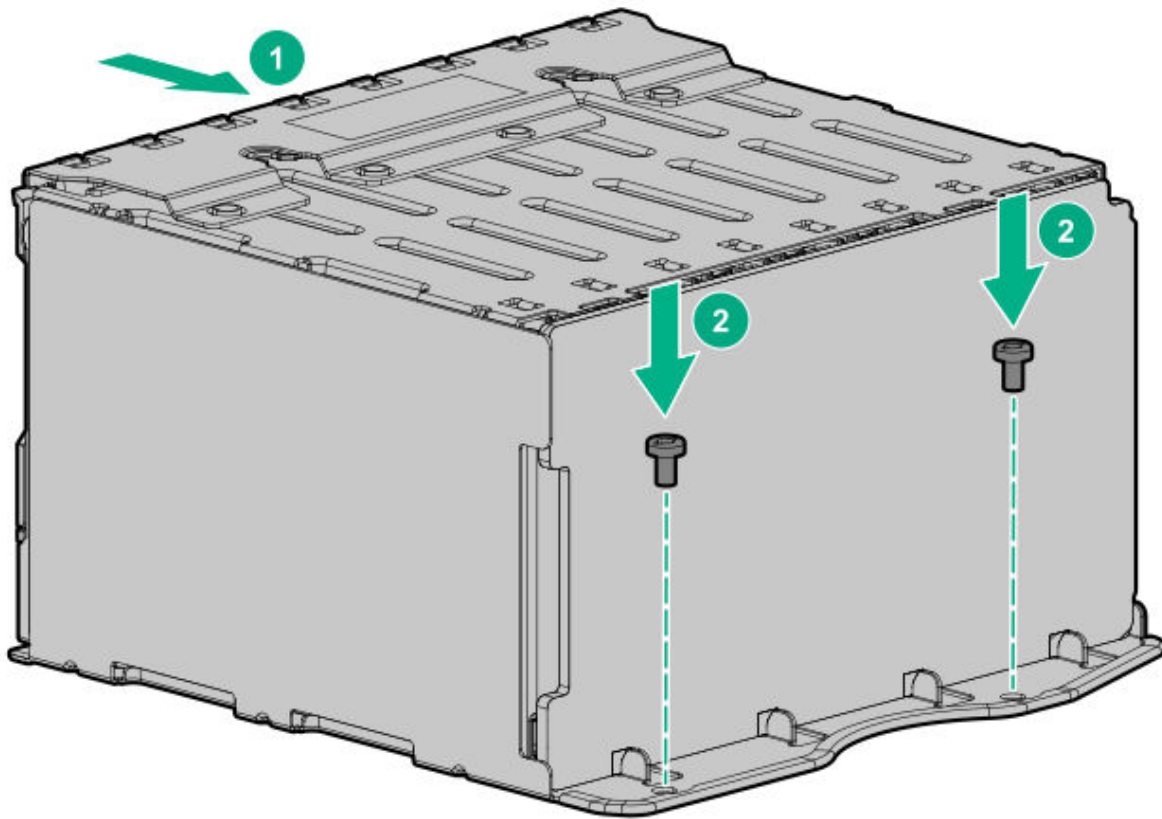

9. Connect the power and data cables.
0. Install the fan cage.
- .1. Install the access panel.
- .2. Slide the server into the rack.
- .3. Connect each power cord to the server.
- .4. Connect each power cord to the power source.
- .5. Power up the server.

# Installing a front/tertiary 2 SFF NVMe/SAS/SATA stackable drive cage


## Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- T-10 Torx screwdriver
- The components included with the hardware option kit
- This installation requires a universal media bay.

## Procedure


1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the front bay blank.

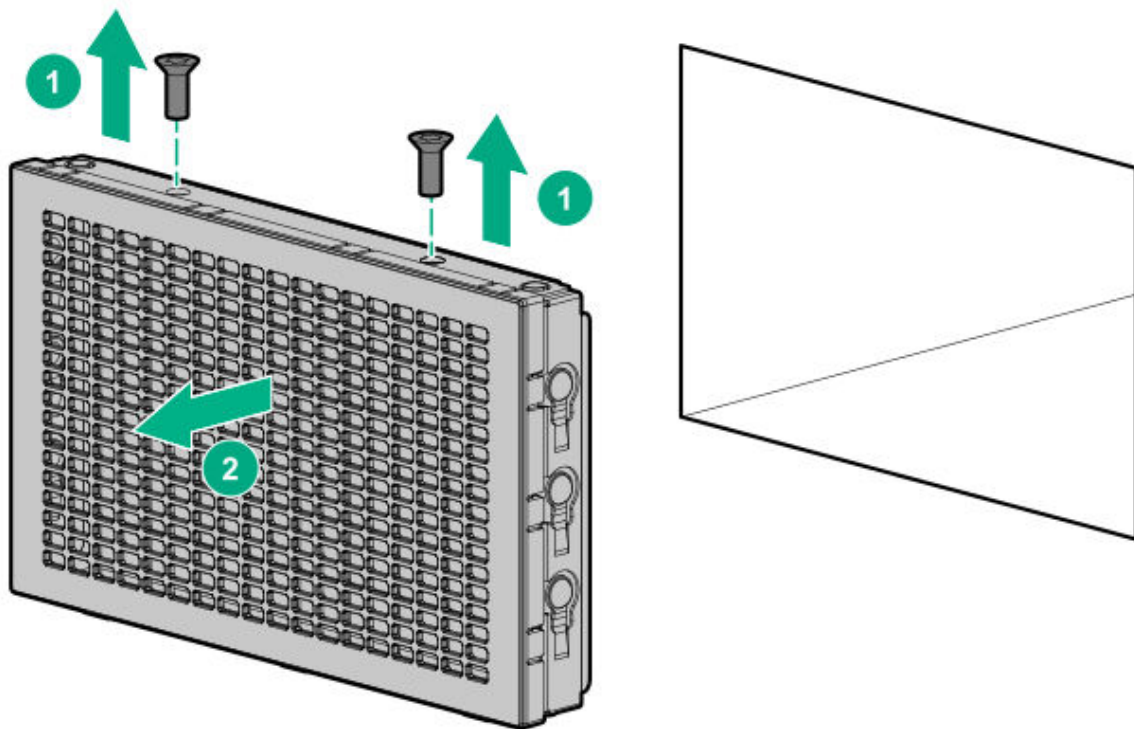


6. Remove the optical disc drive tray from the universal media bay.

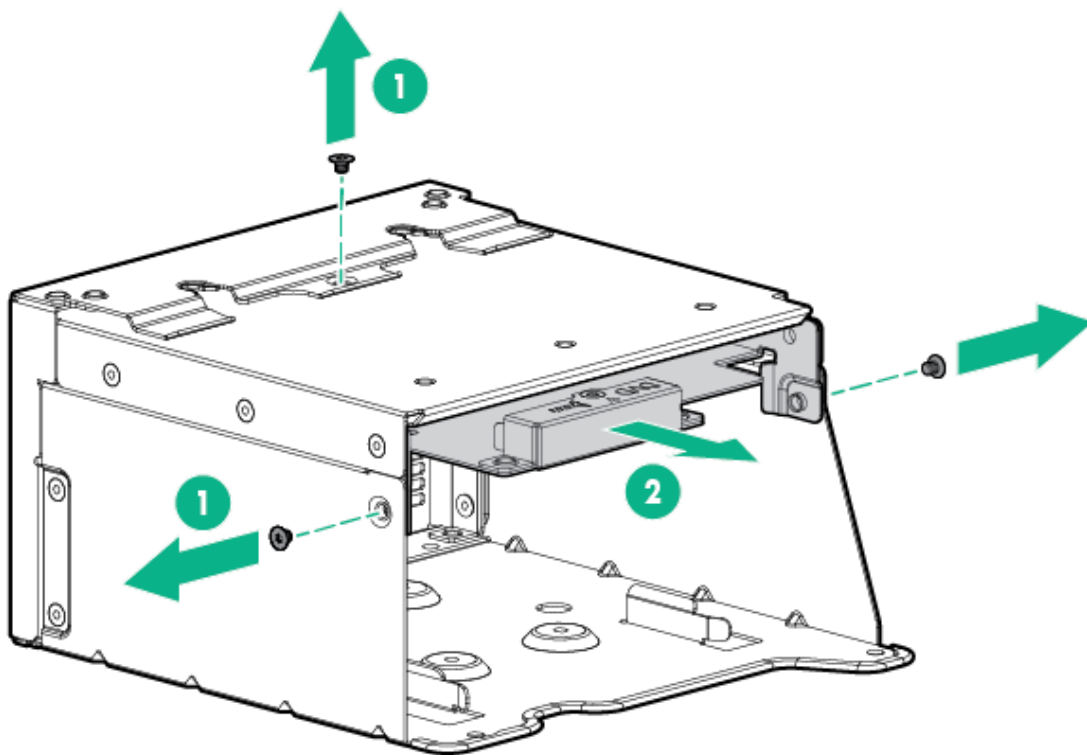


7. Remove the SFF drive blank from the universal media bay.

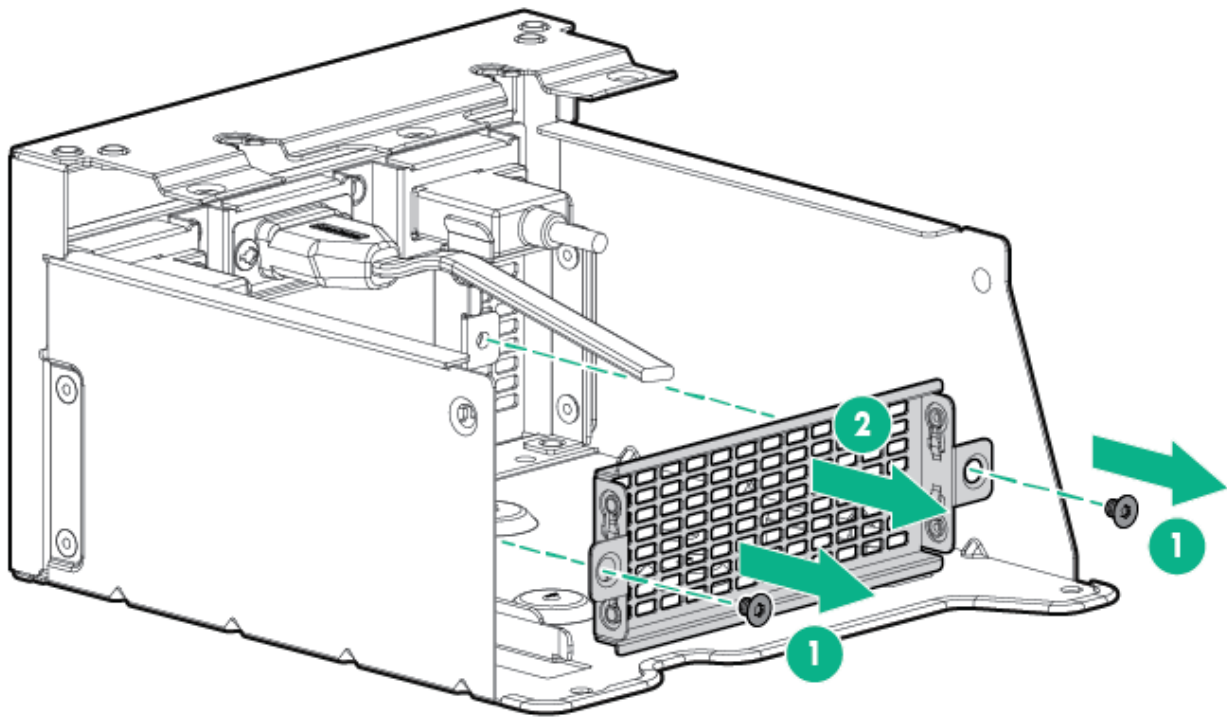

8. Install the drive cage into the universal media bay.

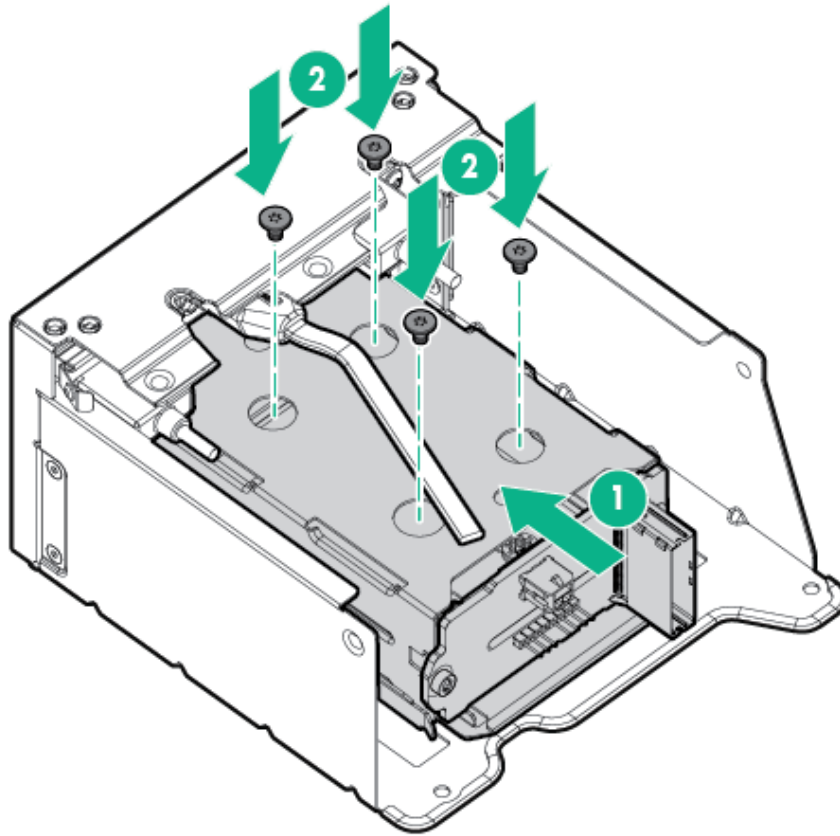

9. Install the optical disc drive tray.

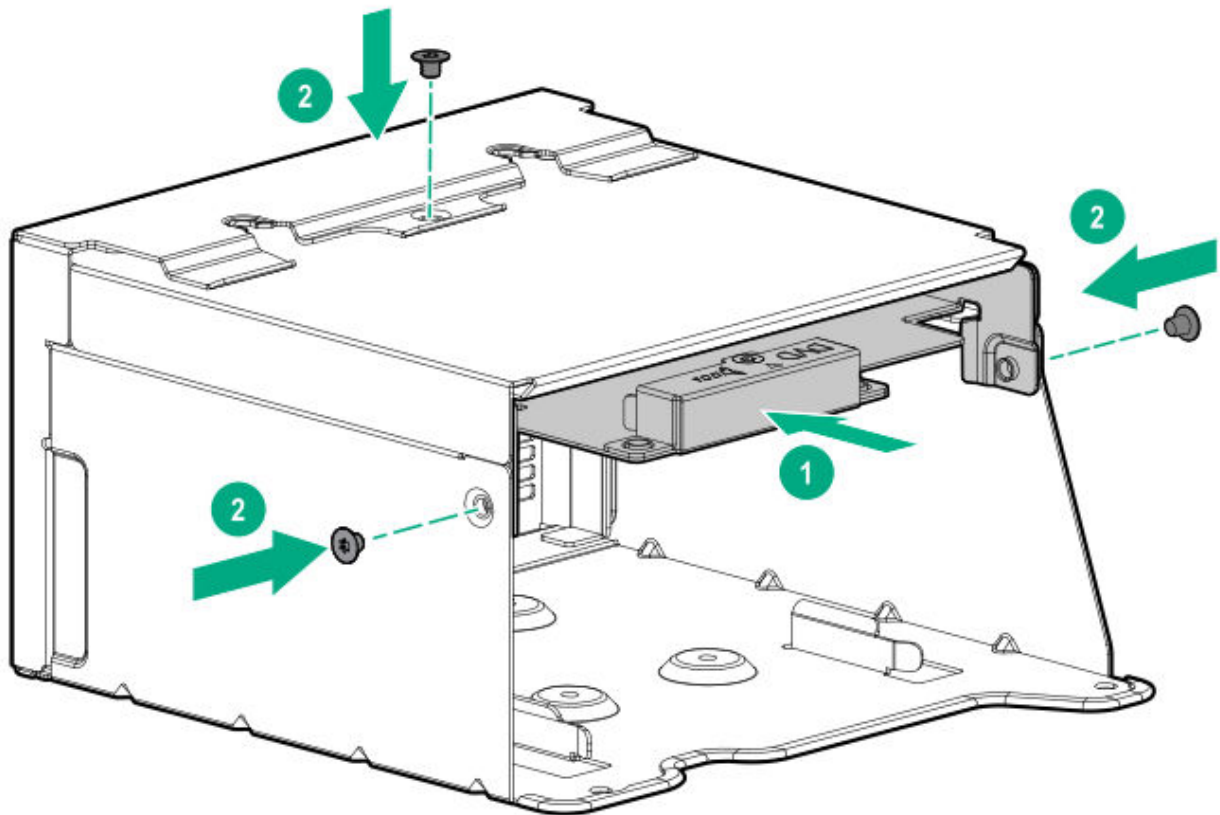

- .0. Install the Universal Media Bay.
- .1. Connect the power and data cables.
- .2. Install the access panel.
- .3. Slide the server into the rack.
- .4. Connect each power cord to the server.
- .5. Connect each power cord to the power source.
- .6. Power up the server.

## Installing a midplane drive cage

### Prerequisites

Before you perform this procedure, make sure that the components included with the hardware option kit are available.

## About this task


Observe the following:

- A 1U heatsink is required for each processor when installing this option.
- If you have a TPM, install it prior to this option.
- If you have a type-a controller, install it prior to this option.



## Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.

The air baffle is no longer needed. The drive cage acts as an air baffle for the server.

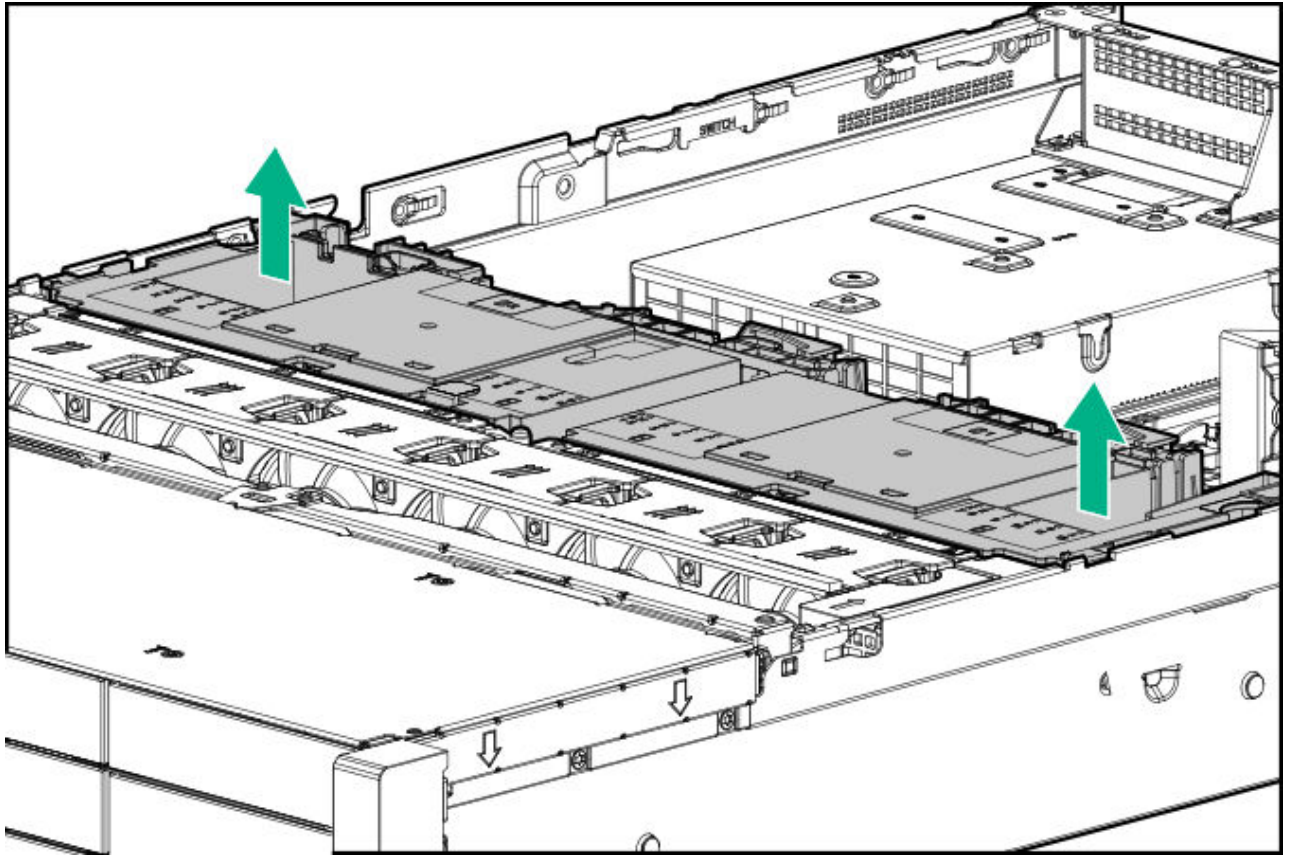

6. Remove all riser cages.

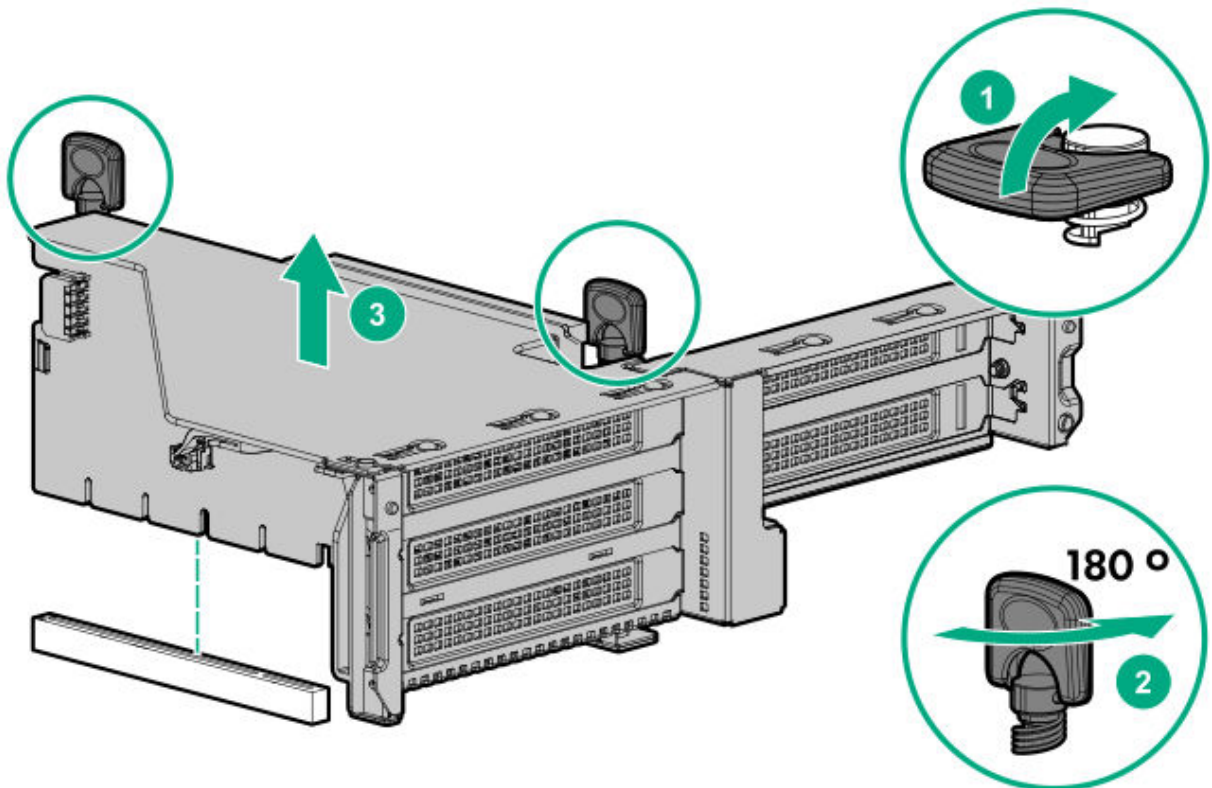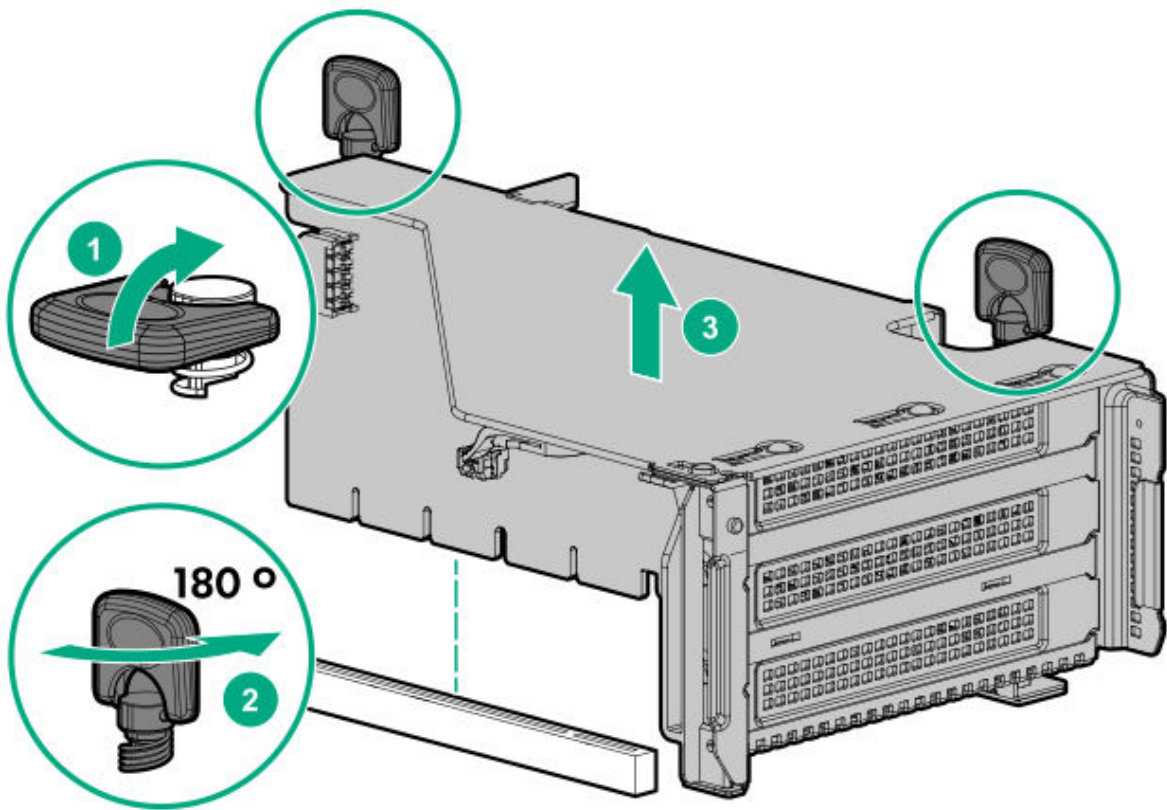


7. Connect the power cable to the drive backplane power connector on the system board.
8. If connecting the data cable to the system board or a controller, connect the data cable.
9. Prepare the drive cage for installation by lifting the latches on the drive cage.
10. Install the drive cage:




**CAUTION:** Do not drop the drive cage on the system board. Dropping the drive cage on the system board might damage the system or components. Remove all drives and use two hands when installing or removing the drive cage.

- a. Locate the alignment pins on the rear of the drive cage.
- b. Align the pin on the rear left of the drive cage to the server and then insert the pin.
- c. Gently lower the opposite side of the drive cage.
- d. Pull the plunger pin on the rear right of the drive cage and then lower the drive cage until the plunger pin engages.

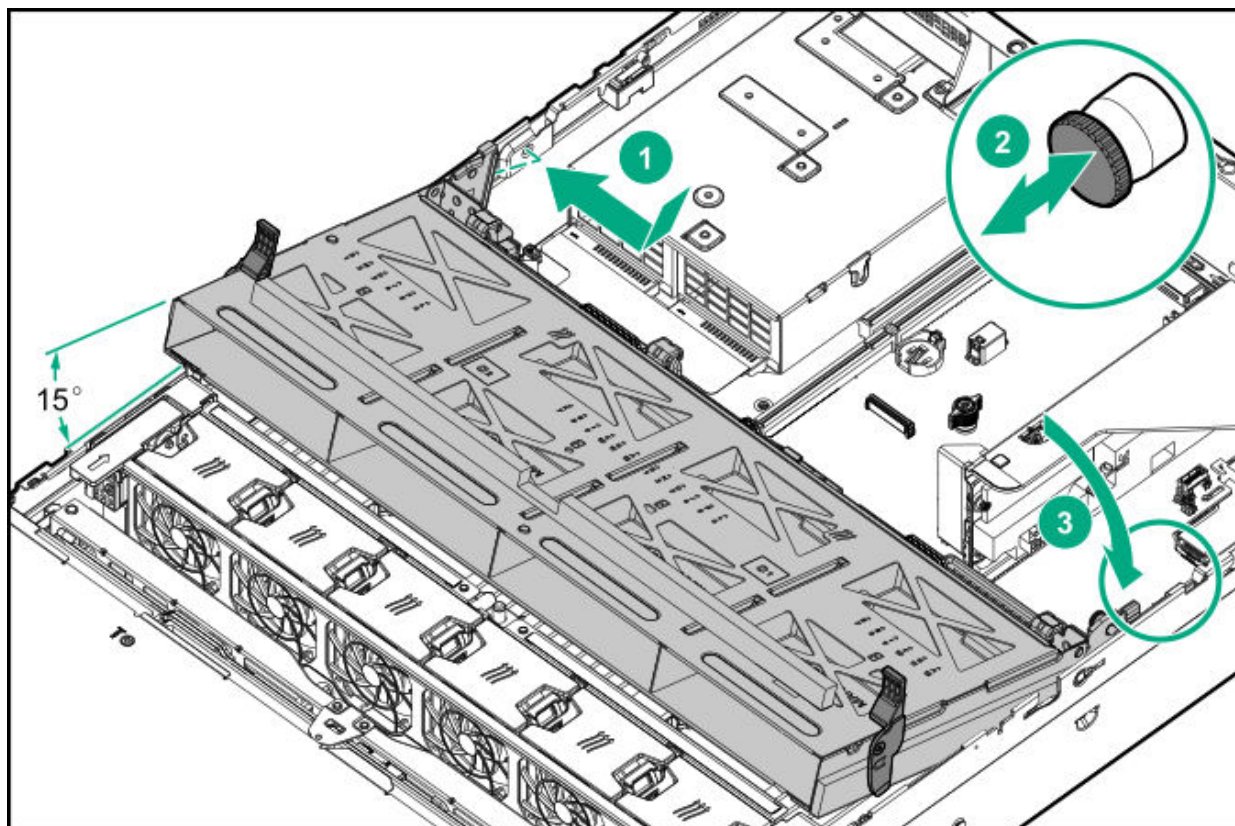

- .1. Install drives or drive blanks.
- .2. Push down on the latches to lower the drive cage into place.

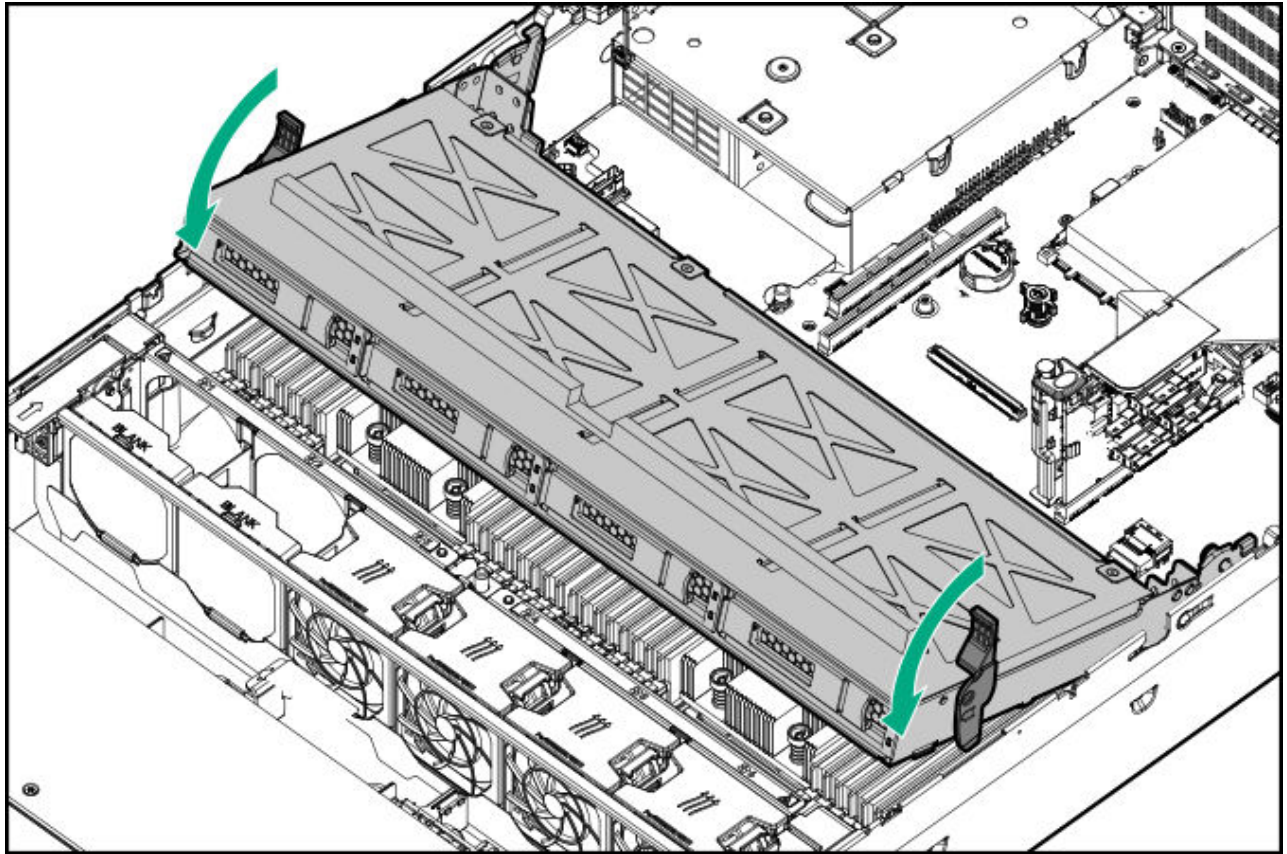

- .3. Connect the power and data cables to the drive backplane.

## Installing a rear 2 SFF SAS/SATA drive cage in the primary or secondary riser

### Prerequisites

- 


Before you perform this procedure, make sure that you have the following items available:

- T-10 Torx screwdriver
- The components included with the hardware option kit


- The front drive bays are fully populated with 12 LFF or 24 SFF drives.
- High-performance fans are installed in all fan bays.

### Procedure


1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Do one of the following:
  - For primary bays, remove the riser cage.

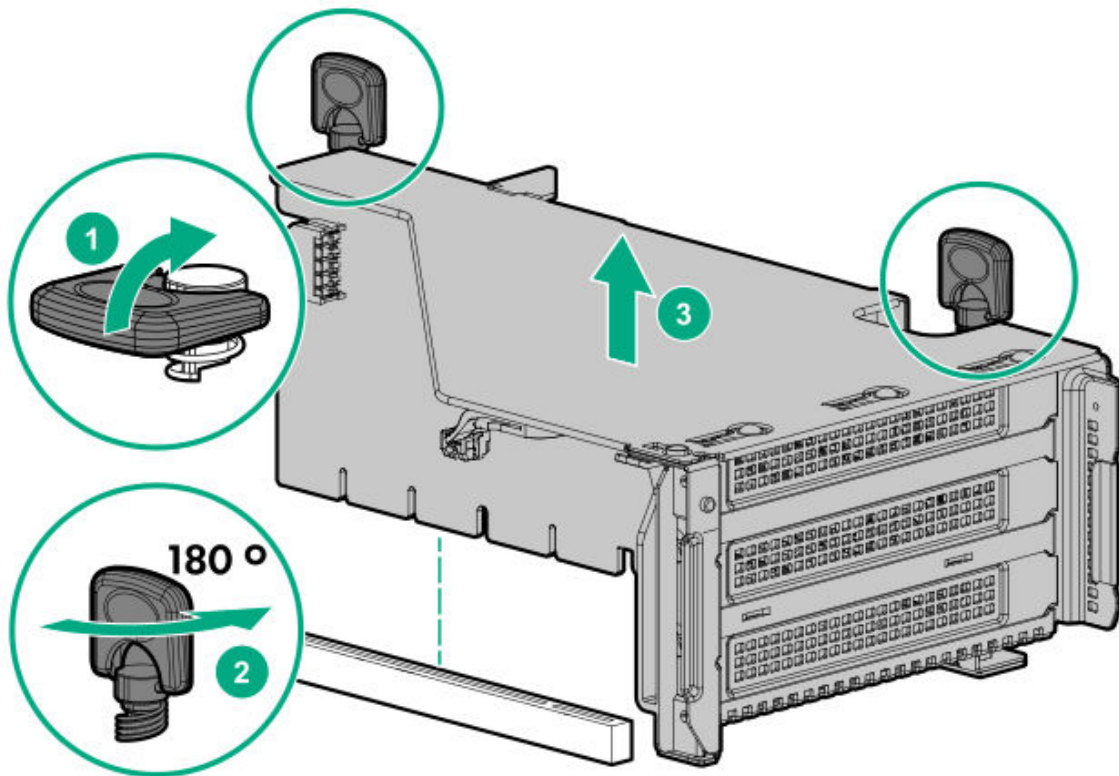

- For secondary bays, remove the rear wall blank.

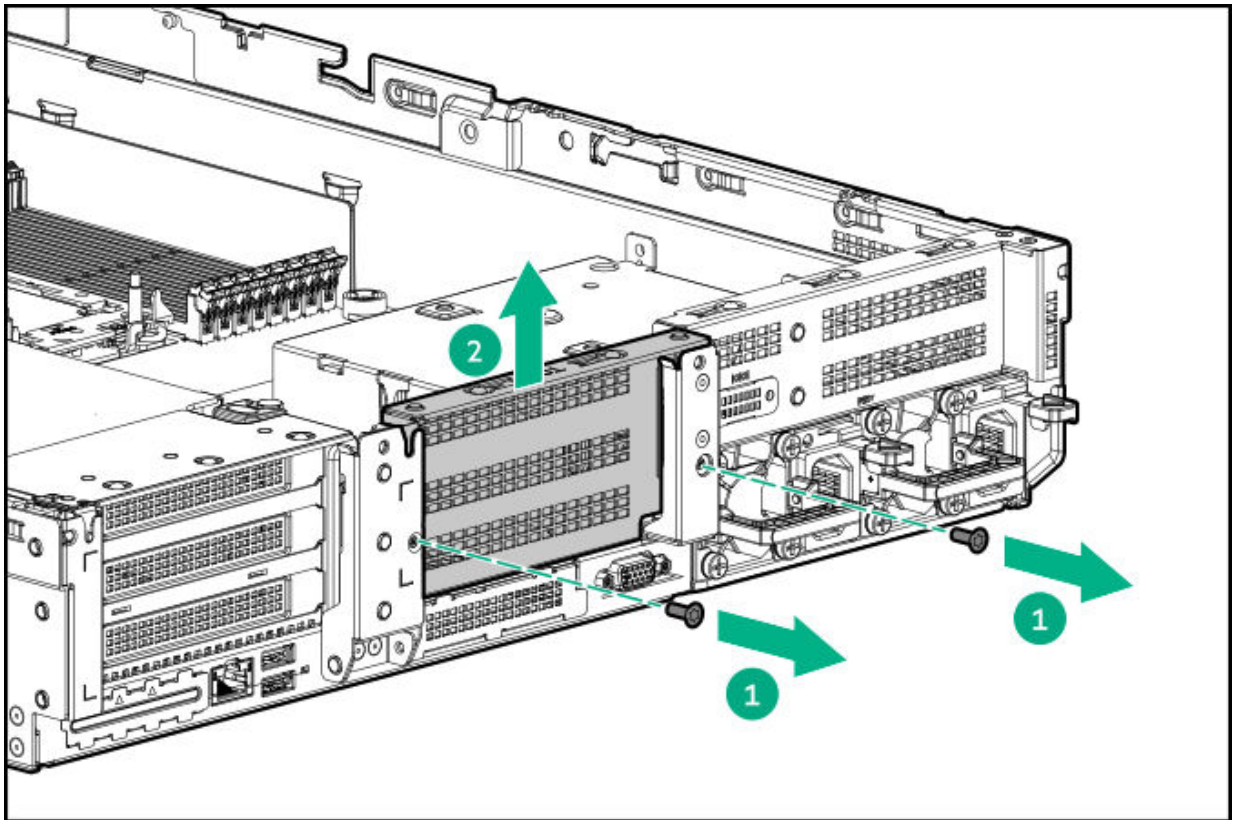

6. Install the drive cage.

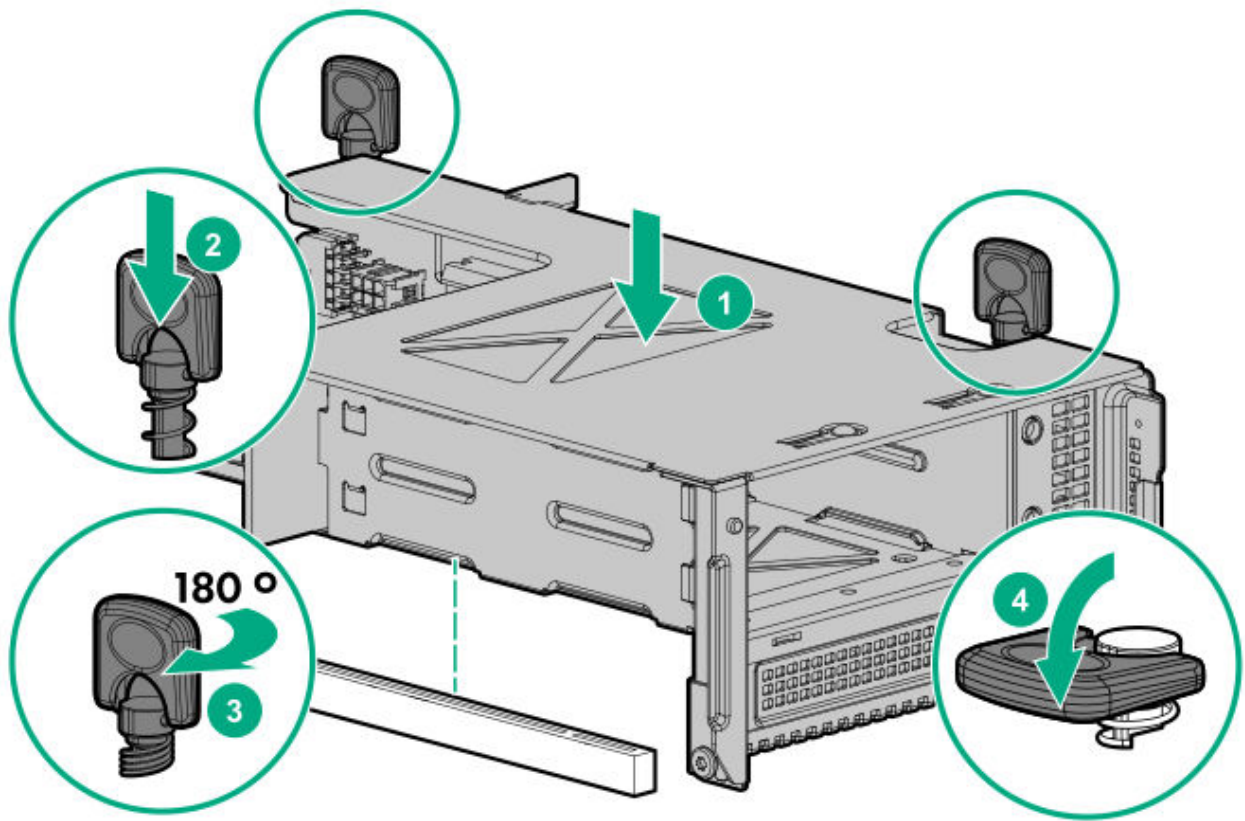

7. Cable the drive backplane.
8. Install drives or drive blanks.
9. Install the access panel.
0. Slide the server into the rack.
- .1. Connect each power cord to the server.
- .2. Connect each power cord to the power source.
- .3. Power up the server.

## Installing a rear 2 SFF SAS/SATA drive cage over the power supplies

### Prerequisites


Before you perform this procedure, make sure that you have the following items available:

- T-10 Torx screwdriver


- The components included with the hardware option kit
- The front bays are fully populated with 12 LFF or 24 SFF drives
- High-performance fans are installed in all fan bays

## Procedure


1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Do one of the following:
  - If installed, remove the secondary riser cage.

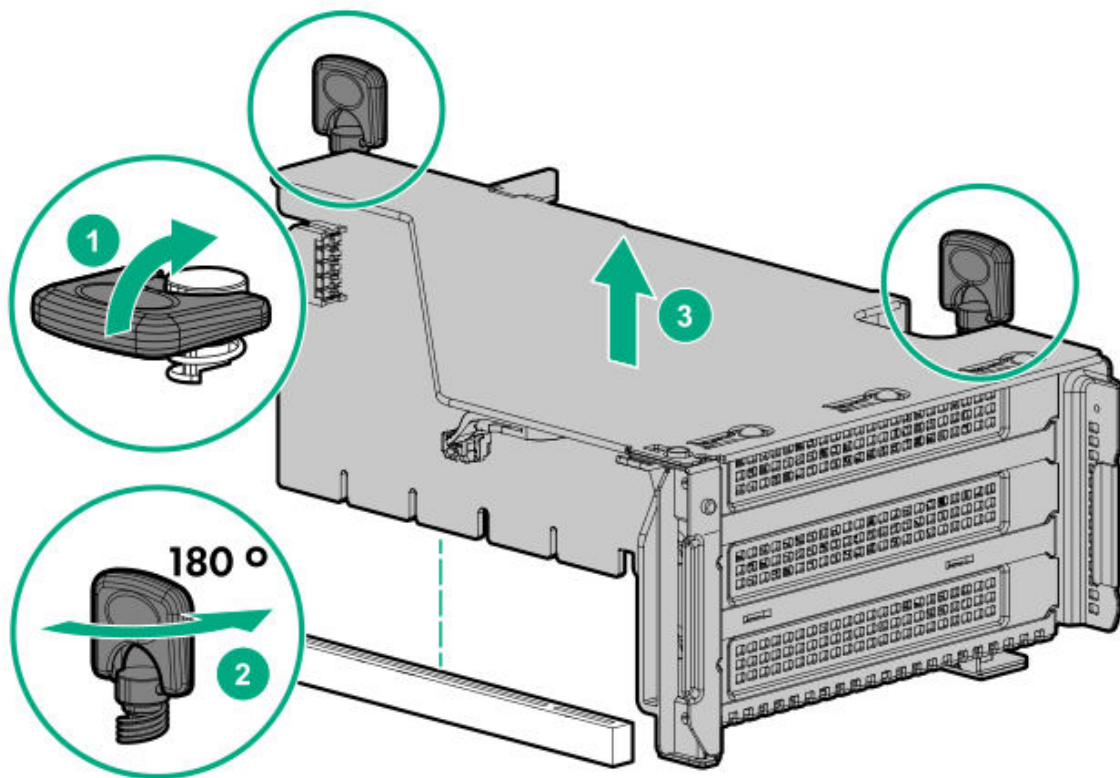


- Remove the secondary wall blank.

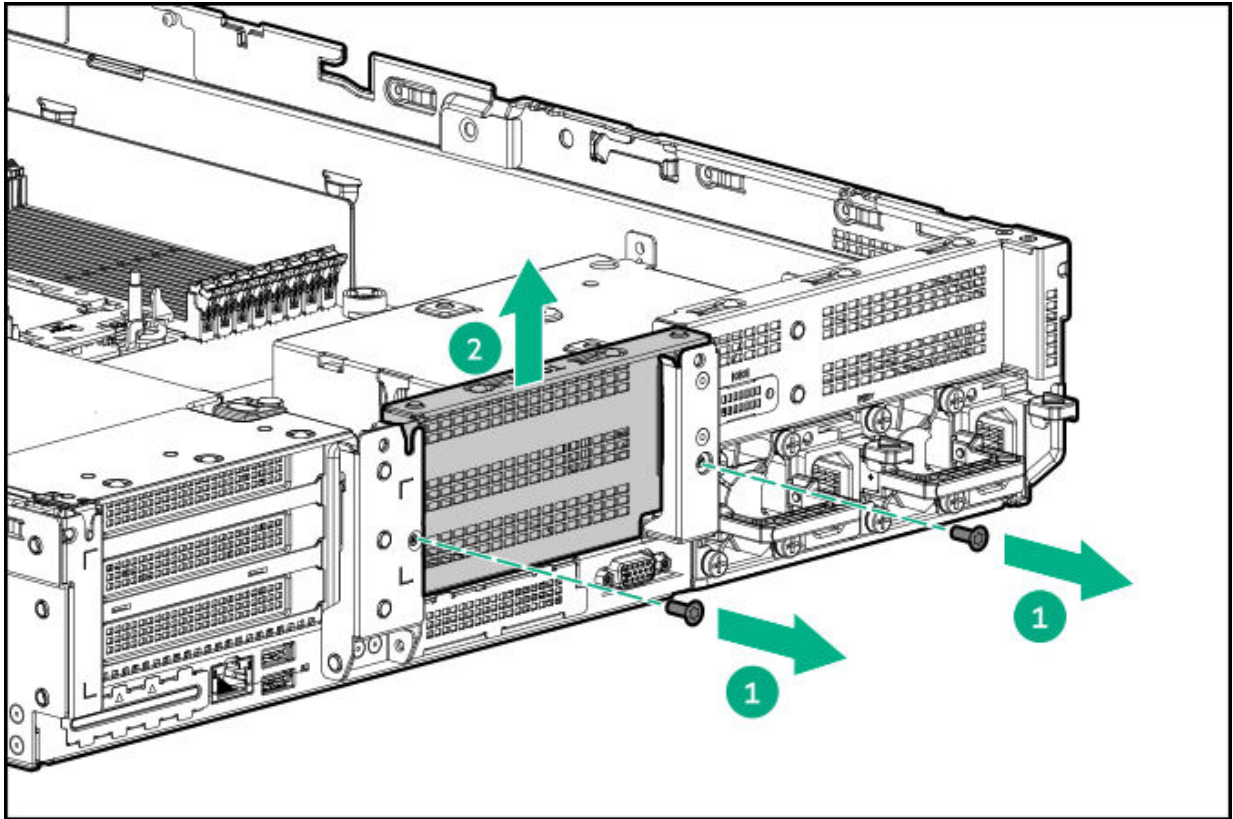


6. Remove the tertiary wall blank.

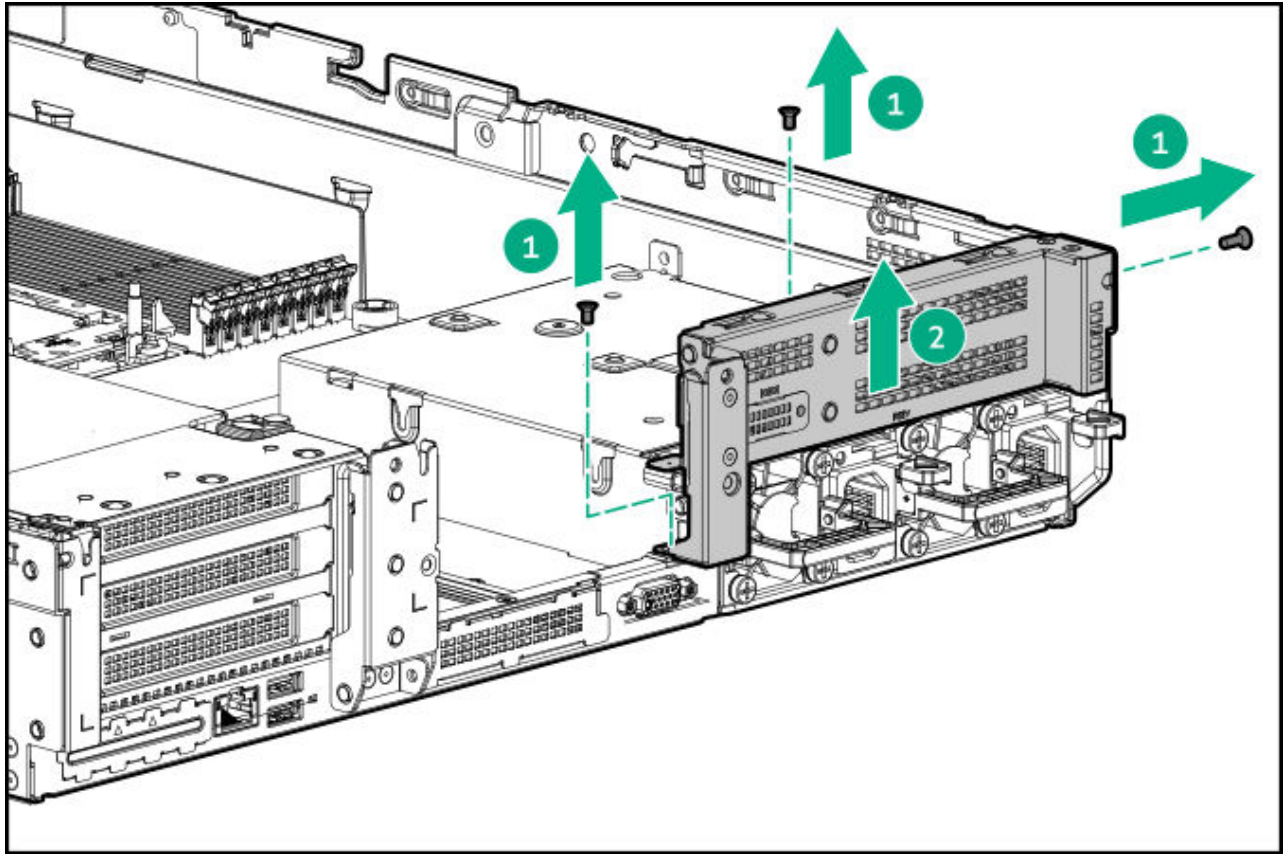


7. Install the drive cage compatible rear wall.

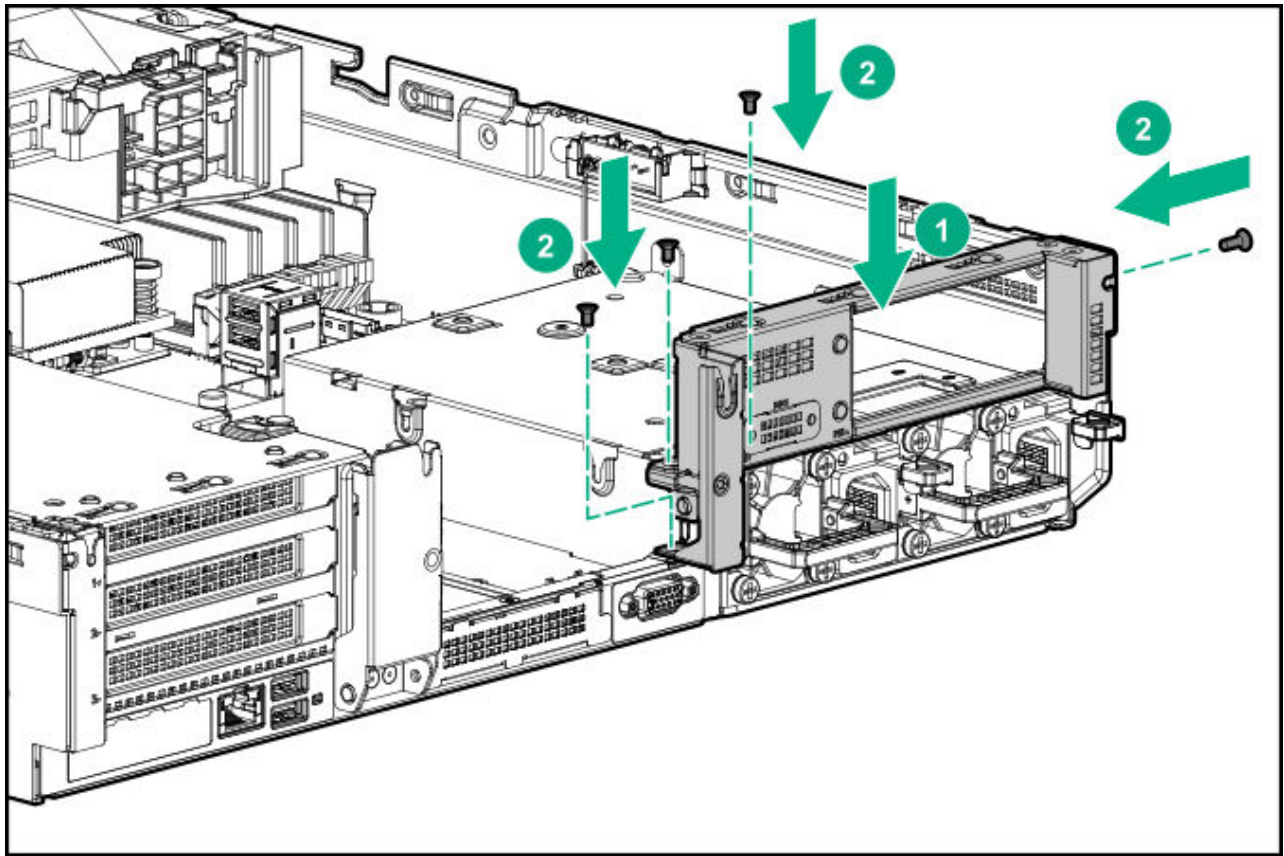

8. Install 4 rubber feet on the drive cage.

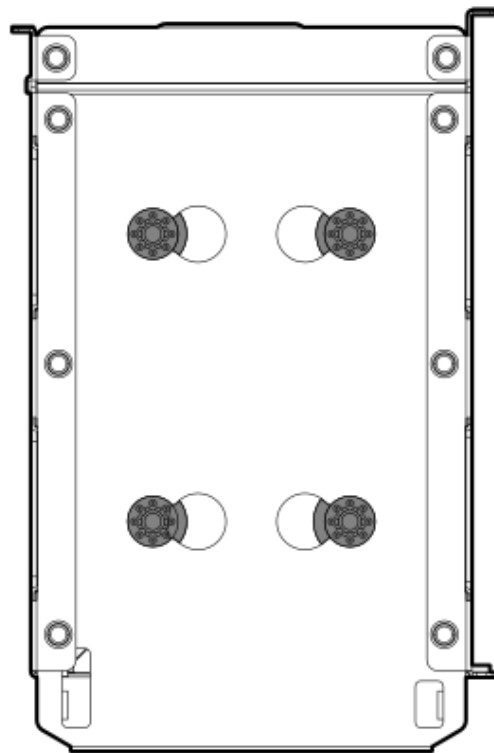

9. Install the drive cage.

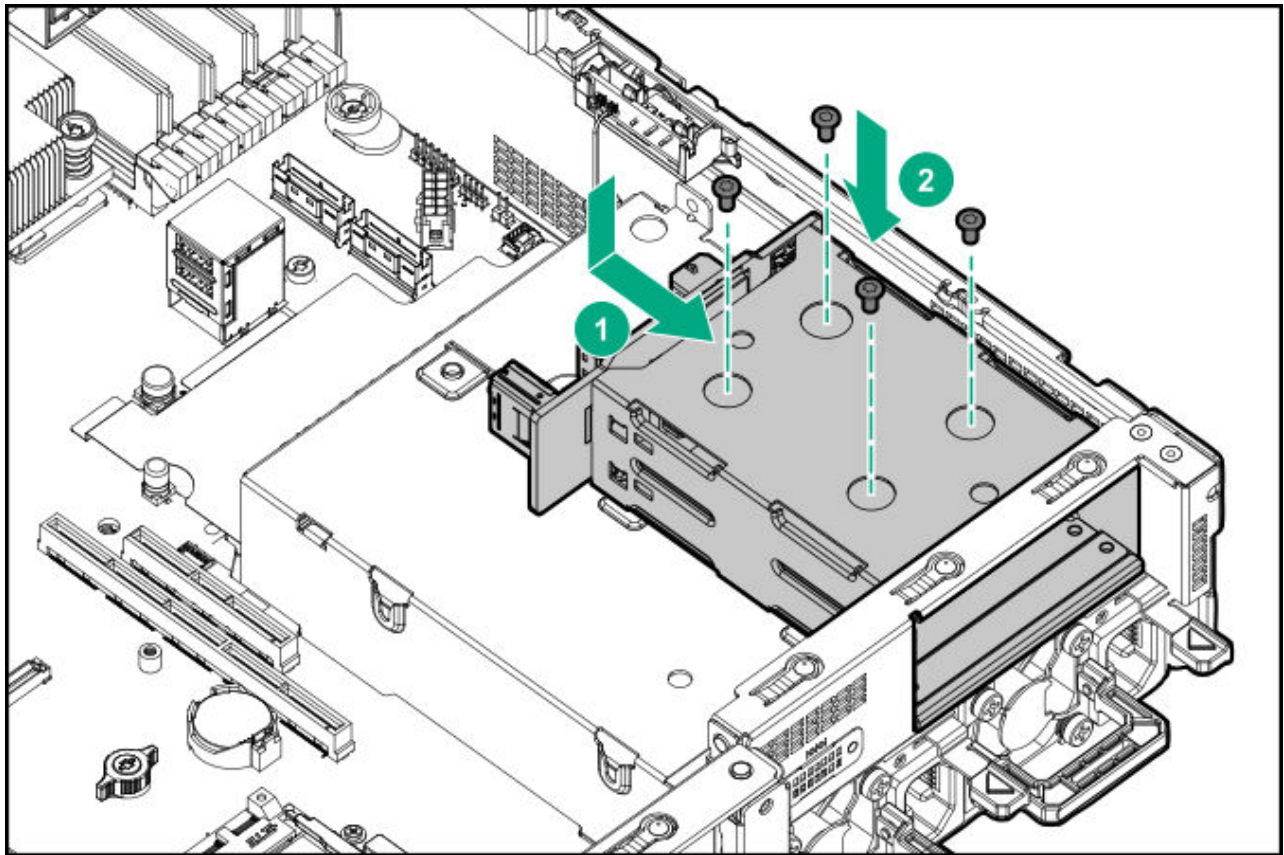

- .0. Install drives or drive blanks.
- .1. Install the secondary rear wall or a secondary riser cage.
- .2. Cable the drive backplane.
- .3. Install the access panel.
- .4. Slide the server into the rack.
- .5. Connect each power cord to the server.
- .6. Connect each power cord to the power source.
- .7. Power up the server.

# Installing a rear 2LFF SAS/SATA drive cage in the primary or secondary riser


## Prerequisites

Before you perform this procedure, make sure that you have the following items available:


- T-10 Torx screwdriver
- The components included with the hardware option kit
- The front drive bays are fully populated with 12 LFF or 24 SFF drives.
- High performance fans are installed in all fan bays.

## Procedure


1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Do one of the following:
  - For primary bays, remove the riser cage.

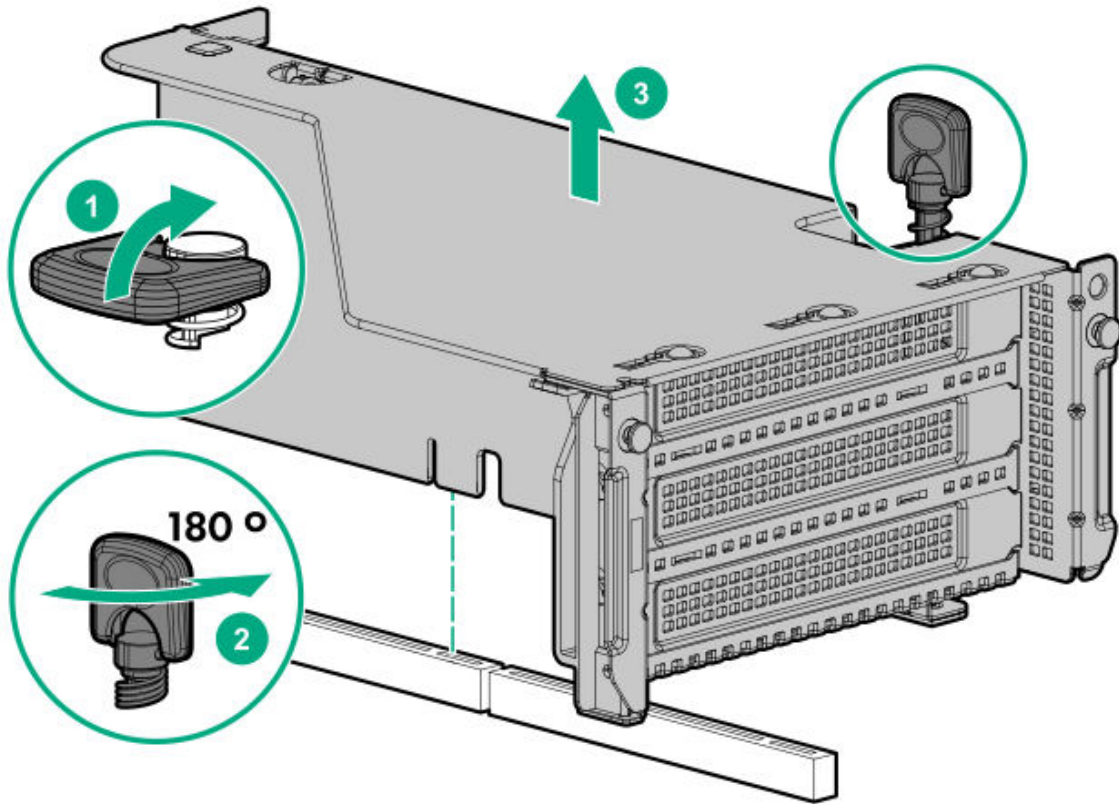

- For secondary bays, remove the rear wall blank.

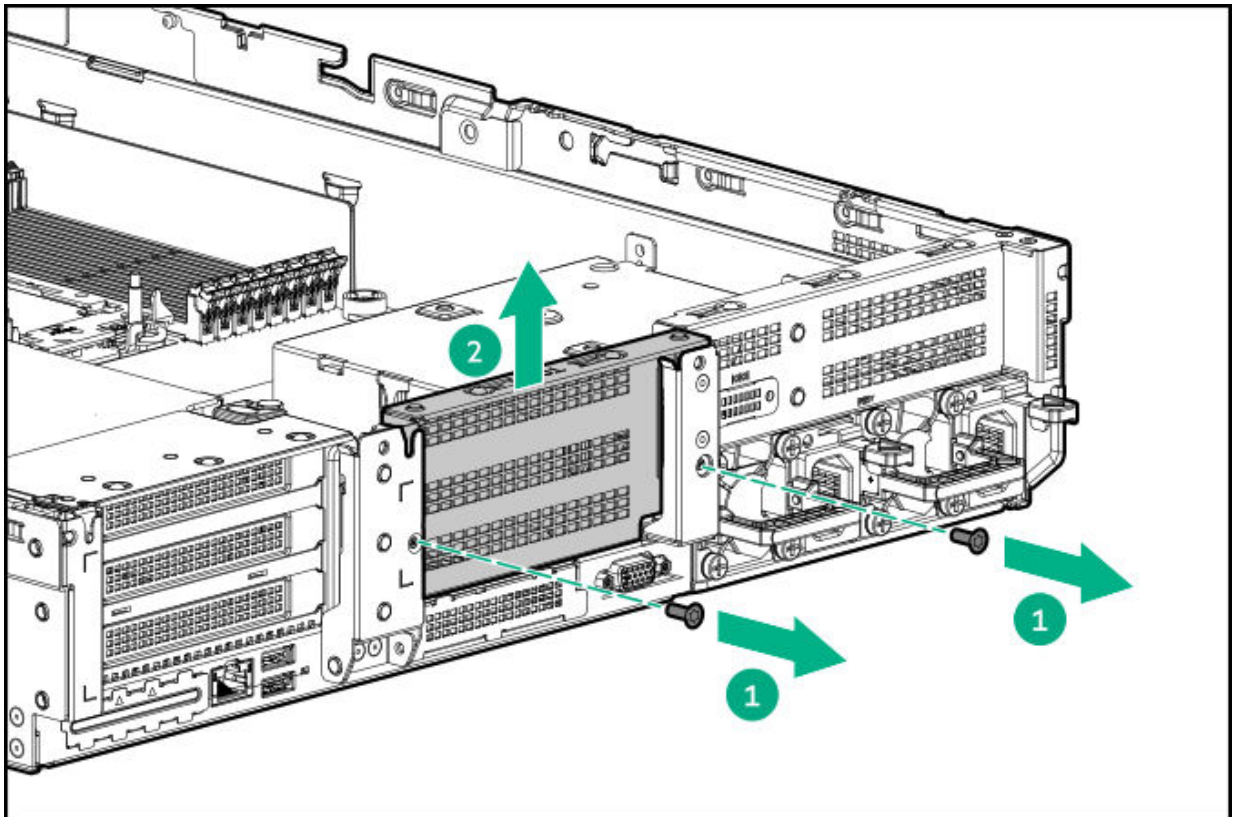

6. Install the drive cage.

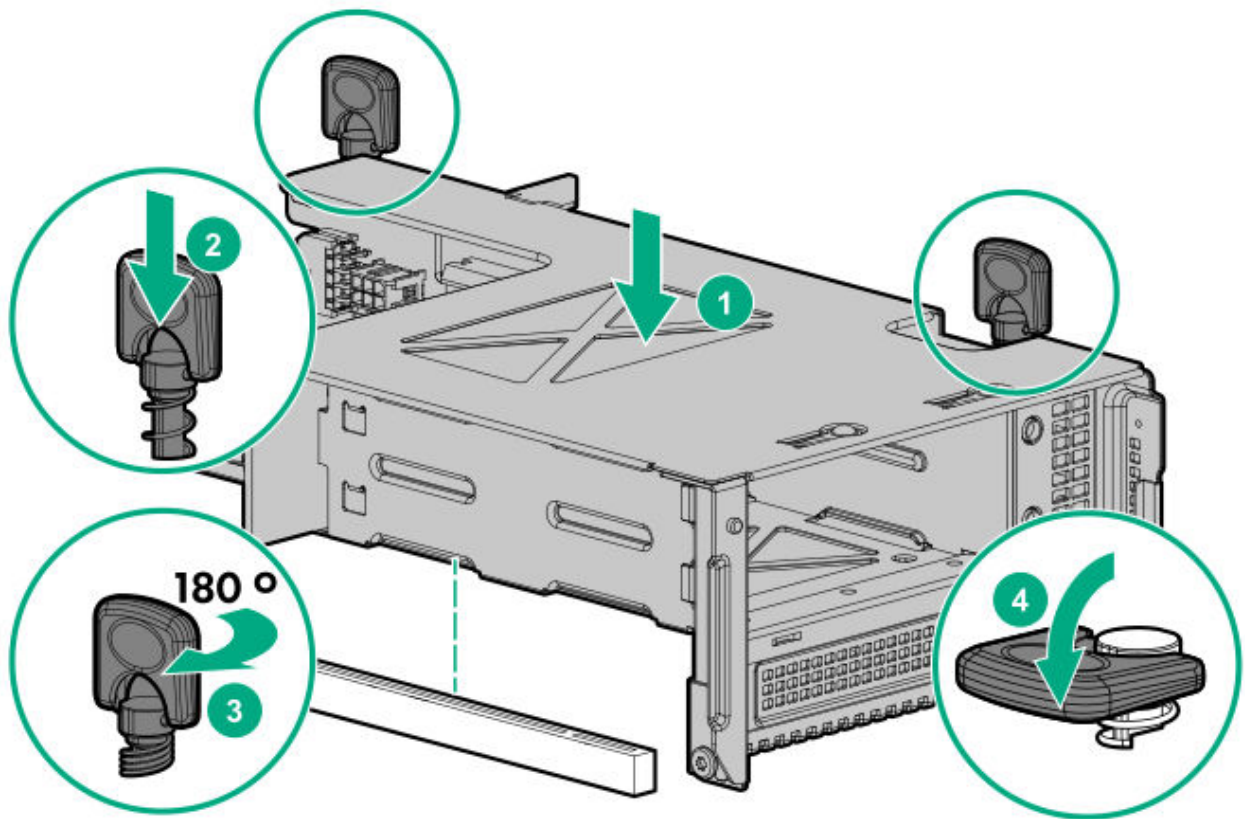

7. Cable the drive backplane.

8. Install drives or drive blanks.

9. Install the access panel.

.0. Slide the server into the rack.

.1. Connect each power cord to the server.

.2. Connect each power cord to the power source.

.3. Power up the server.

### **Results**

The installation is complete.

# Processor and heatsink options

## Subtopics

[Installing a processor heatsink assembly](#)

[Installing a high performance heatsink](#)

## Installing a processor heatsink assembly

### Prerequisites

Before installing this option, be sure that you have the following:

- The components included with the option kit
- T-30 Torx screwdriver

### Procedure

1. Review the [heatsink and socket components](#).
2. Observe the following alerts.



**CAUTION:** When handling the heatsink, always hold it along the top and bottom of the fins. Holding it from the sides can damage the fins.



**CAUTION:** To prevent possible server malfunction and damage to the equipment, multiprocessor configurations must contain processors with the same part number.



**CAUTION:** If installing a processor with a faster speed, update the system ROM before installing the processor.

To download firmware and view installation instructions, see the [\*\*Hewlett Packard Enterprise Support Center website\*\*](#).




**CAUTION: THE CONTACTS ARE VERY FRAGILE AND EASILY DAMAGED.**

To avoid damage to the socket or processor, do not touch the contacts.

3. [Power down the server](#).

4. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
5. Do one of the following:
  - a. Extending the server from the rack.
  - b. Removing the server from the rack.
6. Remove the access panel.
7. If installing processors over 150W, install high performance fans.
8. Install the processor heatsink assembly:
  - a. Remove the dust cover from the socket.
  - b. Identify the front of server label on the heatsink.
  - c. Align the assembly with the socket and gently lower it down until it sits on the socket.


Be sure the latches lock the heatsink into place. The heatsink and socket are keyed. The processor will only install one way.

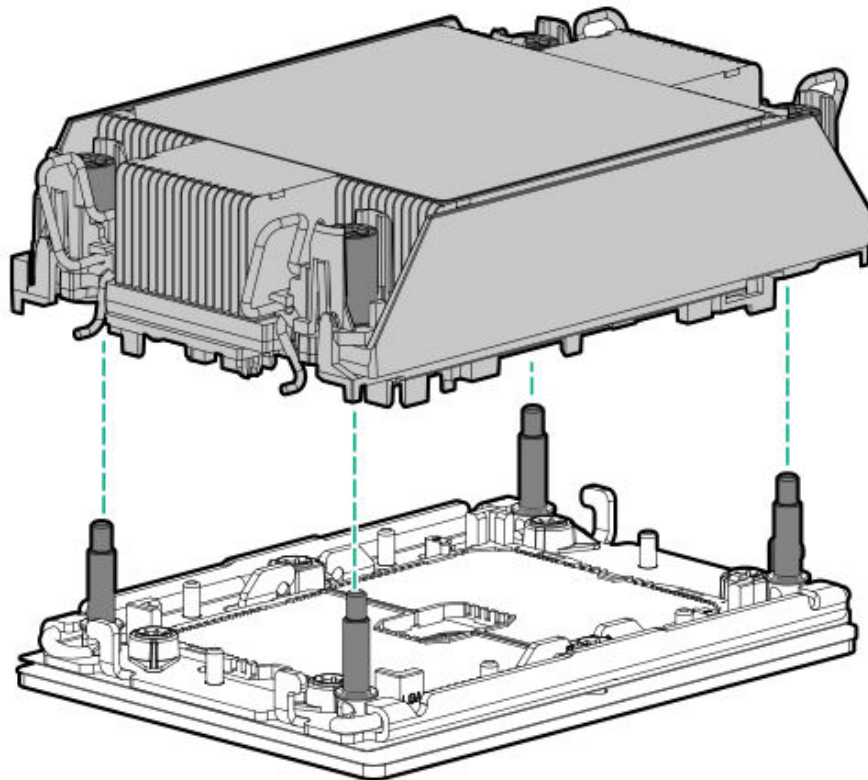

d. Using a T-30 Torx screwdriver, tighten the nuts.



**NOTE:** Do not tighten the nuts more than 12 in-lbs or 1.3Nm. Overtightening could crack or damage the nuts.

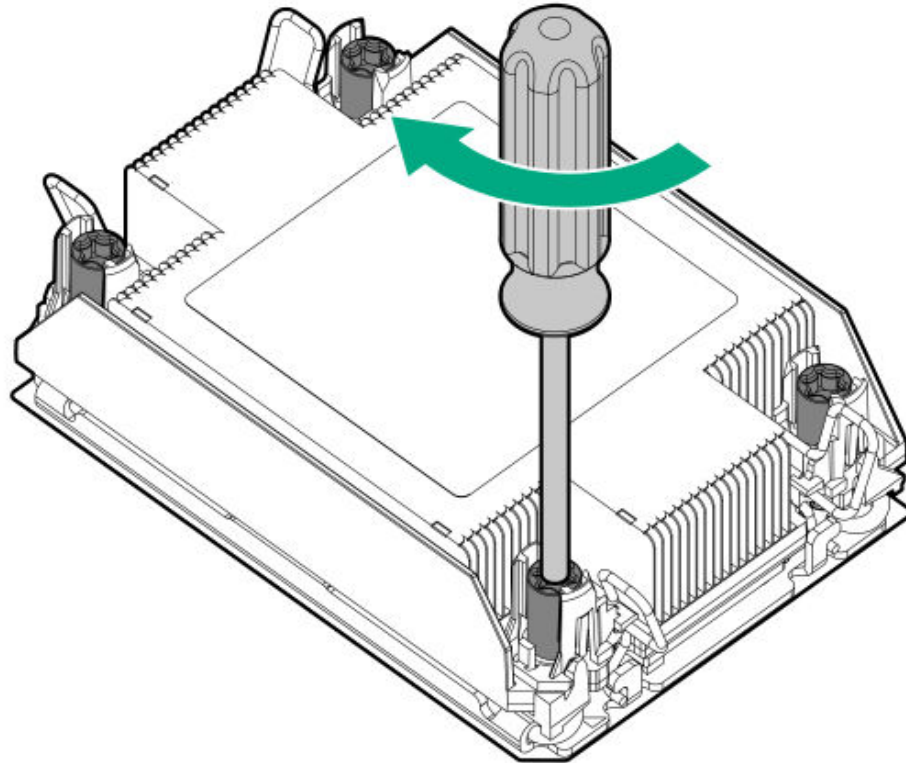

## Results

The installation is complete.

# Installing a high performance heatsink

## Prerequisites



**CAUTION:** Installing a high performance heatsink requires the installation of a processor assembly onto the heatsink. To avoid damage to server or components, do not remove or install the processor assembly when installing or replacing other heatsinks.

To determine when a high performance heatsink should be installed in the server, see the server QuickSpecs (<https://www.hpe.com/info/qs>).

Before installing this option, be sure that you have the following:

- The components included with the hardware option kit
- T-30 Torx screwdriver

## Procedure

1. Observe the following alerts.



**CAUTION:** The processor assembly must be removed and replaced as a unit. Do not remove the processor from the carrier.



**CAUTION:** When handling the heatsink, always hold it along the top and bottom of the fins. Holding it from the sides can damage the fins.



**CAUTION: THE CONTACTS ARE VERY FRAGILE AND EASILY DAMAGED.**  
To avoid damage to the socket or processor, do not touch the contacts.

2. Power down the server.
3. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
4. Do one of the following:
  - a. Extending the server from the rack.
  - b. Removing the server from the rack.
5. Remove the access panel.

6. Observe the following cautions.




**CAUTION:** Be sure to loosen each heatsink nut in the order indicated. Otherwise, damage might occur to the heatsink or processor.




**CAUTION:** Install the processor heatsink assembly as soon as possible after removing it. Do not leave the processor socket unpopulated for extended periods of time.

7. Remove the existing processor heatsink assembly:

- a. Allow the heatsink to cool.
- b. Using a T-30 Torx screwdriver, loosen the heatsink nuts.

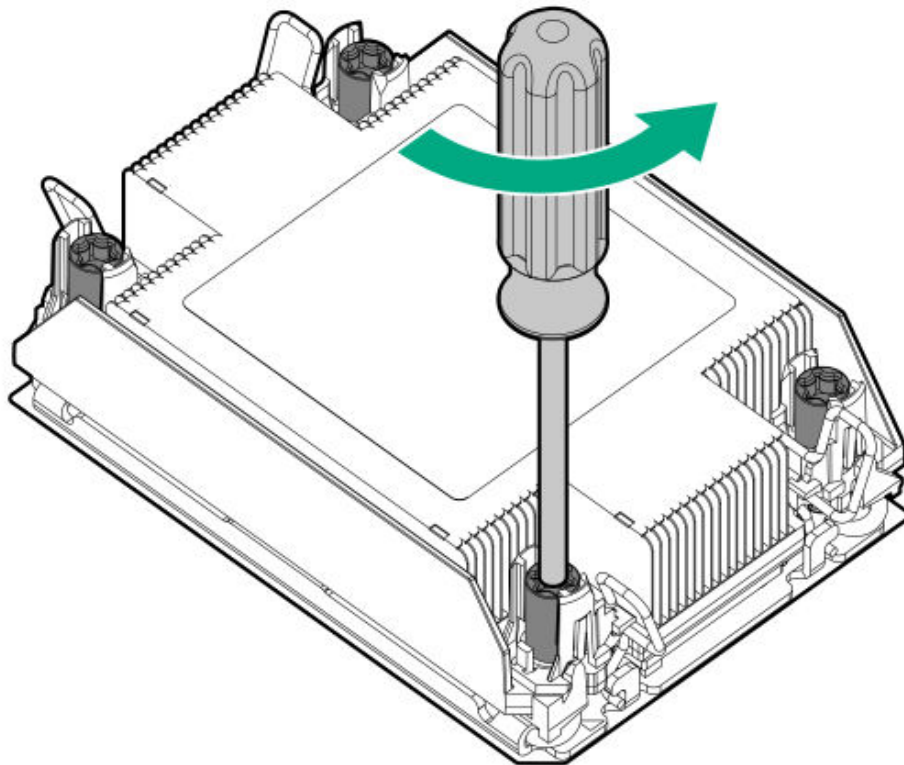

- c. Remove the processor heatsink assembly.

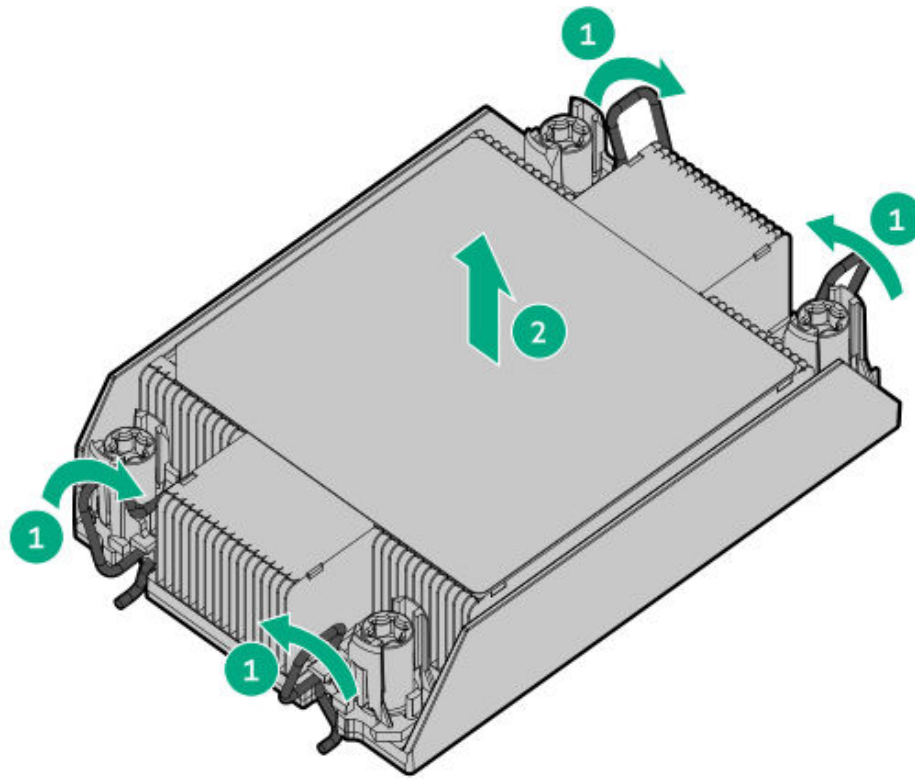


d. Turn the processor heatsink assembly over and place it on a work surface with the processor assembly facing up.

8. Release the processor from the heatsink:


Be sure to unlatch all corners of the processor carrier.

The processor remains attached to the carrier.

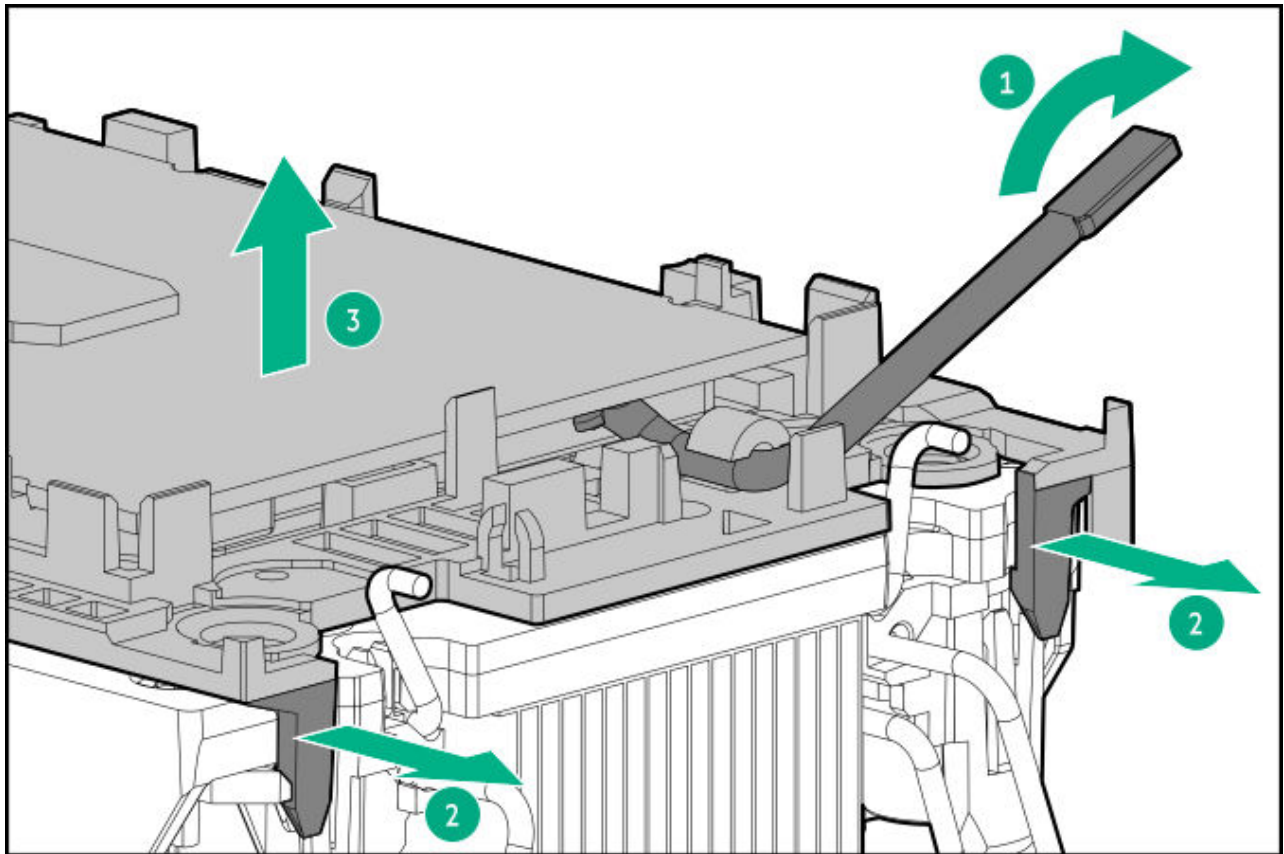

9. Using an alcohol wipe, remove the existing thermal grease from the processor and heatsink. Allow the alcohol to evaporate before continuing.
0. Remove the plastic cover protecting the thermal grease on the high performance heatsink.
1. Align the Pin 1 indicators on the processor and the heatsink, and then install the processor assembly to the heatsink.




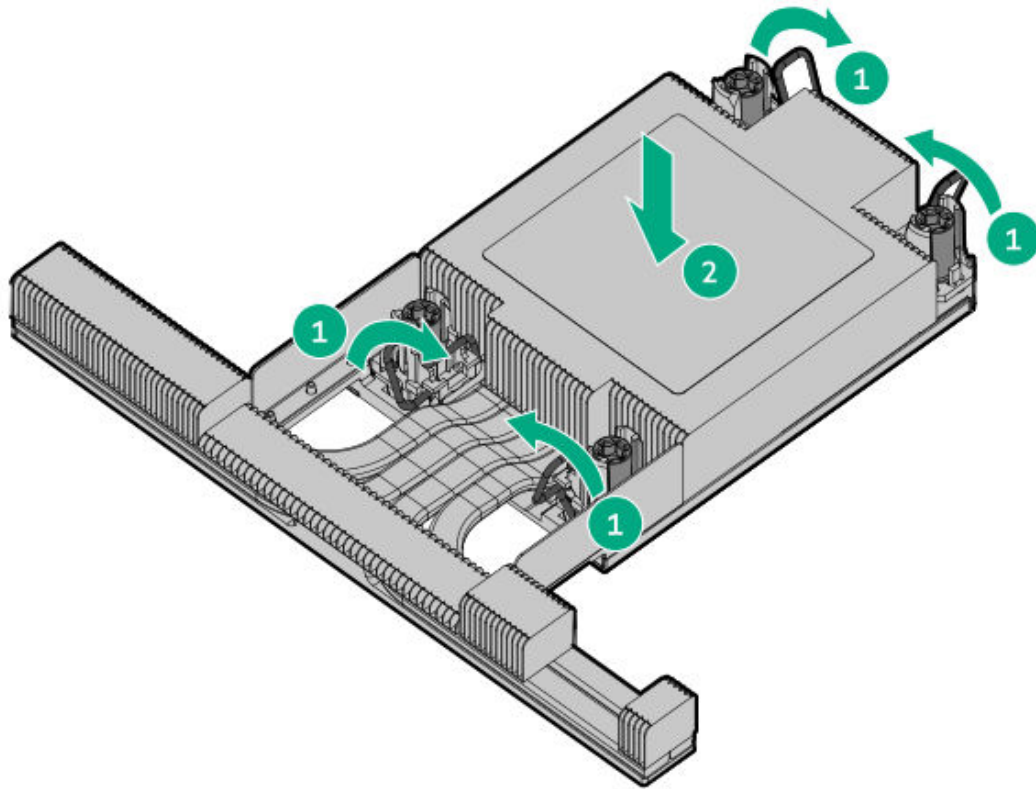

c. Using a T-30 Torx screwdriver, tighten the nuts.



**NOTE:** Do not tighten the nuts more than 12 in-lbs or 1.3Nm. Overtightening could crack or damage the nuts.

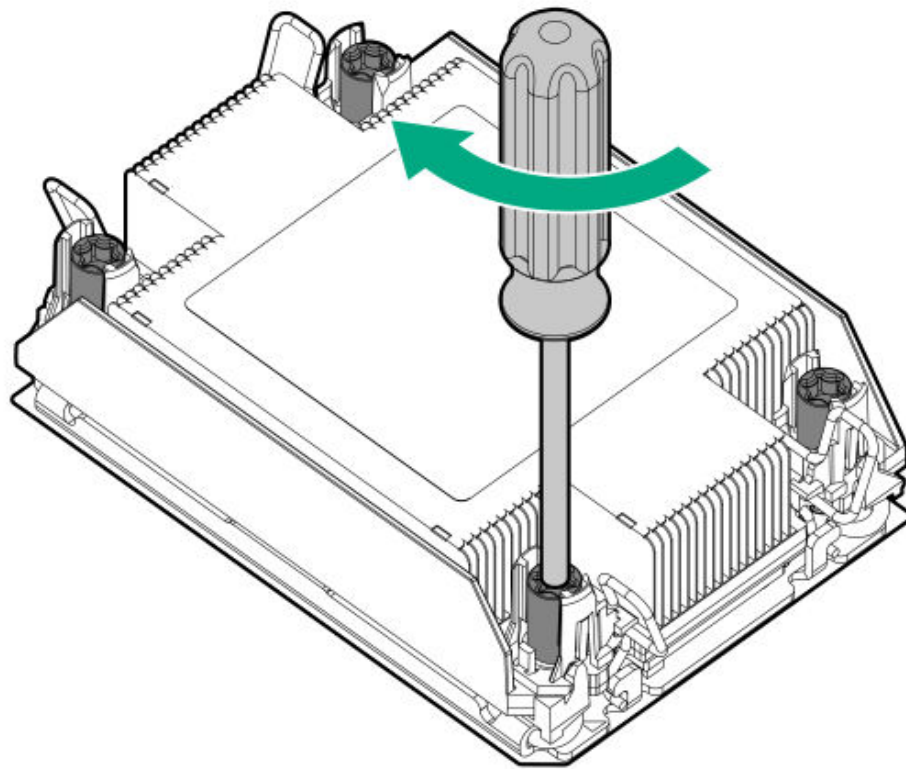

## Results

The installation is complete.

## Installing the chassis intrusion detection switch


### Prerequisites

Before you perform this procedure, make sure that you have the components included with the hardware option kit.

### Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:

- Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
  5. Install the chassis intrusion detection switch.

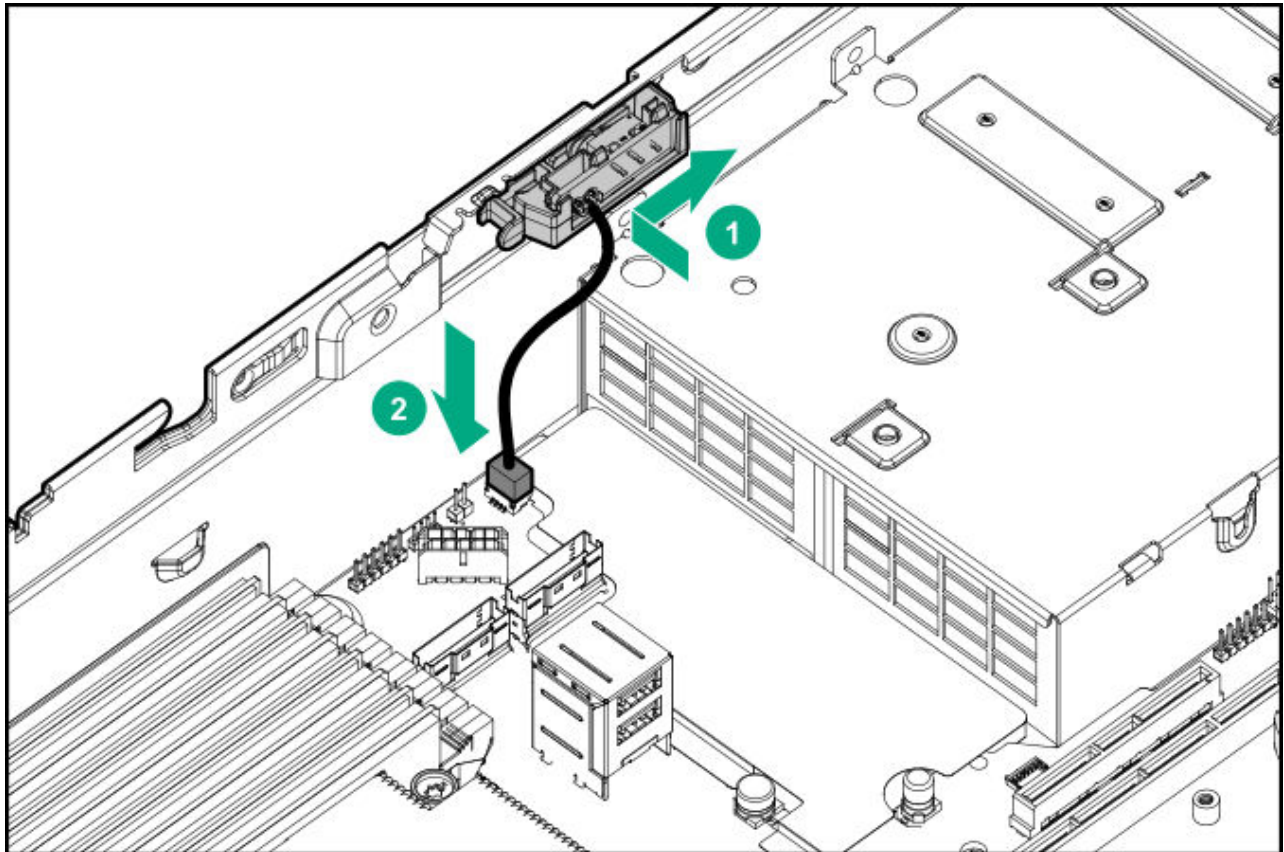

6. Install the access panel.
7. Install the server into the rack.
8. Connect each power cord to the server.
9. Connect each power cord to the power source.
10. Power up the server.


# Installing an OCP 3.0 adapter card

## Prerequisites


Before you begin this procedure, make sure that the components included with the hardware option kit are available.

## Procedure

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the rear wall blank or riser.
6. Remove the OCP 3.0 adapter blank.

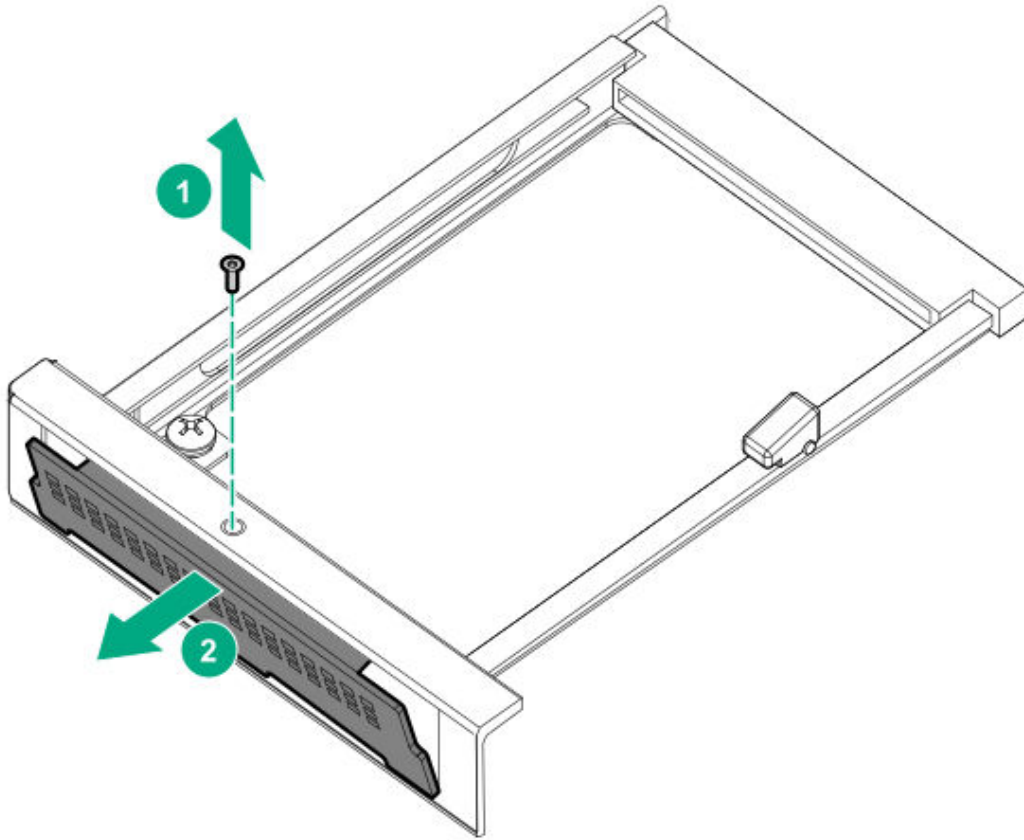

7. Install the OCP 3.0 adapter.

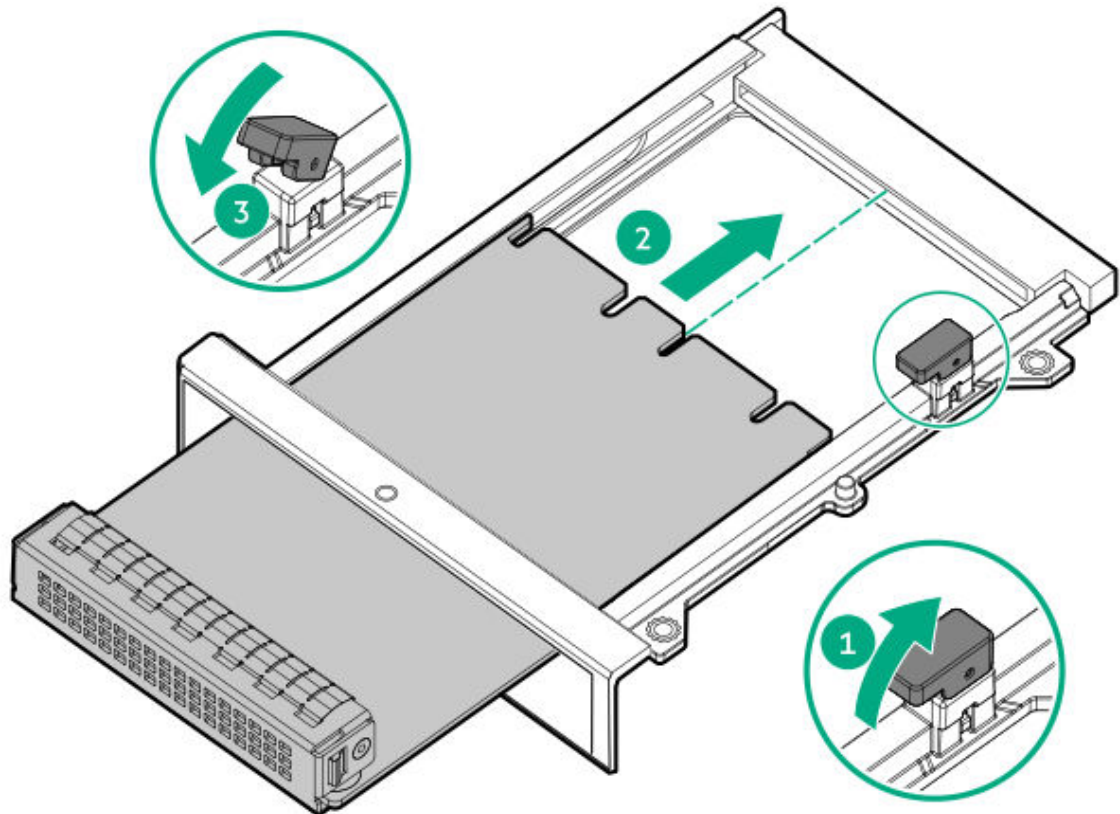


8. Connect the cables.
9. Install the access panel.
0. Slide the server into the rack.
- .1. Connect each power cord to the server.
- .2. Connect each power cord to the power source.
- .3. Power up the server.

## Installing the Pensando DSP DSC-25 2p SFP28 card


### Procedure

1. Power down the server.
2. Do one of the following:
  - Extend the front drive cages out of the chassis.
  - Remove the server from the rack.


- Remove the compute module from the enclosure.
3. Place the server on a flat, level work surface.
  4. Remove the access panel.
  5. Remove the PCIe riser cage, if applicable.

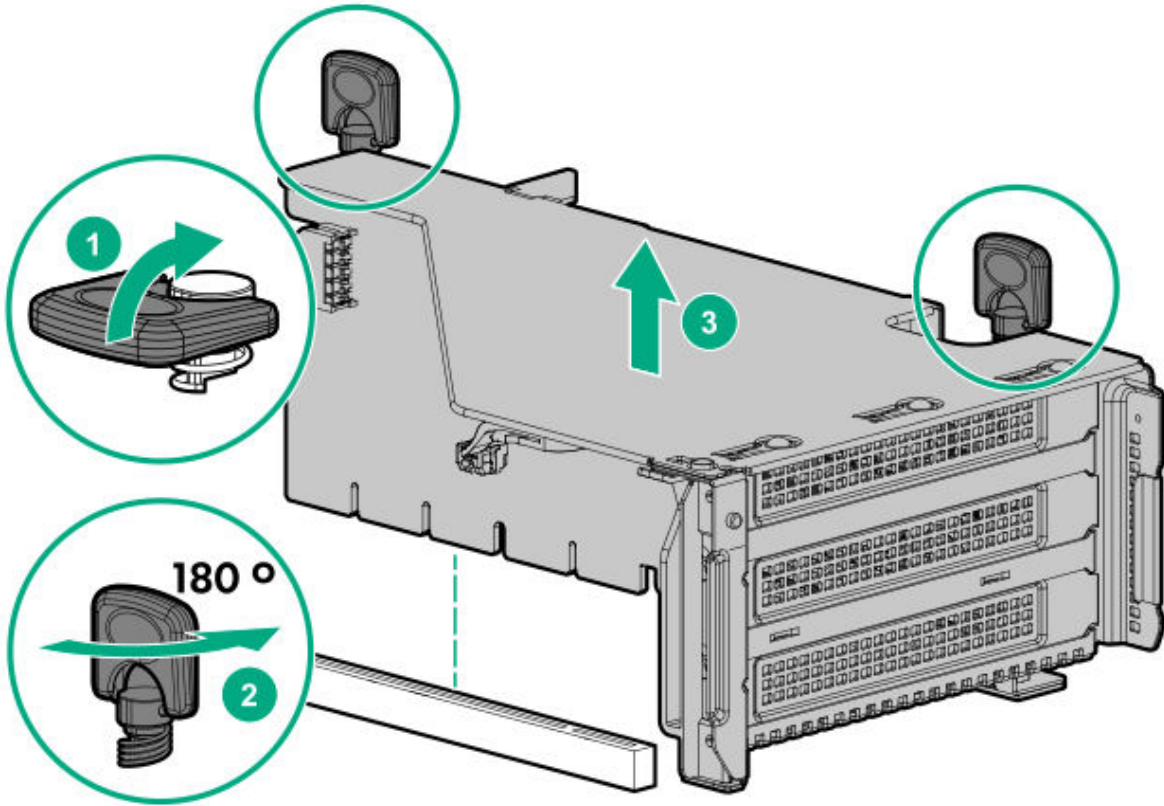

6. Install the Pensando DSP DSC-25 2p SFP28 card into the PCIe slot.

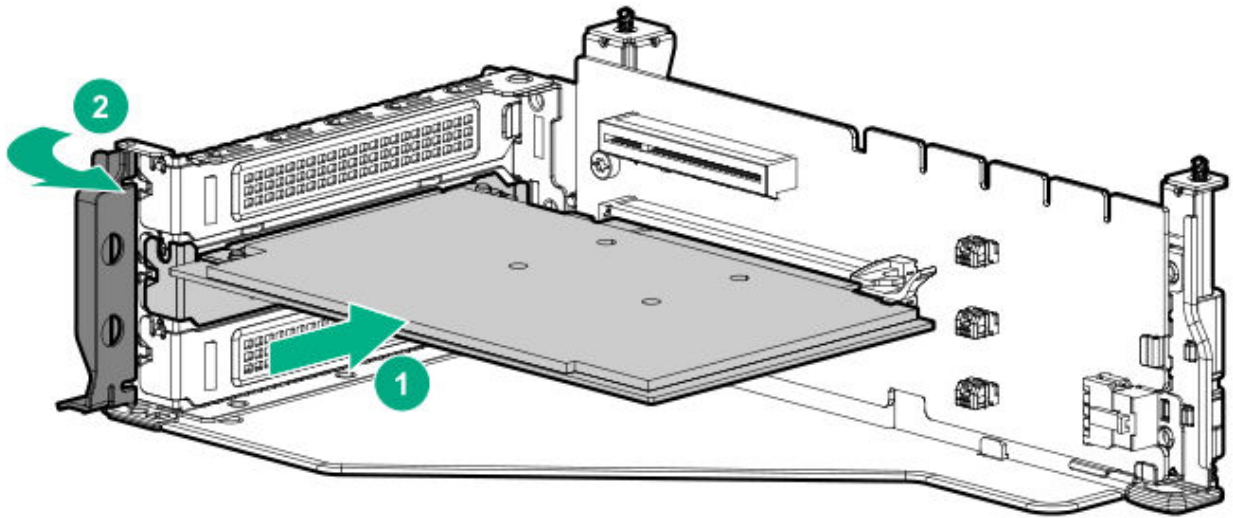

7. Install the PCIe riser cage into the server.

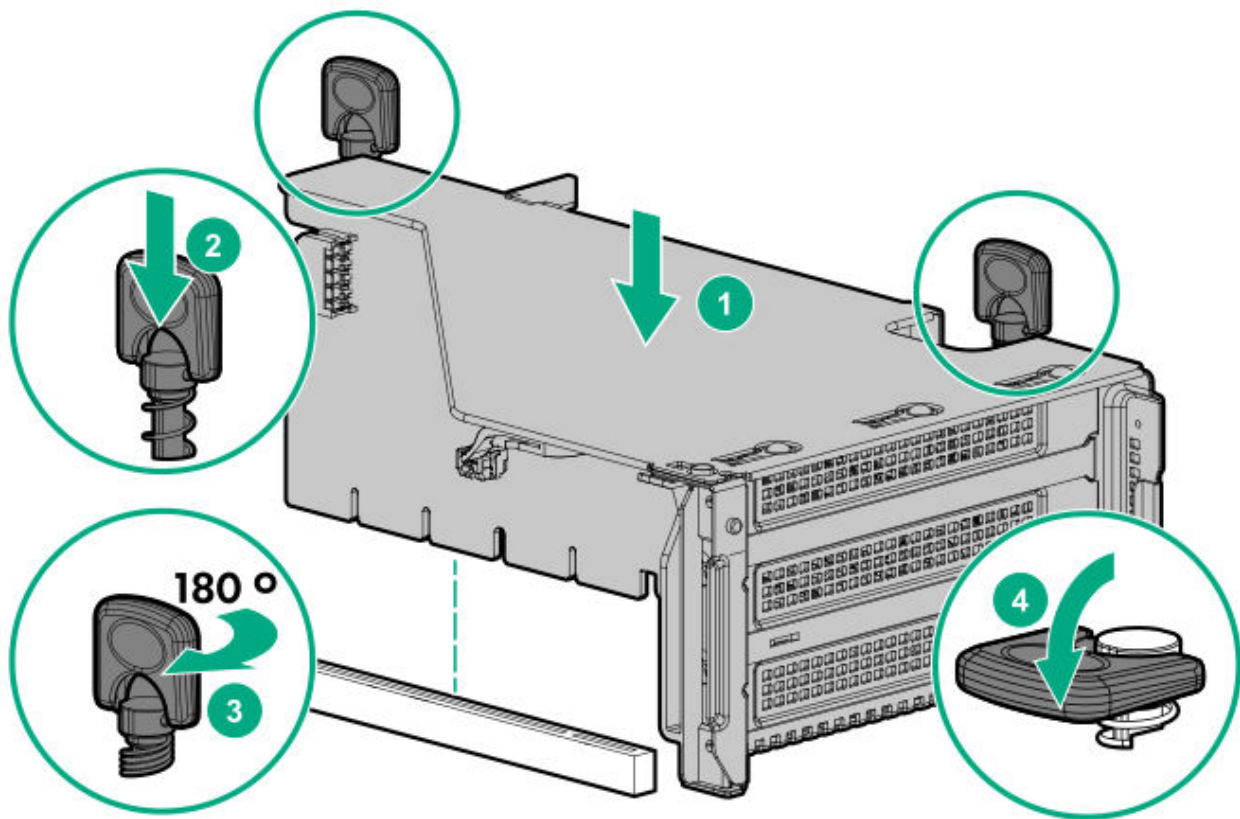

8. Install the access panel.

9. Slide the server into the rack.

- .0. Connect each power cord to the server.
- .1. Connect each power cord to the power source.
- .2. Power up the server.
- .3. Admit the new card to the Pensando Policy and Services Manager (PSM).

For more information, see the PSM Enterprise Edition User Guide.

## Installing the HPE NS204i-p NVMe OS Boot Device option

### Prerequisites


Before beginning installation, ensure that the server is updated with the latest operating system firmware and drivers.

### About this task


### Procedure

#### Installing drives onto the boot device

1. Remove the liner from the thermal interface pad.

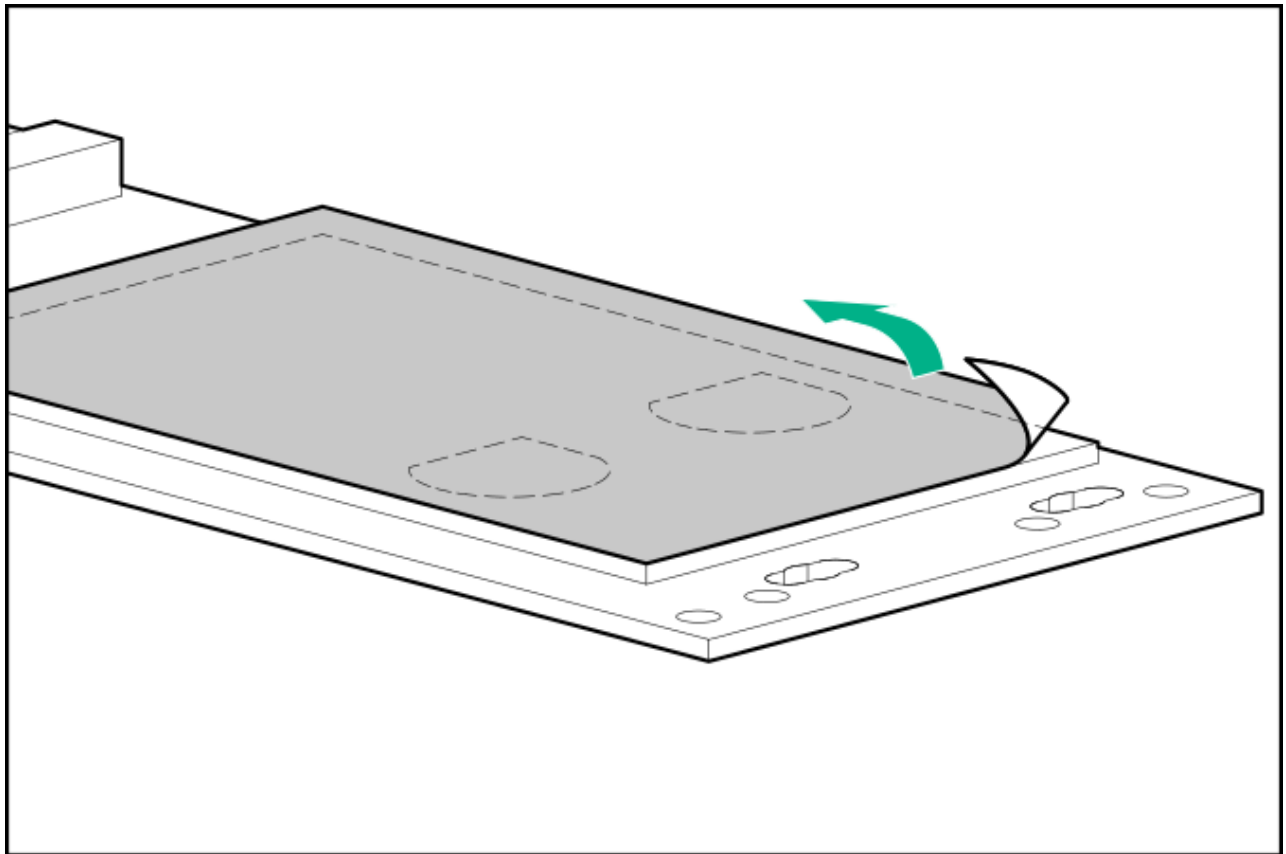

2. Install the drives.

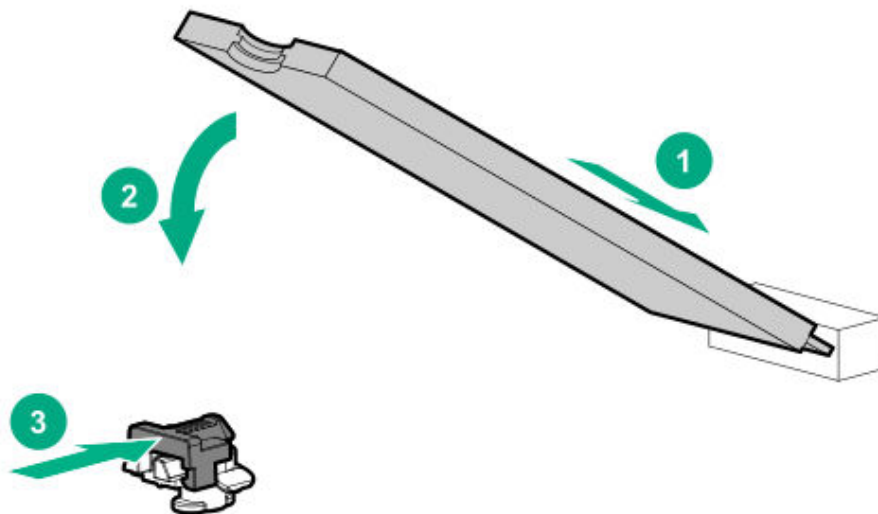


### Installing the boot device

3. Power down the system.
4. Do one of the following:

- Extend the front drive cages out of the chassis.
  - Remove the system from the rack.
  - Remove the compute module from the enclosure.
5. Place the server on a flat, level work surface.
  6. Remove the access panel.
  7. Select an available PCIe expansion slot that is x8 physical size and x4 electrical.
  8. Remove the expansion slot cover.

Save the retaining screw, if one is present.

9. Install the boot device.

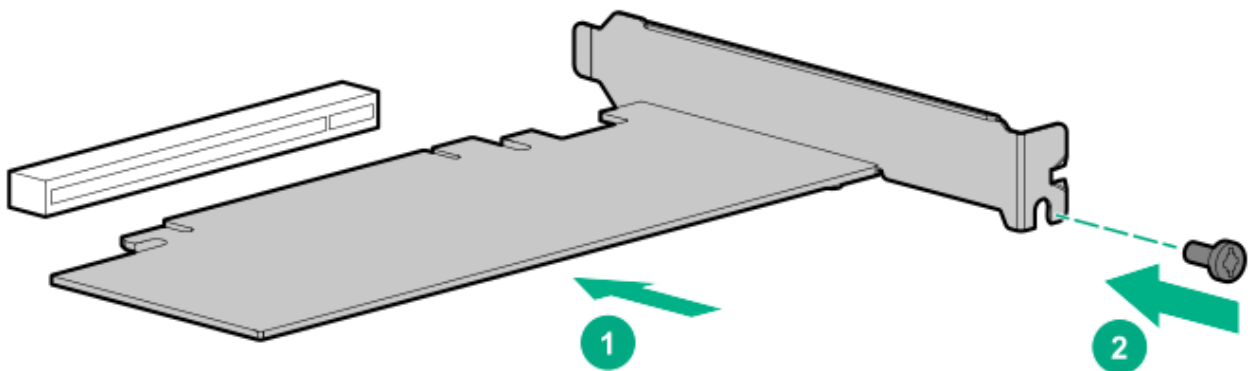

- .0. Install any components that were removed to access the expansion slot.
- .1. Install the access panel.
- .2. Do one of the following:
  - Slide the server into the rack.
  - Install the server into the rack.
- .3. Power up the server.

### **Deploying an operating system**

- .4. Deploy a supported operating system to the boot device drive.

For more information, see the product QuickSpecs (<https://www.hpe.com/info/qs>).

After the OS installation completes, the system automatically copies the operating system to the second, mirrored drive on the boot device.

5. Proceed with normal system setup and operation.

## Installing a rear serial port interface


### Prerequisites

Before you perform this procedure, make sure that you have the following items available:


The components included with the hardware option kit

### Procedure

1. Power down the server.
2. Do one of the following:
  - Disconnect each power cord from the power source.
  - Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Remove the serial port blank.

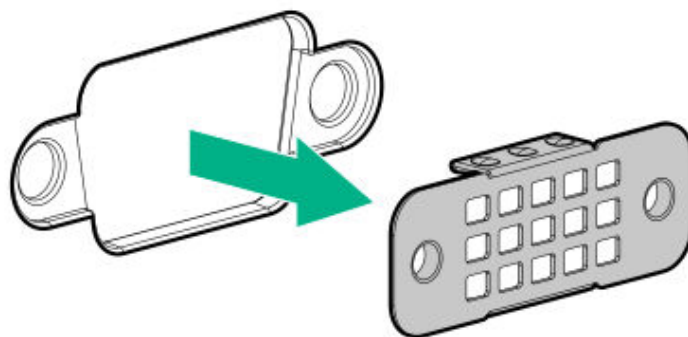

6. Install the serial port interface.

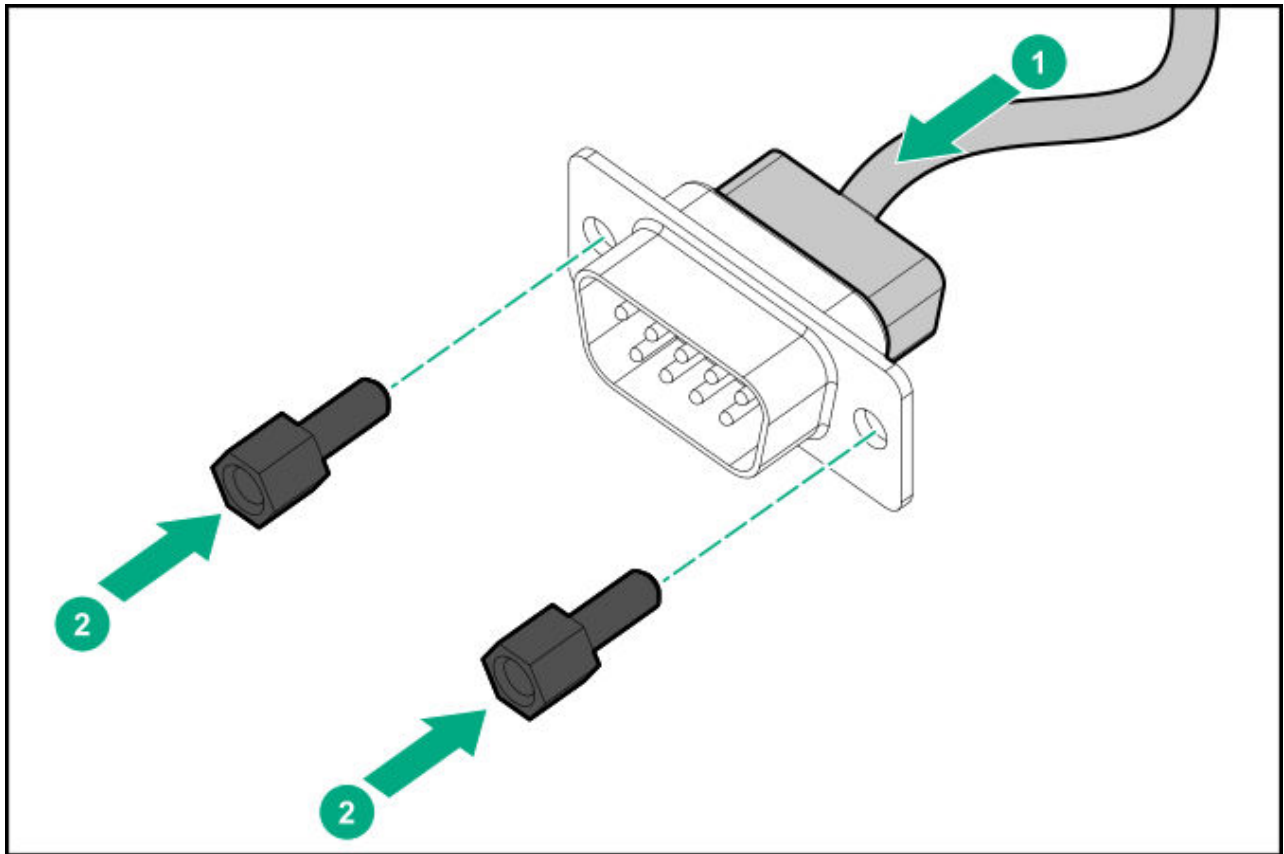

7. Connect the cable to the system board.
8. Install the access panel.
9. Install the server in the rack.
0. Connect each power cord to the server.
- .1. Connect each power cord to the power source.
- .2. Power up the server.

### **Results**

The installation is complete.

## **Installing the Systems Insight Display**


### **Prerequisites**

Before you perform this procedure, make sure that you have the following items available:

- The components included with the hardware option kit
- T-10 Torx screwdriver


### **Procedure**

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. Do one of the following:
  - Remove the air baffle.
  - If installed, remove the 4LFF midplane drive cage.
6. Remove the fan cage.
7. Disconnect the power switch module cable from the power switch/SID module connector.  
  
The SID module cable connects to the same connector.
8. Remove the power switch module. Retain the T-10 screw.

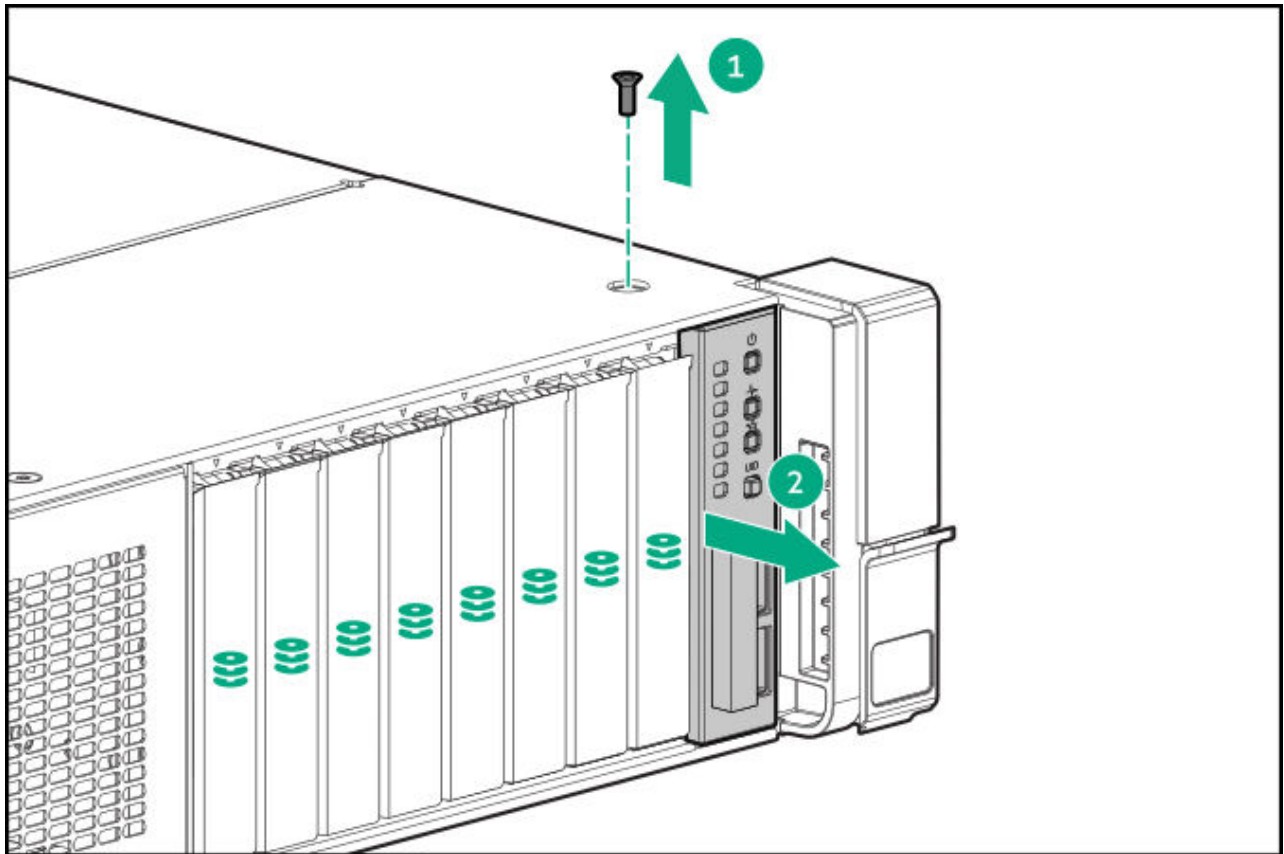

**CAUTION:** When routing cables, make sure that the cables are not in a position where they can be pinched or crimped.

9. Route the SID cable through the opening in the front of the server, and then install the SID module. Secure the module using the T-10 screw.

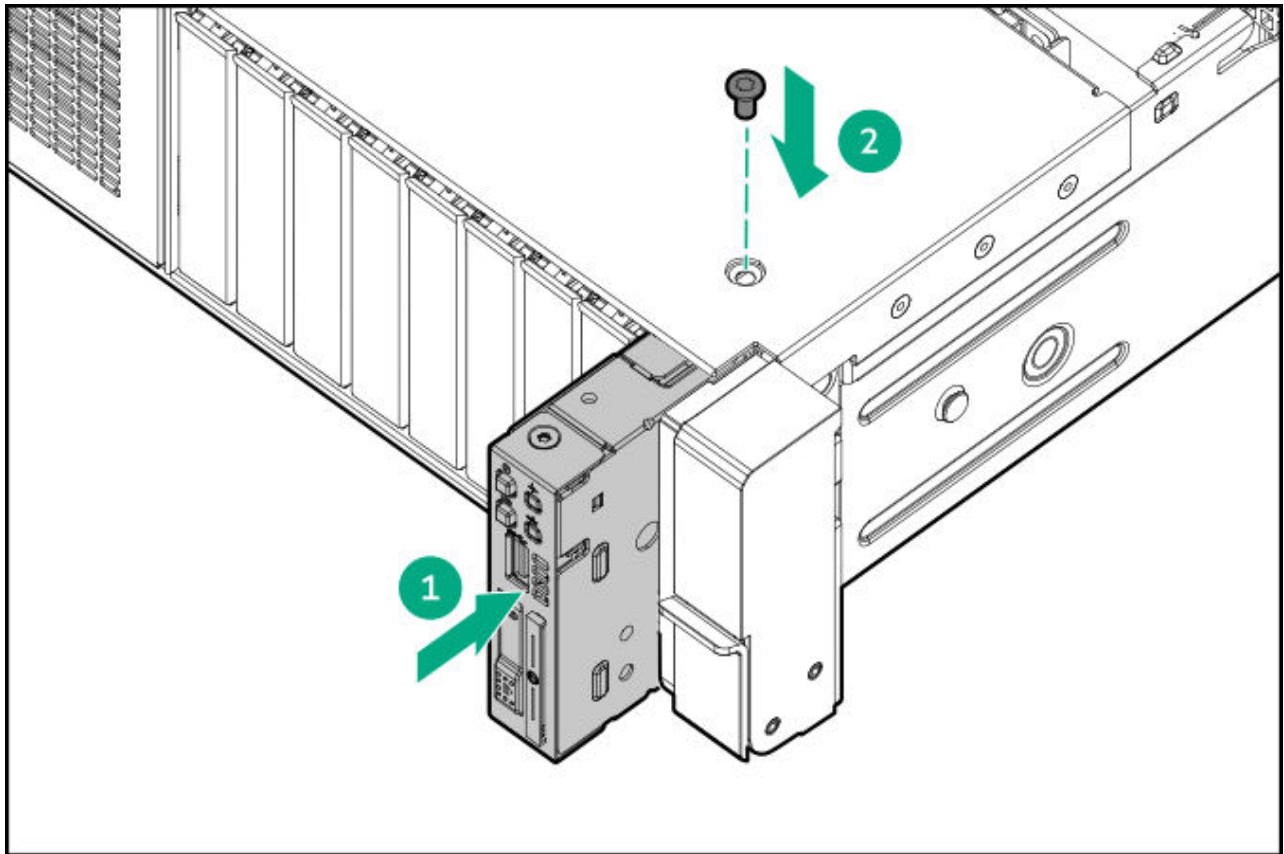

- .0. Connect the SID module cable to the power switch/SID module connector.
- .1. Install the fan cage.
- .2. Do one of the following:
  - Install the air baffle.
  - Installing the midplane or air baffle.
- .3. Install the access panel.
- .4. Slide the server into the rack.
- .5. Connect each power cord to the server.
- .6. Connect each power cord to the power source.
- .7. Power up the server.

### **Results**

The installation is complete.

# HPE Trusted Platform Module 2.0 Gen10 Plus option

## Subtopics

### Overview

#### HPE Trusted Platform Module 2.0 guidelines

#### Installing and enabling the HPE TPM 2.0 Gen10 Plus option

## Overview

Use these instructions to install and enable an HPE TPM 2.0 Gen10 Plus Kit in a supported server. This option is not supported on Gen10 and earlier servers.

This procedure includes three sections:

1. Installing the Trusted Platform Module board.
2. Enabling the Trusted Platform Module.
3. Retaining the recovery key/password.

HPE TPM 2.0 installation is supported with specific operating system support such as Microsoft Windows Server 2012 R2 and later. For more information about operating system support, see the product QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/qs>). For more information about Microsoft Windows BitLocker Drive Encryption feature, see the Microsoft website (<https://www.microsoft.com>).



**CAUTION:** If the TPM is removed from the original server and powered up on a different server, data stored in the TPM including keys will be erased.



**IMPORTANT:** In UEFI Boot Mode, the can be configured to operate as TPM 2.0 (default) or TPM 1.2 on a supported server. In Legacy Boot Mode, the configuration can be changed between TPM 1.2 and TPM 2.0, but only TPM 1.2 operation is supported.

## HPE Trusted Platform Module 2.0 guidelines



**CAUTION:** Always observe the guidelines in this document. Failure to follow these guidelines can cause hardware damage or halt data access.

**Hewlett Packard Enterprise SPECIAL REMINDER:** Before enabling TPM functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable.

For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. Hewlett Packard Enterprise will not be responsible for any related liabilities.

**慧与特别提醒：**在您启用系统中的TPM功能前，请务必确认您对TPM的使用遵守当地相关法律、法规及政策，并已事先获得所需的一切批准及许可（如适用），因您未获得相应的操作/使用许可而导致的违规问题，皆由您自行承担全部责任，与慧与无涉。

When installing or replacing a TPM, observe the following guidelines:

- Do not remove an installed TPM. Once installed, the TPM becomes a permanent part of the system board.
- When installing or replacing hardware, Hewlett Packard Enterprise service providers cannot enable the TPM or the encryption technology. For security reasons, only the customer can enable these features.
- When returning a system board for service replacement, do not remove the TPM from the system board. When requested, Hewlett Packard Enterprise Service provides a TPM with the spare system board.
- Any attempt to remove the cover of an installed TPM from the system board can damage the TPM cover, the TPM, and the system board.
- If the TPM is removed from the original server and powered up on a different server, all data stored in the TPM including keys will be erased.
- When using BitLocker, always retain the recovery key/password. The recovery key/password is required to complete Recovery Mode after BitLocker detects a possible compromise of system integrity.
- Hewlett Packard Enterprise is not liable for blocked data access caused by improper TPM use. For operating instructions, see the TPM documentation or the encryption technology feature documentation provided by the operating system.

## Installing and enabling the HPE TPM 2.0 Gen10 Plus option

### Subtopics

**[Installing the Trusted Platform Module board](#)**

**[Enabling the Trusted Platform Module](#)**

**[Retaining the BitLocker recovery key/password](#)**

# Installing the Trusted Platform Module board

## Subtopics

[Preparing the server for installation](#)

[Installing the TPM board and cover](#)

[Preparing the server for operation](#)

## Preparing the server for installation

### Procedure

1. Observe the following warnings:



**WARNING:** The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server:

- For rack and tower servers, remove the power cord.
- For server blades and compute modules, remove the server blade or compute module from the enclosure.



**WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

2. Update the system ROM.

Locate and download the latest ROM version from the Hewlett Packard Enterprise Support Center website (<https://www.hpe.com/support/hpesc>). To update the system ROM, follow the instructions on the website.

3. Power down the server.

- a. Shut down the OS as directed by the OS documentation.
- b. To place the server in standby mode, press the Power On/Standby button. When the server enters standby power mode, the system power LED changes to amber.
- c. Disconnect the power cords (rack and tower servers).

4. Do one of the following:
  - Depending on your product, extend or remove the server from the rack.
  - Remove the server from the enclosure.
5. If removed, place the server on a flat, level work surface.
6. Remove the access panel.
7. Remove any options or cables that might prevent access to the TPM connector.
8. Proceed to "Installing the TPM board and cover."

## Installing the TPM board and cover

### Procedure

1. Observe the following alerts:




**CAUTION:** If the TPM is removed from the original server and powered up on a different server, data stored in the TPM including keys will be erased.




**CAUTION:** The TPM is keyed to install only in the orientation shown. Any attempt to install the TPM in a different orientation might result in damage to the TPM or system board.

2. Install the TPM board:
  - a. Locate the TPM connector on the system board. See the server hood label for the exact location.
  - b. Align the TPM board with the key on the connector, and then install the TPM board. To seat the board, press the TPM board firmly into the connector.

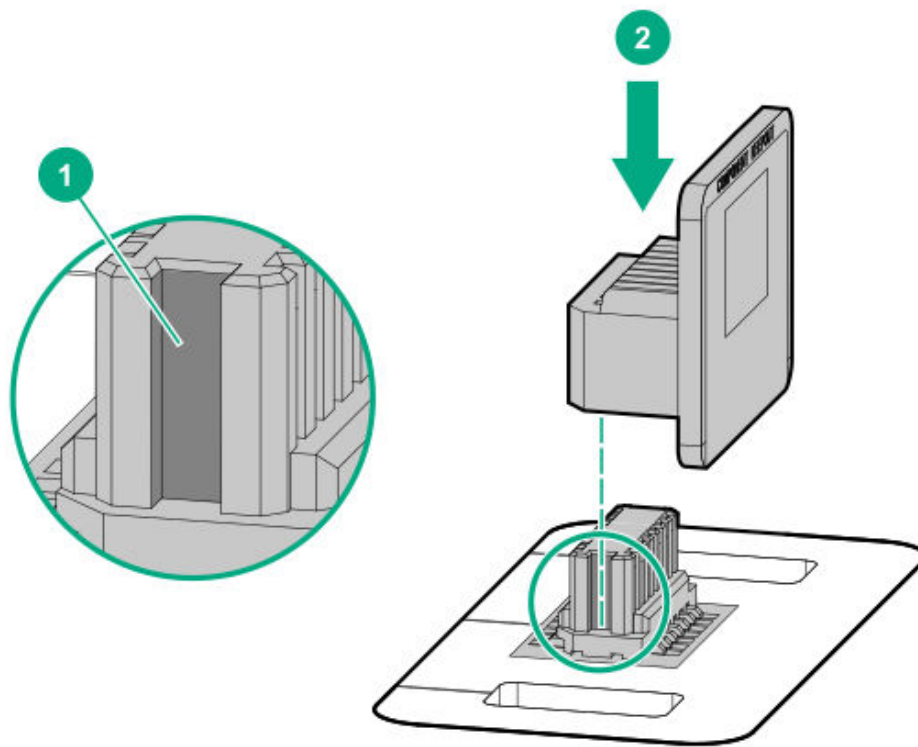


3. Install the TPM cover:

- a. Align the pins on the cover with the openings on the system board.
- b. Press straight down on the middle of the cover until the alignment pins are seated into the holes.

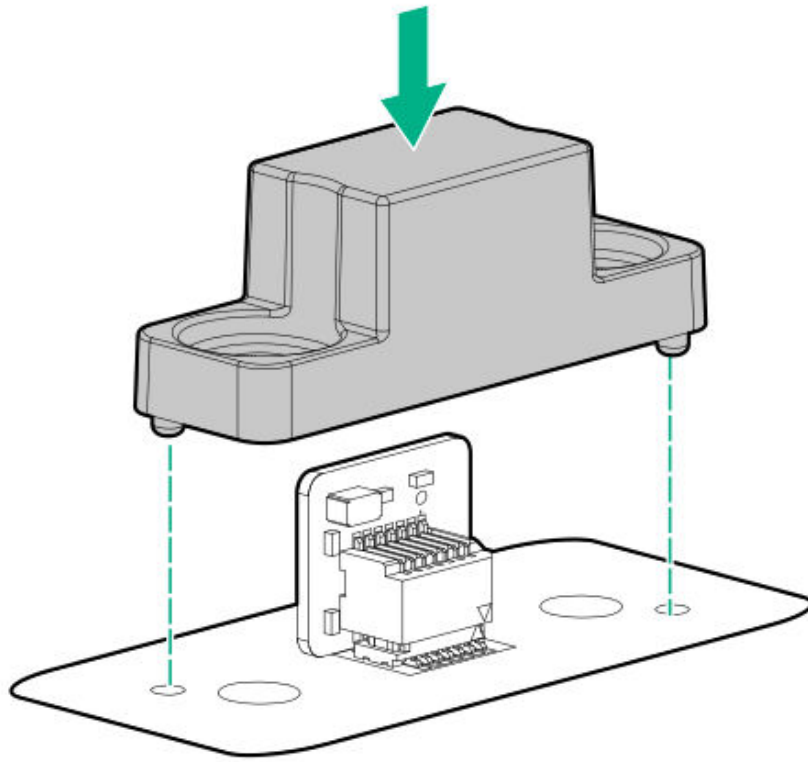

4. Secure the rivets into place by pushing them firmly through the holes in the TPM cover.

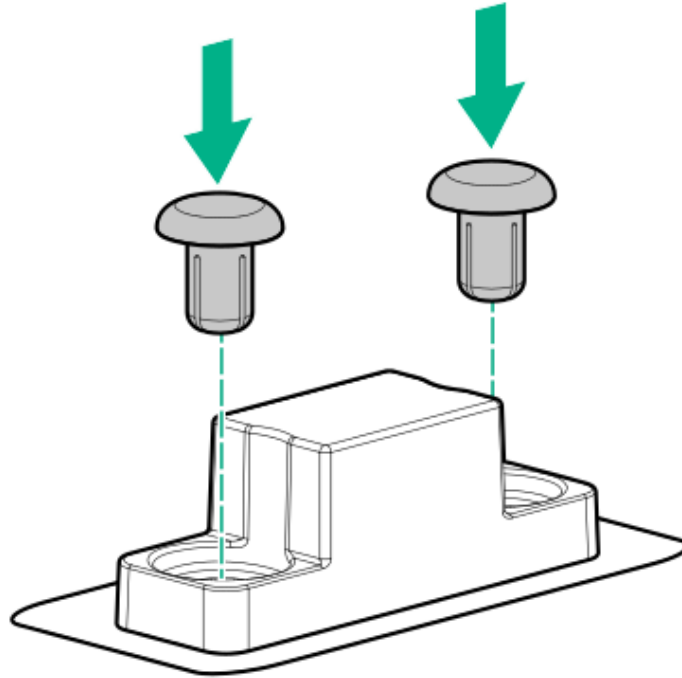

5. Proceed to "Preparing the server for operation."

## Preparing the server for operation

### Procedure

1. Install any options or cables previously removed to access the TPM connector.
2. Install the access panel.
3. Do one of the following:
  - Slide or install the server into the rack.
  - Install the server into the enclosure.
4. Power up the server.
  - a. Connect the power cords (rack and tower servers).
  - b. Press the Power On/Standby button.

# Enabling the Trusted Platform Module

When enabling the Trusted Platform module, observe the following guidelines:

- By default, the Trusted Platform Module is enabled as TPM 2.0 when the server is powered on after installing it.
- In UEFI Boot Mode, the Trusted Platform Module can be configured to operate as TPM 2.0 (default) or TPM 1.2.
- In Legacy Boot Mode, the Trusted Platform Module configuration can be changed between TPM 1.2 and TPM 2.0 (default), but only TPM 1.2 operation is supported.

## Subtopics

[Enabling the Trusted Platform Module as TPM 2.0](#)

[Enabling the Trusted Platform Module as TPM 1.2](#)

# Enabling the Trusted Platform Module as TPM 2.0

## About this task

### Procedure

1. During the server startup sequence, press the **F9** key to access **System Utilities**.
2. From the System Utilities screen, select **System Configuration > BIOS/Platform Configuration (RBSU) > Server Security > Trusted Platform Module options**.
3. Verify the following:
  - "Current TPM Type" is set to **TPM 2.0**.
  - "Current TPM State" is set to **Present and Enabled**.
  - "TPM Visibility" is set to **Visible**.
4. If changes were made in the previous step, press the **F10** key to save your selection.
5. If **F10** was pressed in the previous step, do one of the following:
  - If in graphical mode, click **Yes**.
  - If in text mode, press the **Y** key.

6. Press the **ESC** key to exit System Utilities.
7. If changes were made and saved, the server prompts for reboot request. Press the **Enter** key to confirm reboot.

If the following actions were performed, the server reboots a second time without user input. During this reboot, the TPM setting becomes effective.

- Changing from TPM 1.2 and TPM 2.0
  - Changing TPM bus from FIFO to CRB
  - Enabling or disabling TPM
  - Clearing the TPM
8. Enable TPM functionality in the OS, such as Microsoft Windows BitLocker or measured boot.

For more information, see the [Microsoft website](#).

## Enabling the Trusted Platform Module as TPM 1.2

### About this task

### Procedure

1. During the server startup sequence, press the **F9** key to access **System Utilities**.
2. From the System Utilities screen select **System Configuration > BIOS/Platform Configuration (RBSU) > Server Security > Trusted Platform Module options**.
3. Change the "TPM Mode Switch Operation" to **TPM 1.2**.
4. Verify that "TPM Visibility" is set to **Visible**.
5. Press the **F10** key to save your selection.
6. When prompted to save the change in System Utilities, do one of the following:
  - If in graphical mode, click **Yes**.
  - If in text mode, press the **Y** key.
7. Press the **ESC** key to exit System Utilities.

The server reboots a second time without user input. During this reboot, the TPM setting becomes effective.

8. Enable TPM functionality in the OS, such as Microsoft Windows BitLocker or measured boot.

For more information, see the [Microsoft website](#).

## Retaining the BitLocker recovery key/password

The recovery key/password is generated during BitLocker setup, and can be saved and printed after BitLocker is enabled. When using BitLocker, always retain the recovery key/password. The recovery key/password is required to enter Recovery Mode after BitLocker detects a possible compromise of system integrity.

To help ensure maximum security, observe the following guidelines when retaining the recovery key/password:

- Always store the recovery key/password in multiple locations.
- Always store copies of the recovery key/password away from the server.
- Do not save the recovery key/password on the encrypted hard drive.

## Cabling

### Subtopics

[Cabling guidelines](#)

[Power cabling](#)

[Cabling diagrams](#)

[Cable routing: Front I/O cabling](#)

[Cable routing: Serial port](#)

[Cable routing: OCP NVMe enablement](#)

## Cabling guidelines

The cable colors in the cabling diagrams used in this chapter are for illustration purposes only.

Observe the following guidelines when working with server cables.

### Before connecting cables

- Note the port labels on the PCA components. Not all these components are used by all servers:

- System board ports
- Drive and power supply backplane ports
- Expansion board ports (controllers, adapters, expanders, risers, and similar boards)
- Note the label near each cable connector. This label indicates the destination port for the cable connector.
- Some data cables are prebent. Do not unbend or manipulate the cables.
- To prevent mechanical damage or depositing oil that is present on your hands, and other contamination, do not touch the ends of the connectors.


### **When connecting cables**

- Before connecting a cable to a port, lay the cable in place to verify the length of the cable.
- Use the internal cable management features to properly route and secure the cables.
- When routing cables, be sure that the cables are not in a position where they can be pinched or crimped.
- Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.
- Make sure that the excess length of cables is properly secured to avoid excess bends, interference issues, and airflow restriction.
- To prevent component damage and potential signal interference, make sure that all cables are in their appropriate routing position before installing a new component and before closing up the server after hardware installation/maintenance.

### **When disconnecting cables**

- Grip the body of the cable connector. Do not pull on the cable itself because this action can damage the internal wires of the cable or the pins on the port.

- If a cable does not disconnect easily, check for any release latch that must be pressed to disconnect the cable.

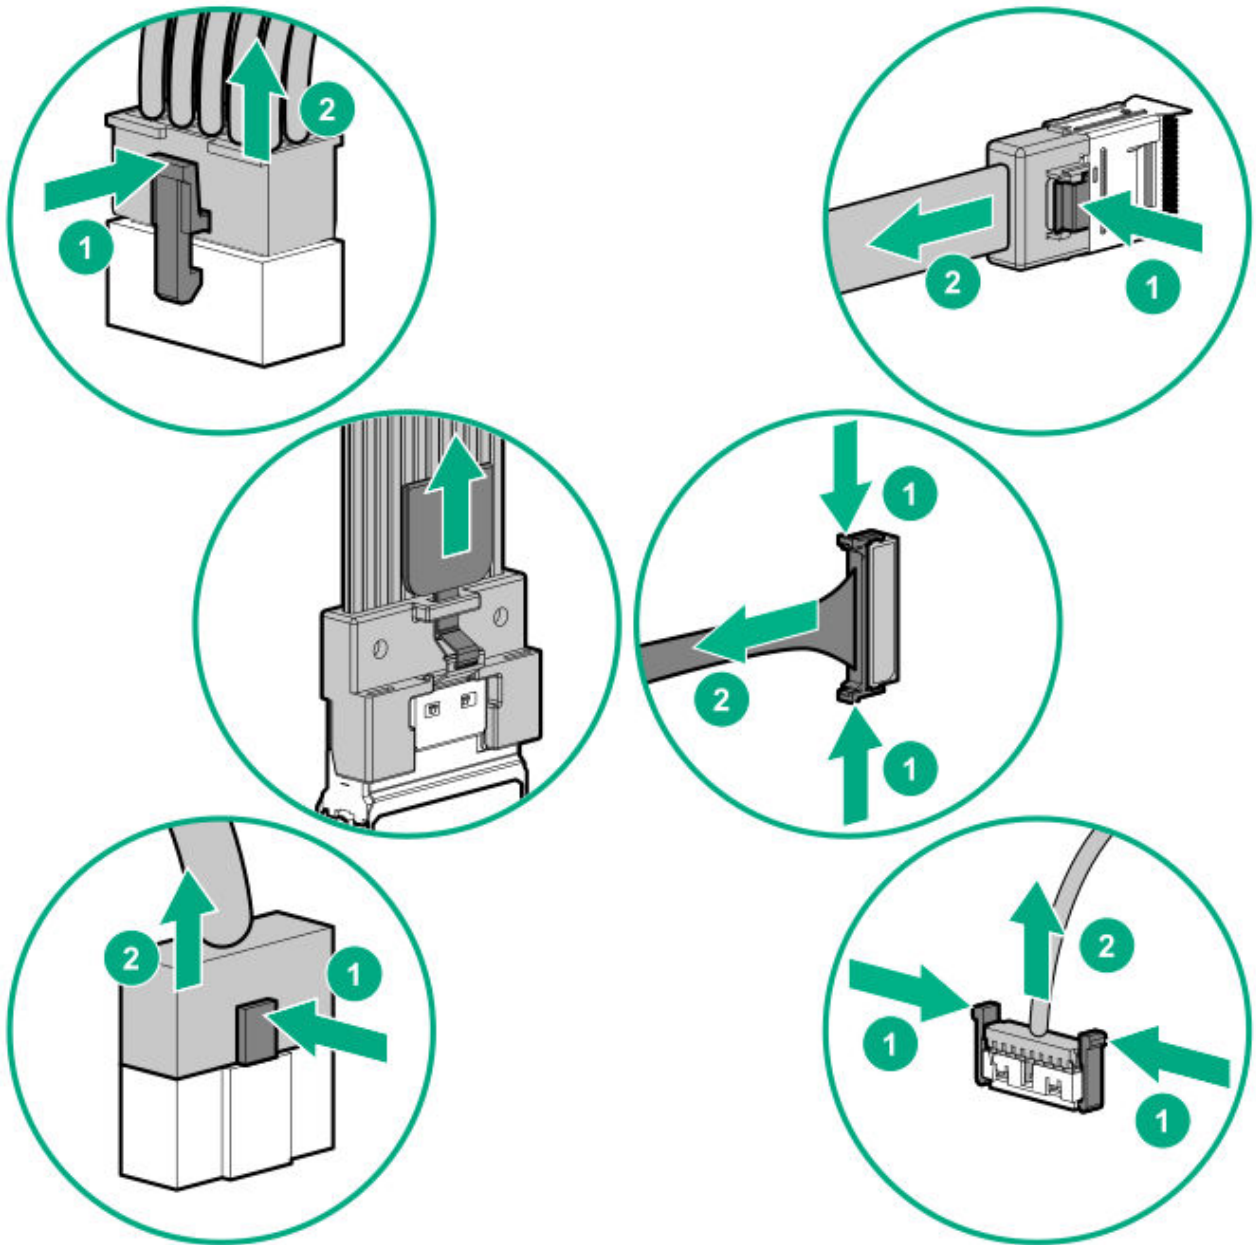

- Remove cables that are no longer being used. Retaining them inside the server can restrict airflow. If you intend to use the removed cables later, label and store them for future use.

## Power cabling

Use the following tables to find cabling information and diagrams.

**Table 1. Power cables**

<b>Cable description</b>	<b>Cable part number</b>	<b>From</b>	<b>To</b>
PWR, 1x5 to 2x4, LFF, 240mm	<a href="#"><u>P14341-001</u></a>	Backplane	System board
PWR, 1x5 to 2x4, LFF, 400mm	<a href="#"><u>P14342-001</u></a>	Backplane	System board
PWR, 1x5 to 2x4 + x, LFF, 400mm	<a href="#"><u>P14343-001</u></a>	Backplane	System board
PWR, 2x3 to 2x3, SFF	<a href="#"><u>P14345-001</u></a>	Backplane	System board
PWR, 2x5 to 2x3 + 2x4 Midplane	<a href="#"><u>P14346-001</u></a>	Backplane	System board
PWR, 4LFF/8SFF	869825-001	Backplane	System board
I/O Wire to Board, FRONT	P14312-001	Backplane	System board

**Subtopics**

**[Cable routing: Front 8SFF power cabling](#)**


**[Cable routing: Front 12LFF power cabling](#)**

**[Cable routing: Midplane power cabling](#)**

**[Cable routing: Front 2SFF side-by-side power cabling](#)**


**[Cable routing: Rear 2SFF power cabling](#)**

## Cable routing: Front 8SFF power cabling

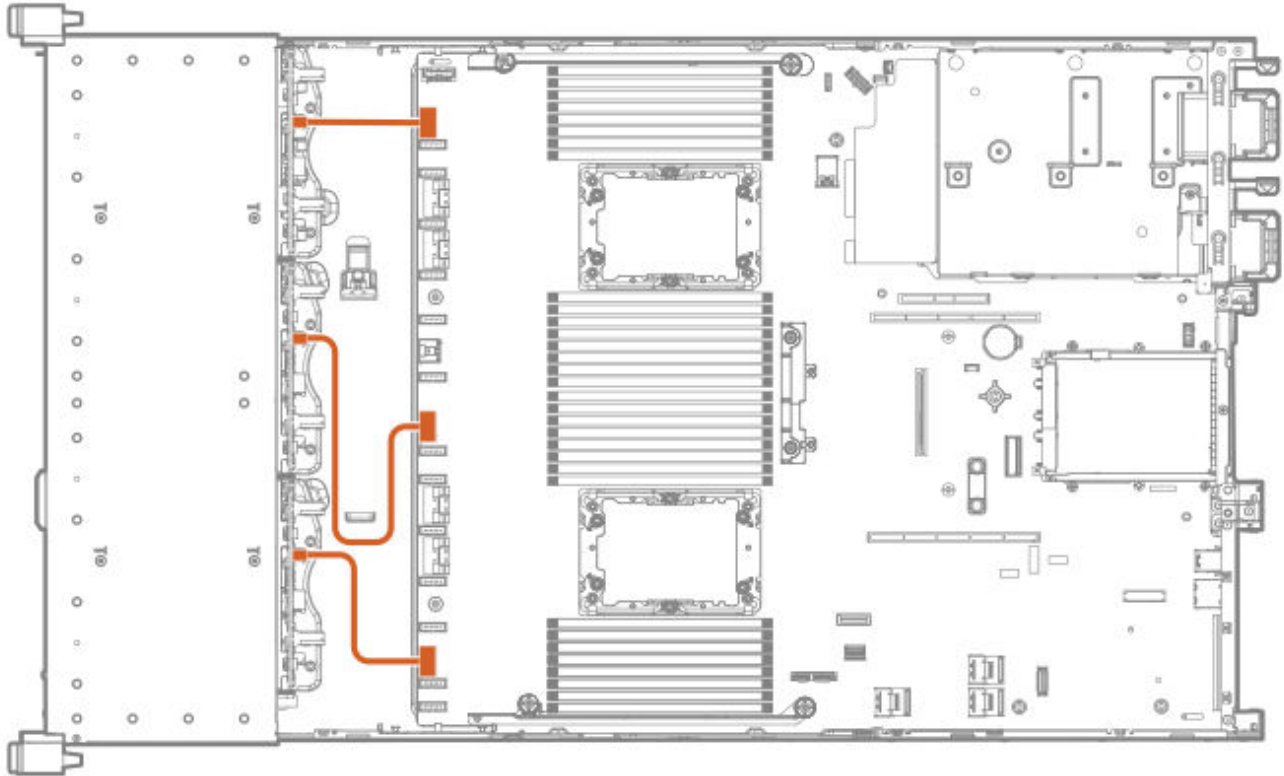


## Cable routing: Front 12LFF power cabling


Box 1

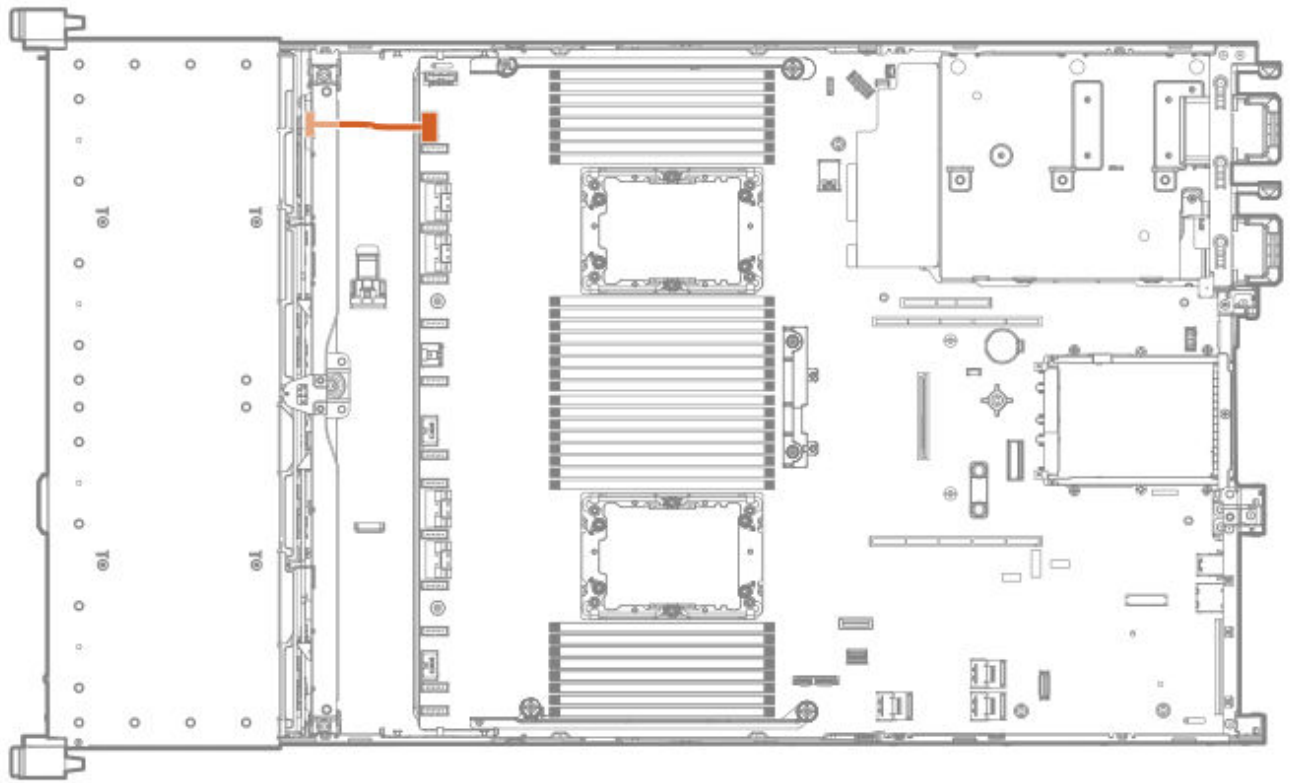

Box 2

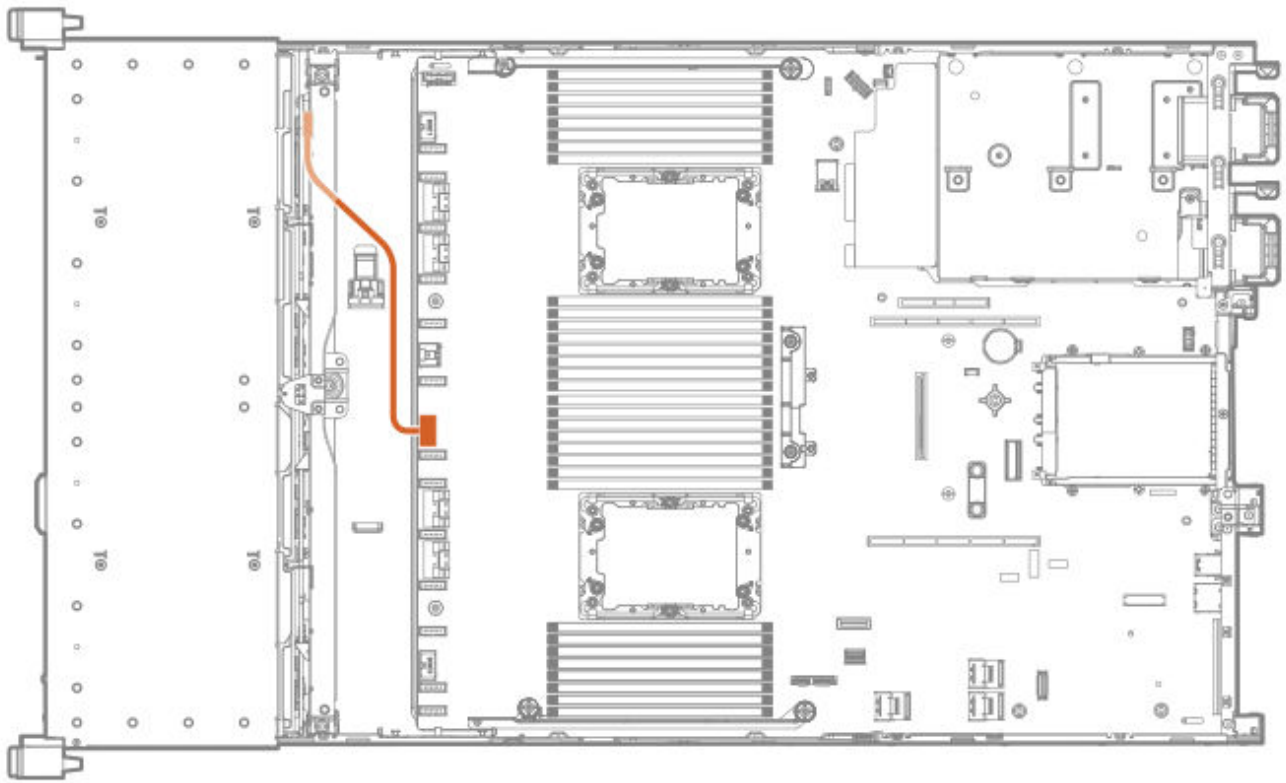


Box 3

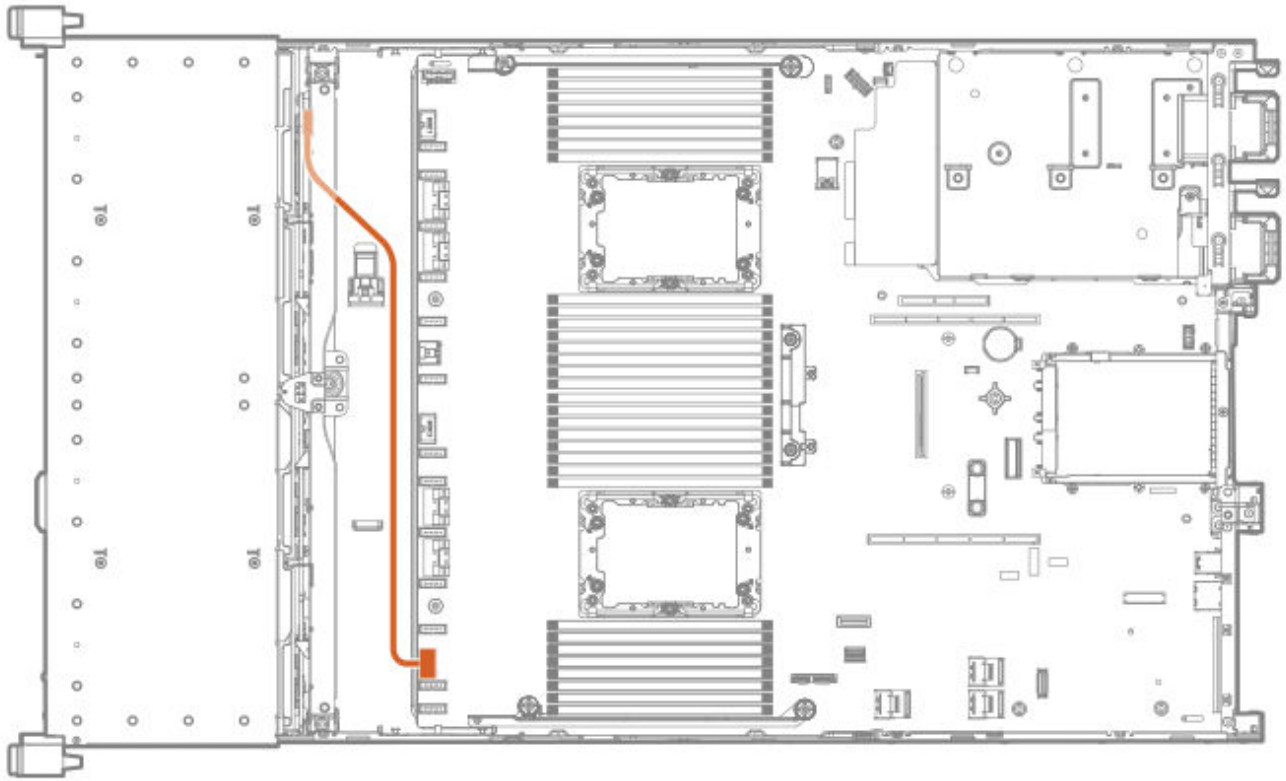


## Cable routing: Midplane power cabling


8SFF midplane shown

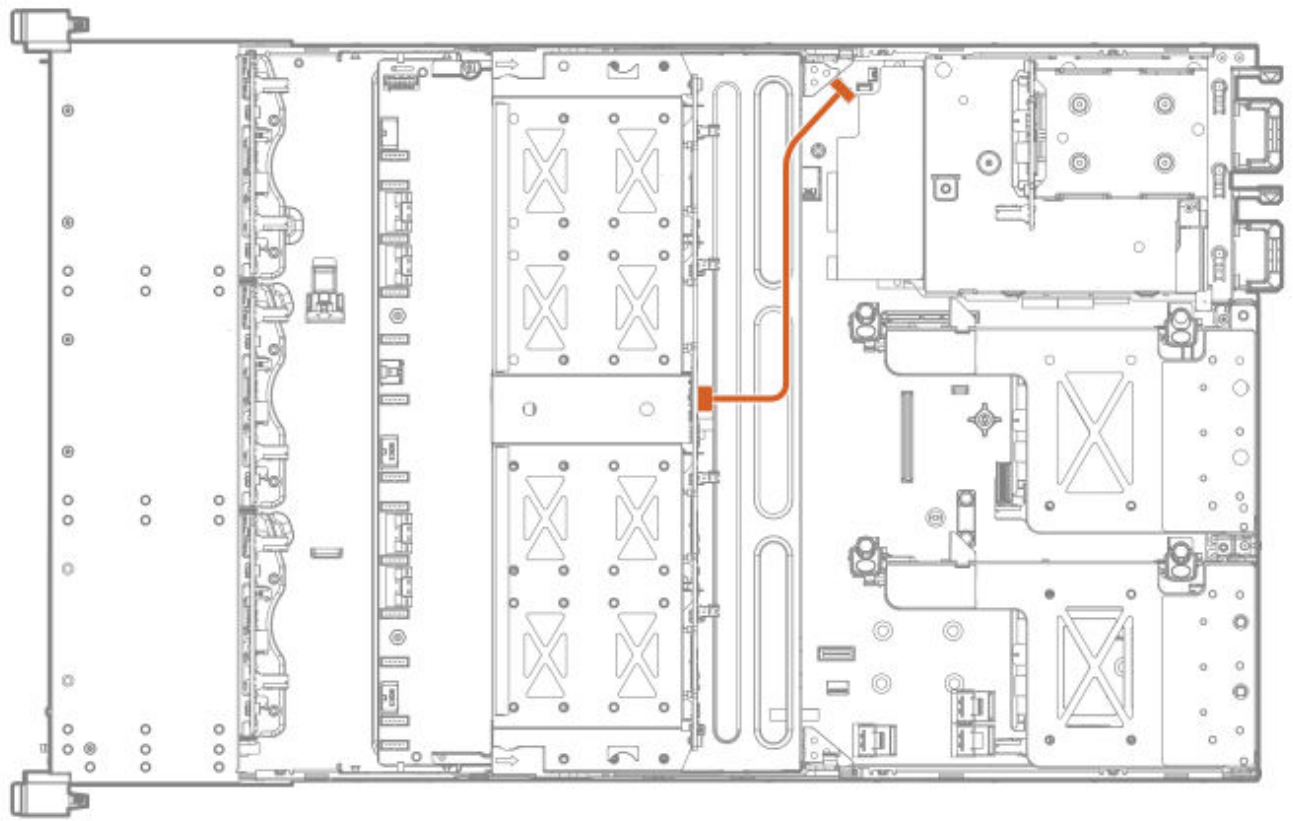

## Cable routing: Front 2SFF side-by-side power cabling

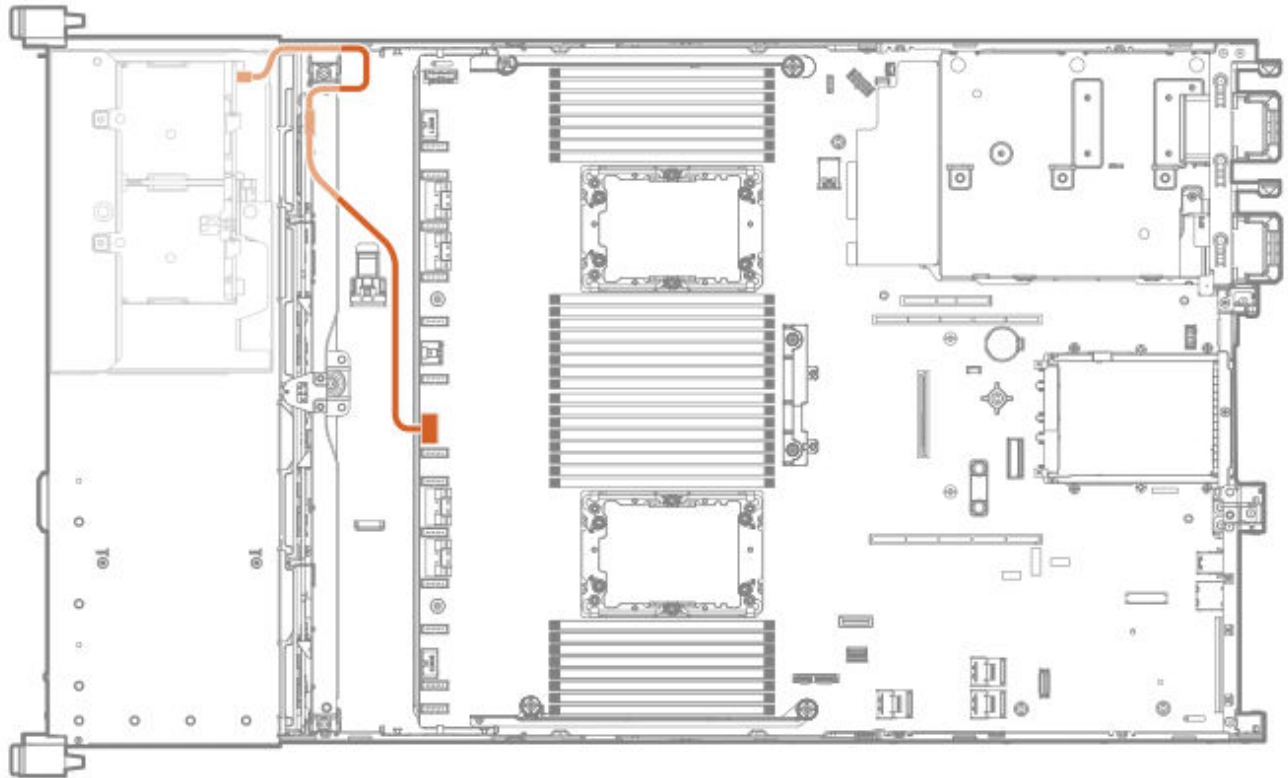

## Cable routing: Rear 2SFF power cabling

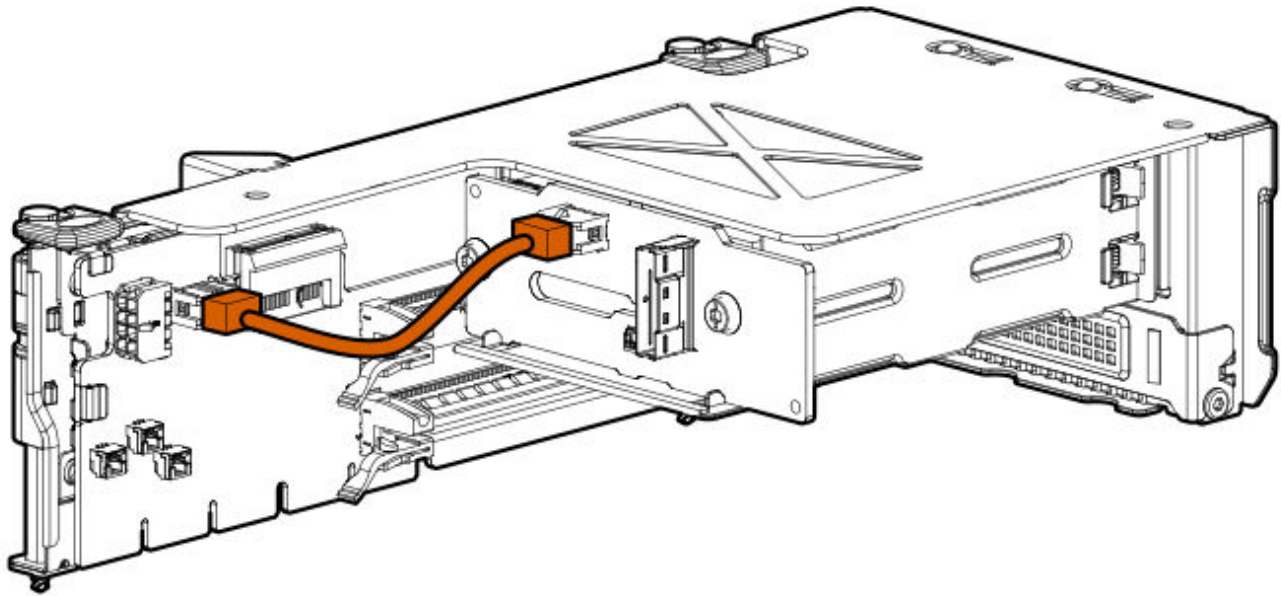

## Cabling diagrams

Use the following tables to find cabling information and diagrams.

**Table 1. Cable kits**

Option kit	Cable part number*	From	To
2SFF stacked	P22903-001	2SFF box 6	AROC to NVMe adapter
2SFF stacked	P22761-001	2SFF stacked	Type-a controller
4LFF SAS/SATA	P51562-001	Box 1/2	Type-a MR controller
	P58791-001	Box 3	Type-a MR controller
8SFF SAS/SATA	776402-001	Box 1/2	Type-a/p controller
	747568-001	Box 3	Type-a/p controller

Option kit	Cable part number*	From	To
	P14335-001	Box 1/2/3	Type-a/p controller
	P14331-001	Box 2 Ports 1-2	Type-a MR controller
	P14332-001	Box 2 Ports 3-4	Type-a MR controller
	P51562-001/P58791-001	Box 1/3	Type-p MR controller
8NVMe	P22345-001	Box 1/2 Port 1 and 2	System board Port 1A-B/2A-B
	P22346-001	Box 2/3 Port 3-4	System board Port 1B/2B
	P22347-001	Box 2/3 Port 3	Type-a controller
	<u>P51562-001</u>	Box 1/2/3	Type-a/p controller
	<u>P51552-001</u>	Box 2	Type-a controller
	<u>P55465-001</u>	Box 1	Type-a controller
	<u>P51558-001</u>	Box 4/5/6	Type-a/p controller
	<u>P58791-001</u>	Box 1/2/3	Type-a/p controller
8SFF midplane	P14334-001	Box 7 Ports 1-4	Type-p controller
8NVMe midplane	P14329-001	Box 7 Port 1	Type-p controller
NVMe direct connect	P14331-001	Box 2 Ports 1-2	Type-a/p controller
	P14332-001	Box 2 Ports 3-4	Type-a/p controller

Option kit	Cable part number*	From	To
	P14330-001	Box 1/3 Ports 3-4	Primary/tertiary type-p controller
	P14333-001	Box 1/3 Ports 1-2	Primary/tertiary type-p controller
	P14326-001	Box 2 Ports 1-4	Type-p controller
	P14327-001	Box 1 Ports 1-4	Type-p controller
	P14328-001	Box 1 2SFF stacked	Tertiary type-p controller
	P14324-001	Box 2 Ports 1-2	Secondary type-p controller
	P14325-001	Box 2 Ports 3-4	Secondary type-p controller
	P14320-001	Box 3 Ports 1-4	Primary riser
	P14321-001	Box 3 Ports 1-4	Primary type-p controller
	P14322-001	Box 2 Ports 1-4	System board Port 1A-B/2A-B
OCP enablement kit	P14337-001	OCP adapter	Primary riser
	P14339-001	OCP adapter	Secondary riser

**Table 2. Front I/O**

Cable description	Cable part number	From	To
Display port + USB 2.0	P14314-001	Component	System board
USB to USB Port	P14315-001	Component	System board
Optical Disk Drive, SATA	P14316-001	Component	System board

Cable description	Cable part number	From	To
Serial port	P14317-001	Component	System board

**Table 3. Power cables**

Cable description	Cable part number	From	To
I/O Wire to Board, FRONT	P14312-001	Backplane	System board
PWR, 1x5 to 2x4, LFF, 240mm	P14341-001	Backplane	System board
PWR, 1x5 to 2x4, LFF, 400mm	P14342-001	Backplane	System board
PWR, 1x5 to 2x4 + x, LFF, 400mm	P14343-001	Backplane	System board
PWR, 2x3 to 2x3, SFF	P14345-001	Backplane	System board
PWR, 2x5 to 2x3 + 2x4	P14346-001	Backplane	System board
PWR, 4LFF/8SFF	869825-001	Backplane	System board

## Subtopics

**Cable routing: 2NVMe box 6 to AROC NVMe adapter**

**Cable routing: 6NVMe box 3 to 3-port primary riser**

**Cable routing: 6NVMe box 3 to 3-port primary riser**

**Cable routing: 8NVMe balanced box 2 to system board**

**Cable routing: 8NVMe P2 box 1 to system board/secondary riser**

**Cable routing: 8NVMe P1 box 3 to system board/primary riser**

**Cable routing: 12NVMe BAL P1 box 2+3 to system board/primary riser/OCP NVMe adapter/Type-a controller**

**Cable routing: 12NVMe BAL P2 box 1+2 to system board/4-port NVMe secondary riser**

**Cable routing: 12NVMe DIFF P1 box 2+3 to system board/4-port NVMe primary riser**

**Cable routing: 12NVMe DIFF P1 box 1+2 to system board/4-port NVMe secondary riser**

**Cable routing: 24NVMe Balanced**

**Cable routing: 24NVMe Differential**

**Cable routing: 8NVMe box 3 to 4-port primary riser**

**Cable routing: 8NVMe box 1 to 4-port secondary riser**

**Cable routing: 8NVMe box 1+2 to type-a controller**

**Cable routing: 8SFF box 2 to type-a controller**

**Cable routing: 8SFF box 3 to 2-port primary type-p controller**

**Cable routing: 8SFF box 2 to 2-port primary type-p controller**

**Cable routing: 2SFF side-by-side to primary type-p controller**

**Cable routing: 8SFF 4-port box 1 to 4-port secondary type-p controller**

**Cable routing: 8SFF 4-port box 2 to 4-port primary type-p controller**

**Cable routing: 8SFF 4-port box 3 to 4-port primary type-p controller**

**Cable routing: 8SFF box 1+2+3 to 4-port secondary type-p controller**

**Cable routing: 8SFF box 1+2+3 to 4-port primary type-p controller**


**Cable routing: 8SFF boxes 1, 2, and 3 to MR type-p/a controllers**

**Cable routing: 8SFF box 1+2+3 to type-a/p MR controller**


**Cable routing: 12LFF box 1+2+3 to type-a MR controller**

**Cable routing: 4LFF SAS/SATA box 7 to 4-port type-a controller**


## **Cable routing: 2NVMe box 6 to AROC NVMe adapter**

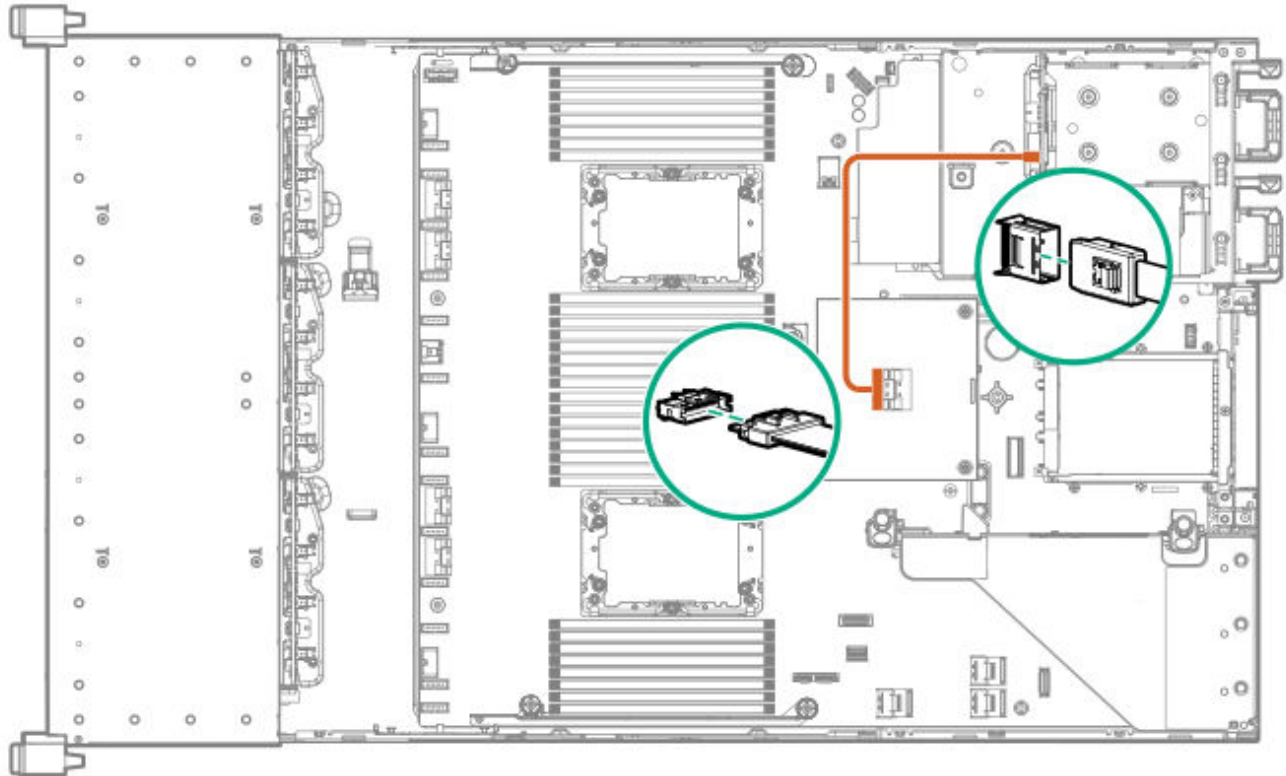

## Cable routing: 6NVMe box 3 to 3-port primary riser

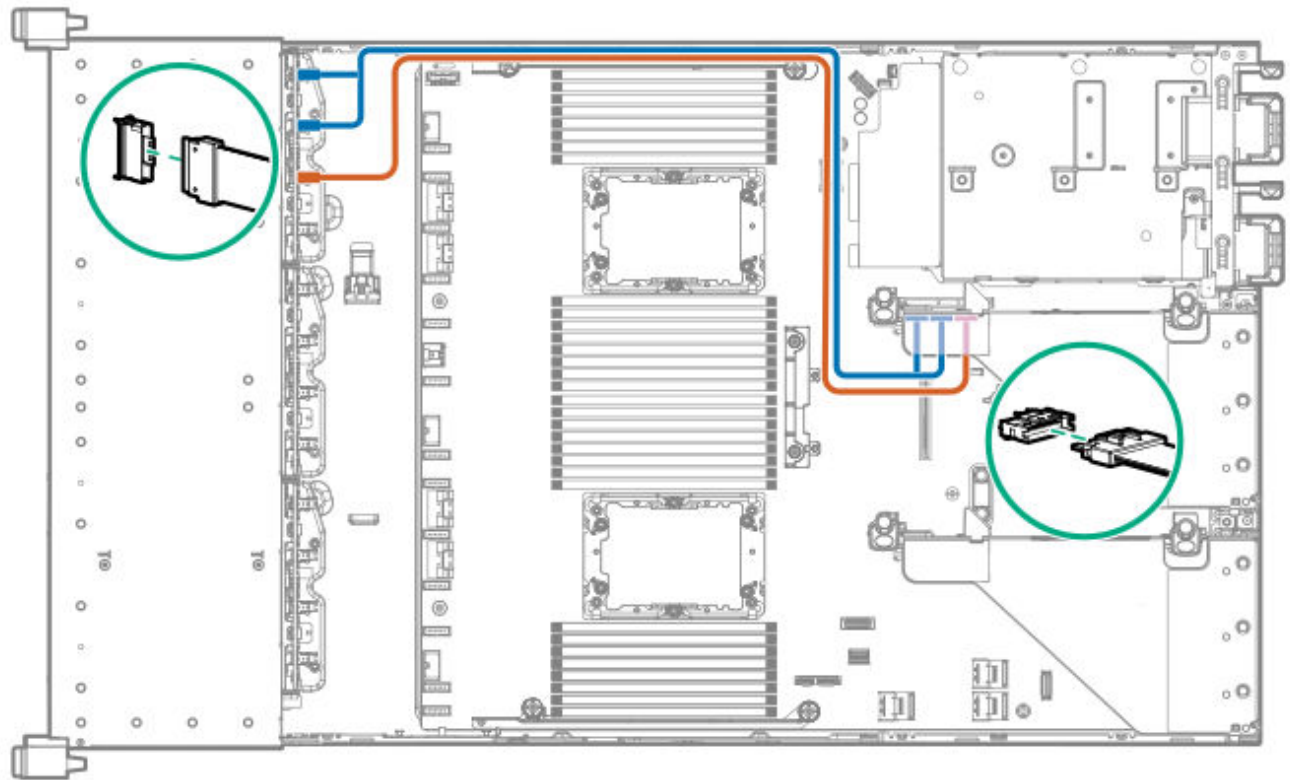


## Cable routing: 6NVMe box 3 to 3-port primary riser

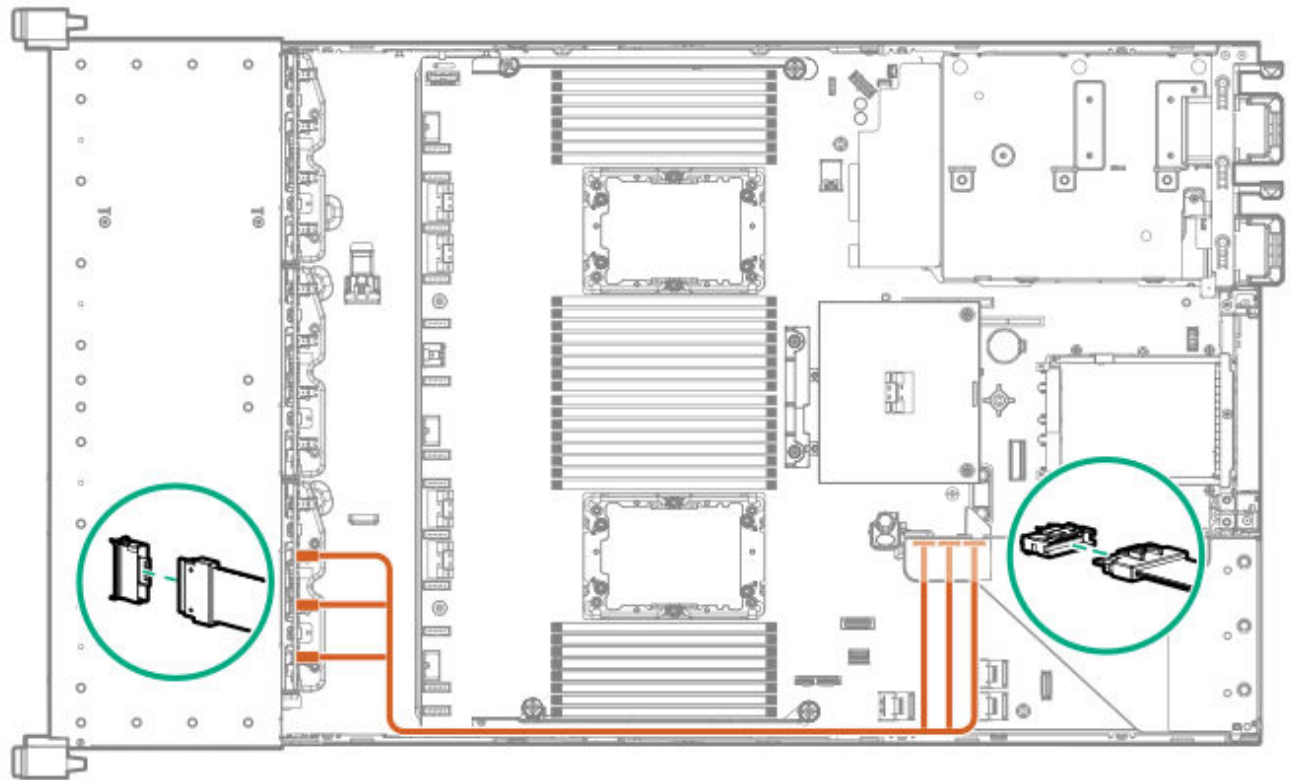


## Cable routing: 8NVMe balanced box 2 to system board


### 8NVMe direct attach

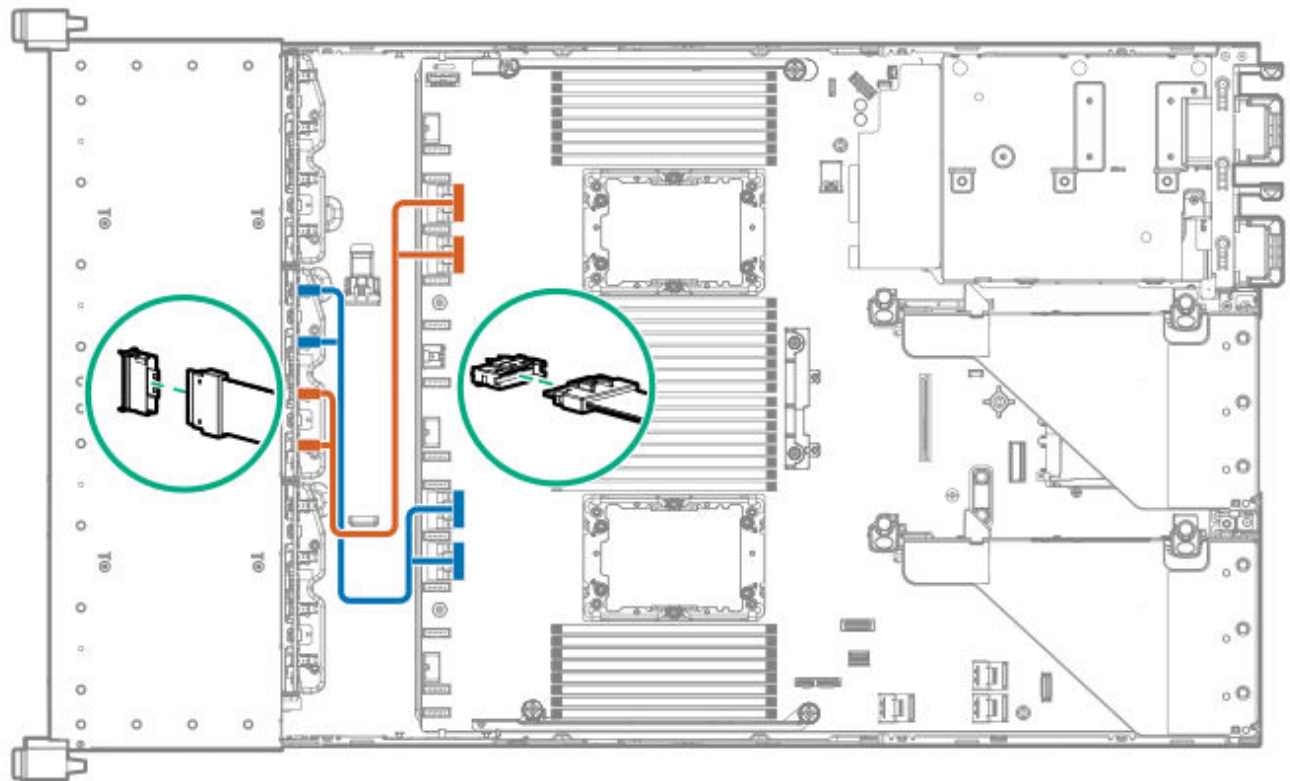

## Cable routing: 8NVMe P2 box 1 to system board/secondary riser

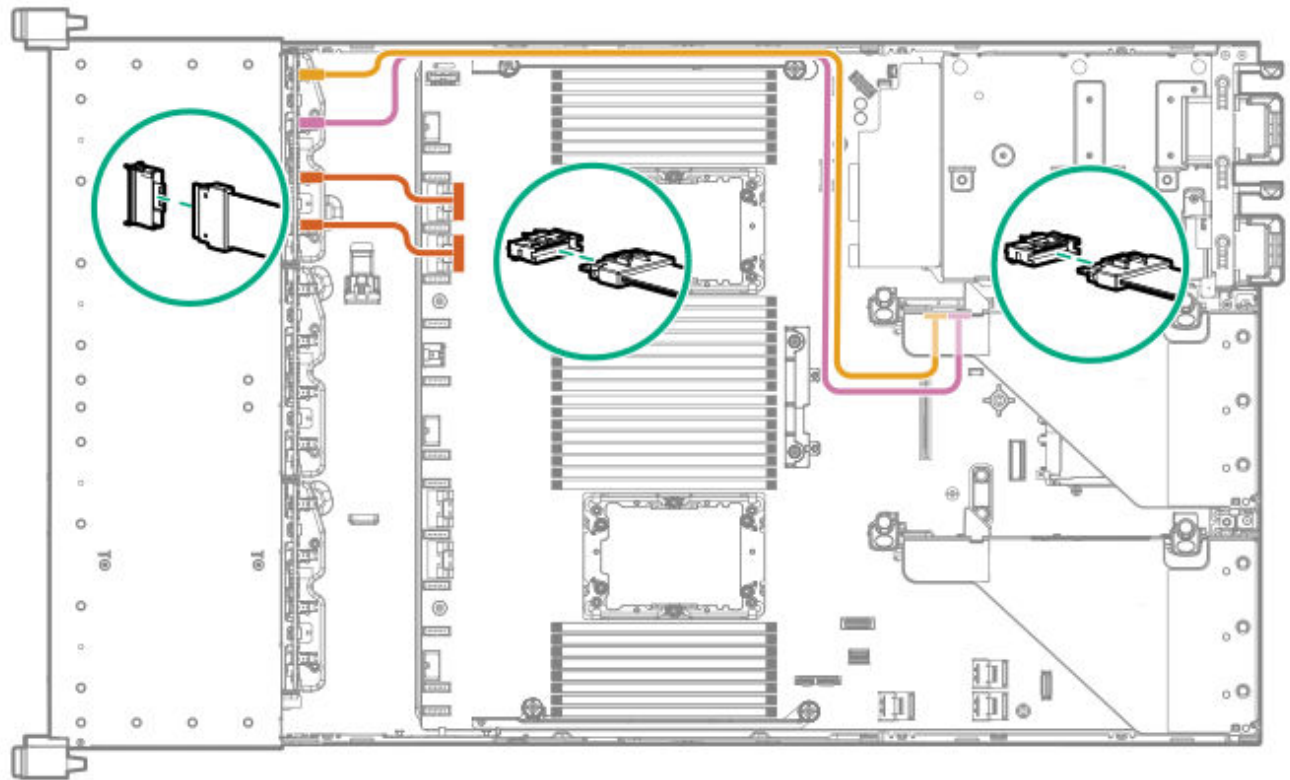


## Cable routing: 8NVMe P1 box 3 to system board/primary riser

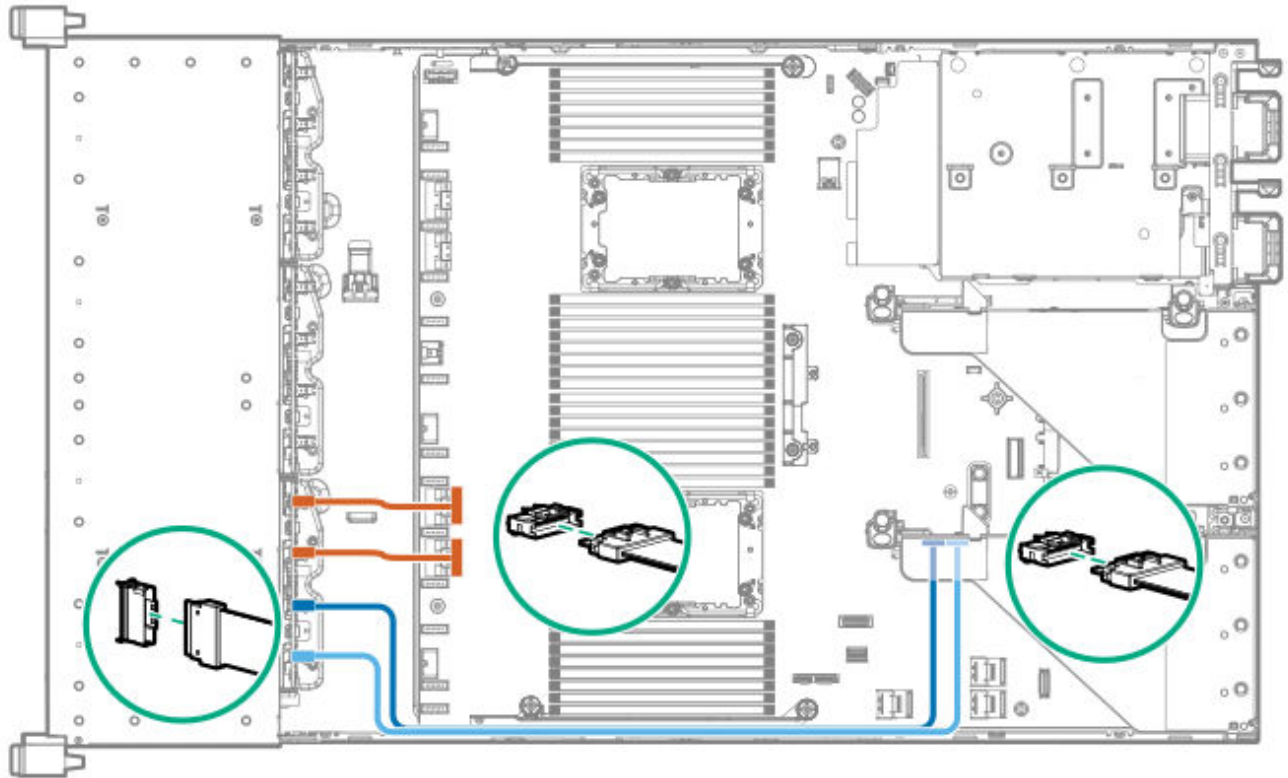


# Cable routing: 12NVMe BAL P1 box 2+3 to system board/primary riser/OCP NVMe adapter/Type-a controller


## 12NVMe P1

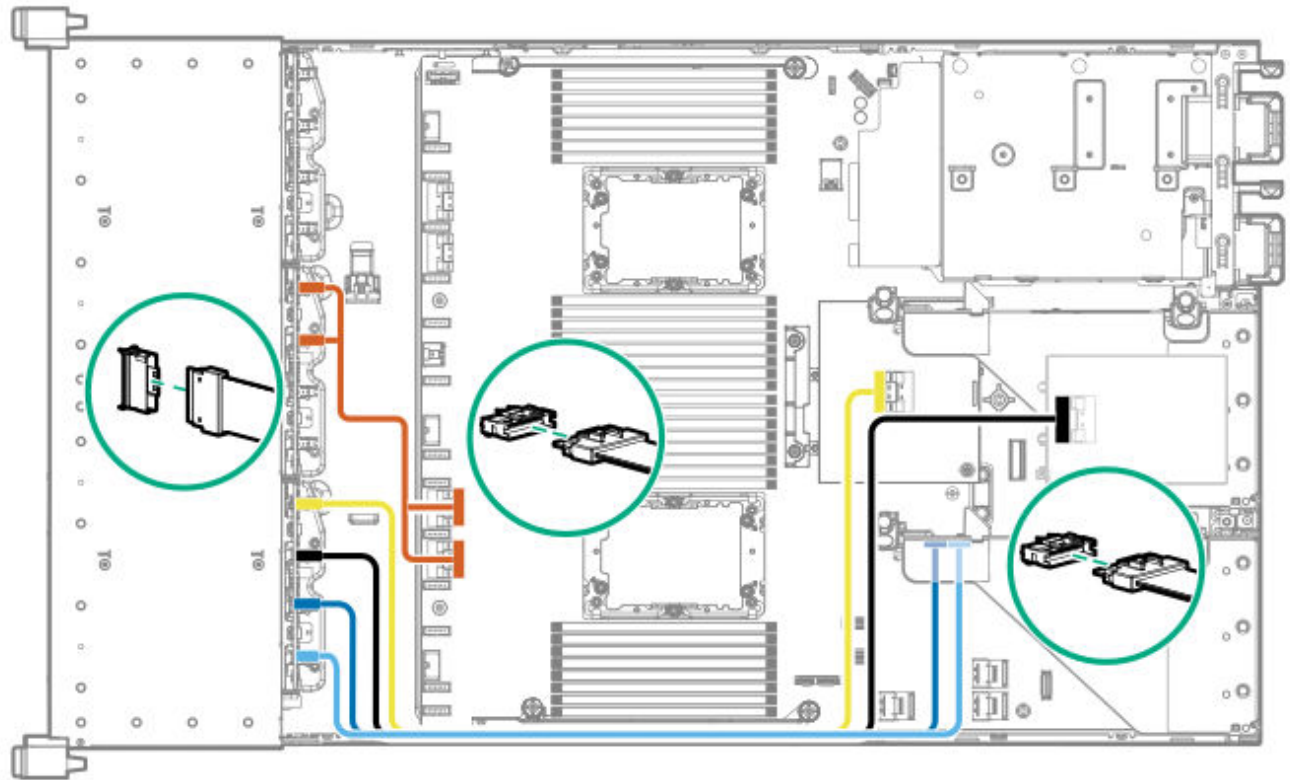


## Cable routing: 12NVMe BAL P2 box 1+2 to system board/4-port NVMe secondary riser

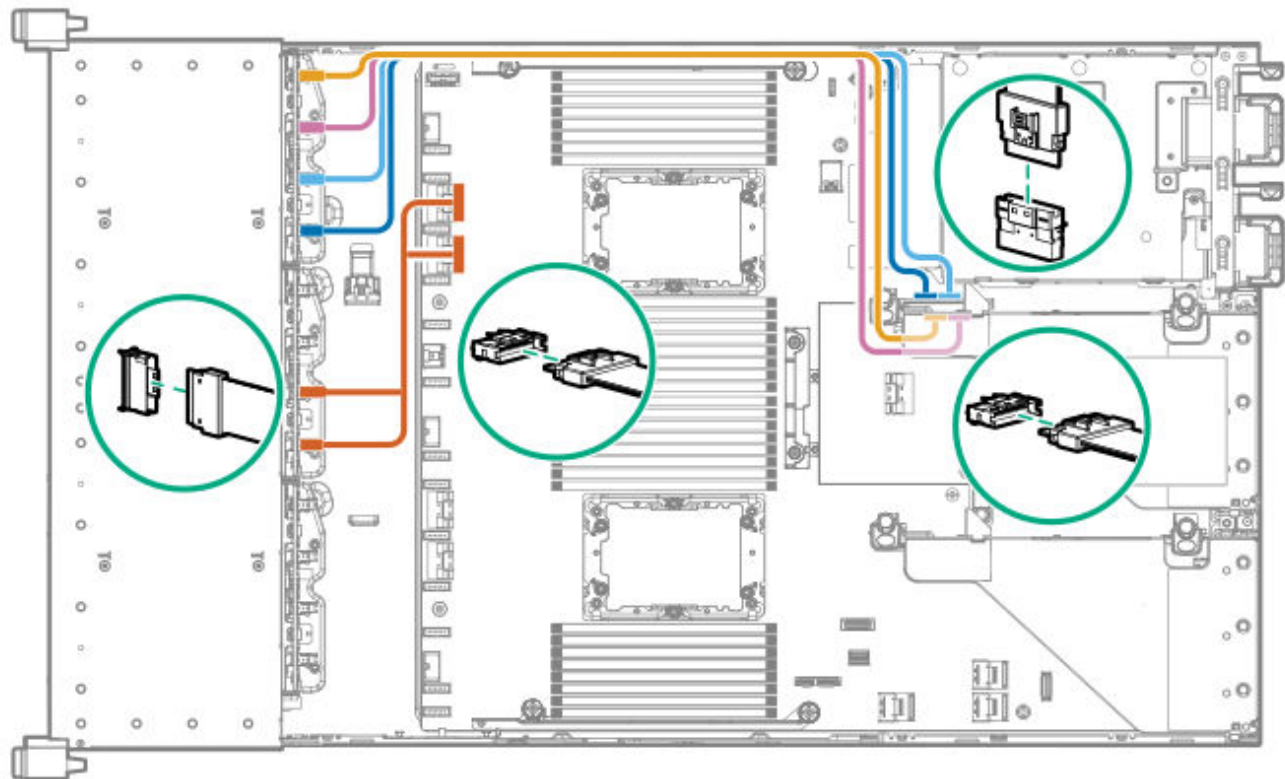


## Cable routing: 12NVMe DIFF P1 box 2+3 to system board/4-port NVMe primary riser

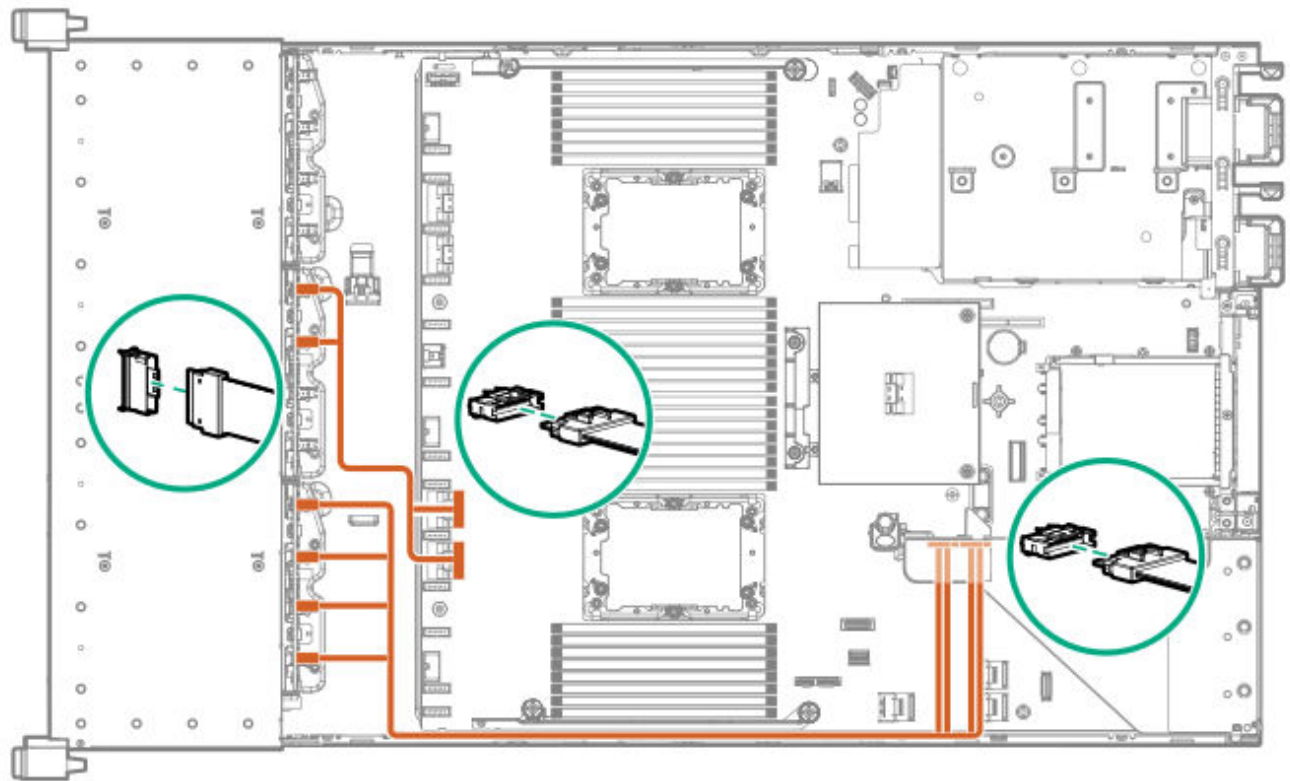


## Cable routing: 12NVMe DIFF P1 box 1+2 to system board/4-port NVMe secondary riser

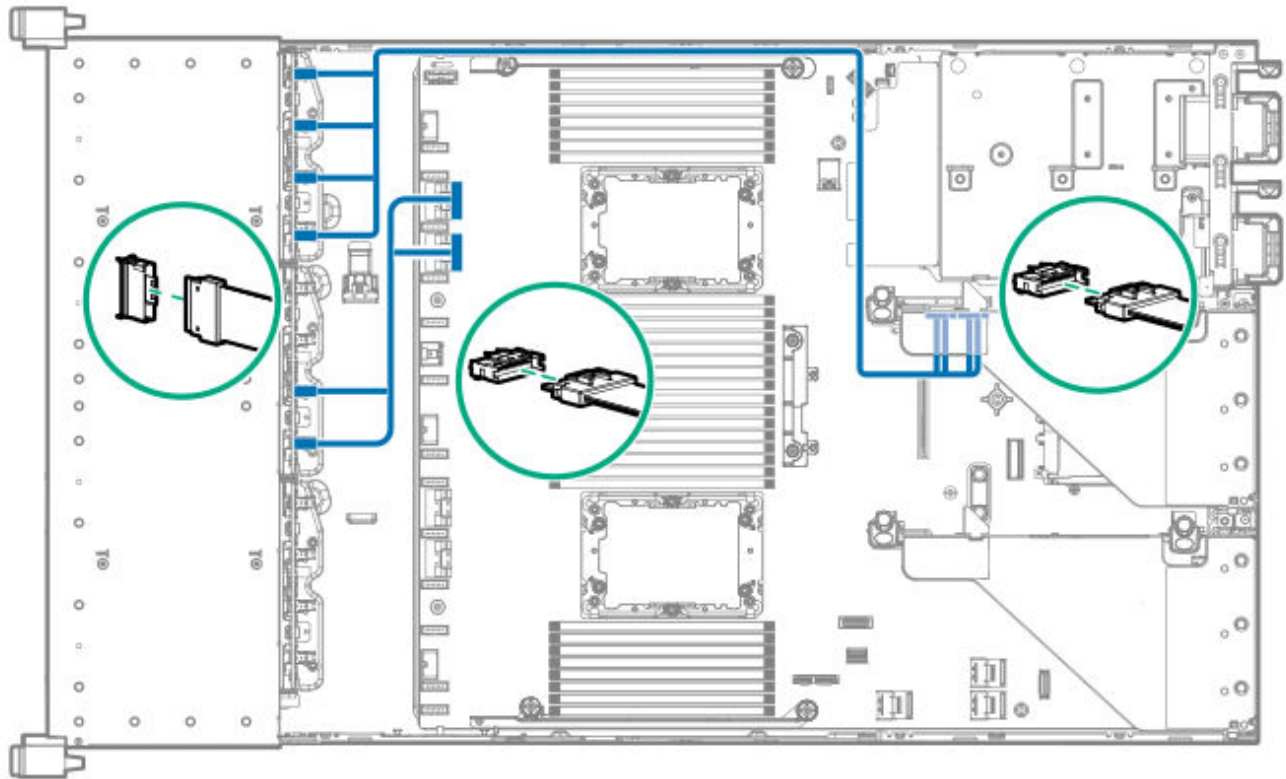


## Cable routing: 24NVMe Balanced

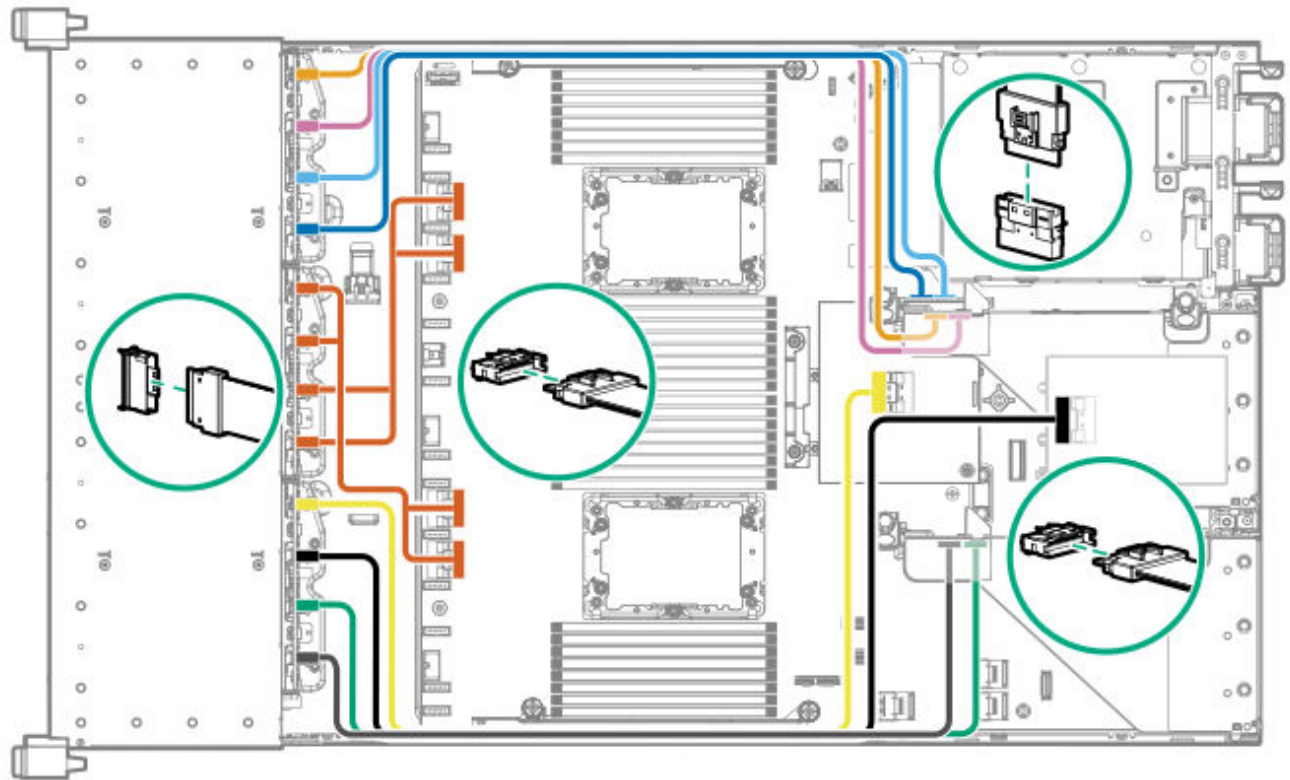


## Cable routing: 24NVMe Differential

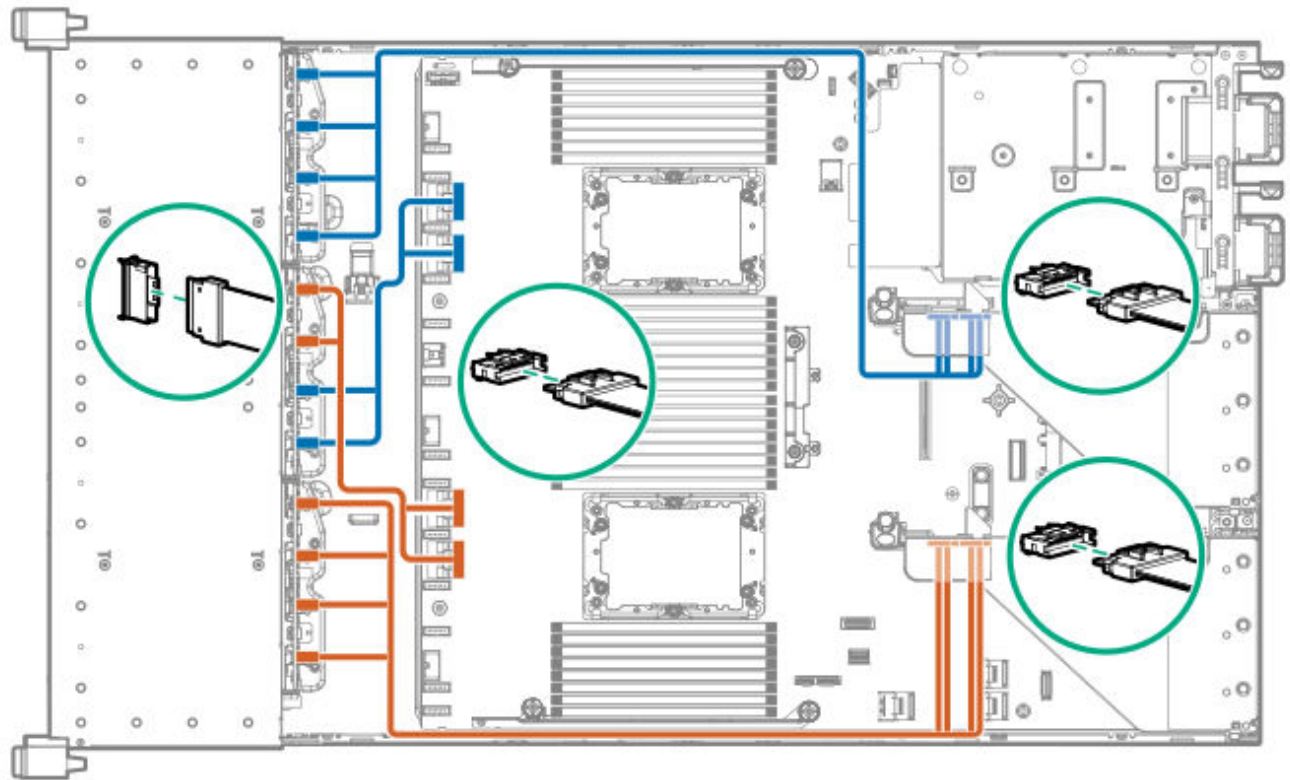


## Cable routing: 8NVMe box 3 to 4-port primary riser

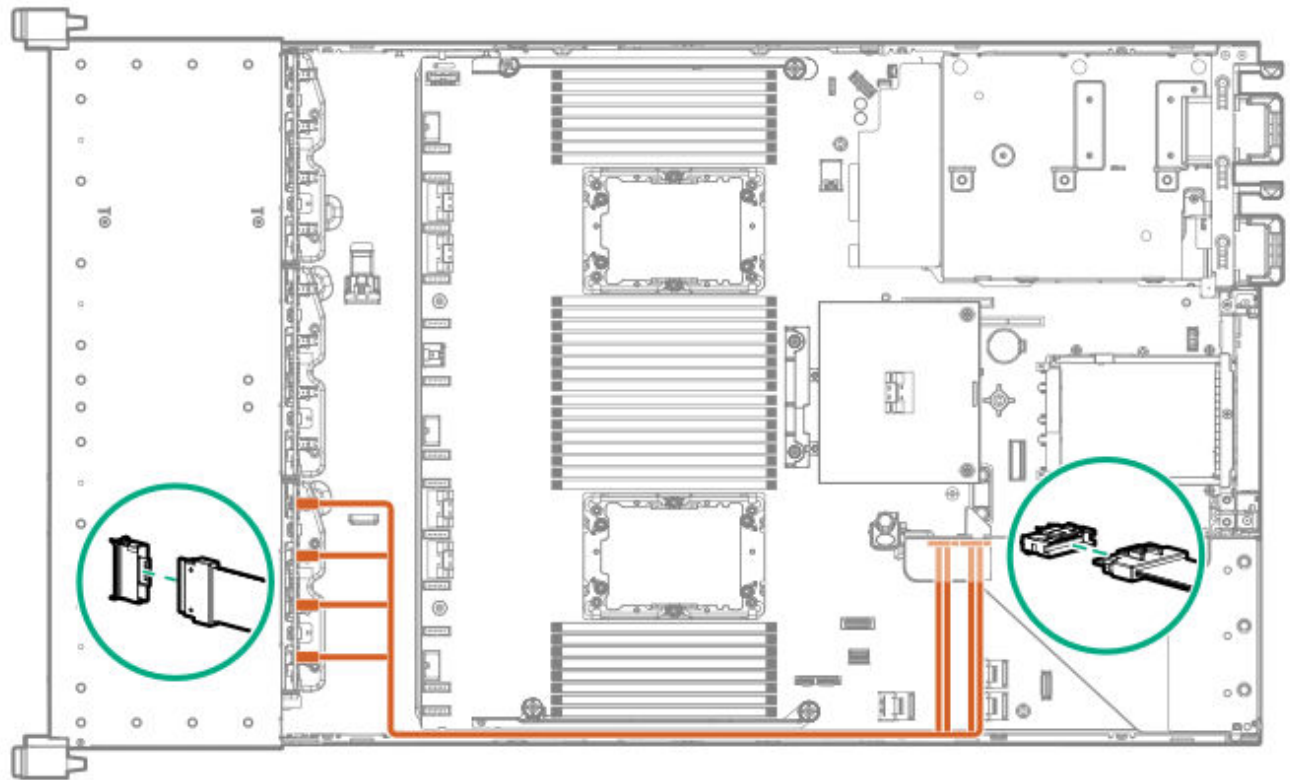


## Cable routing: 8NVMe box 1 to 4-port secondary riser

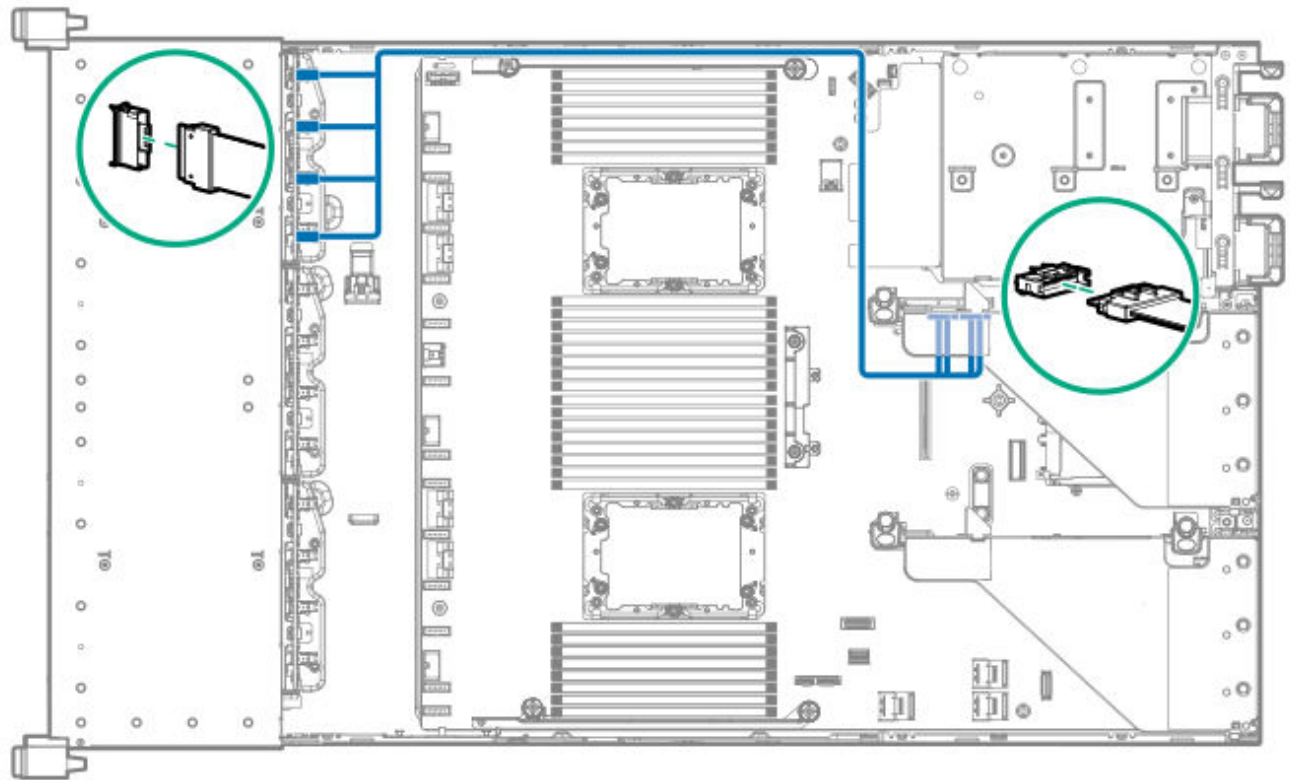


## Cable routing: 8NVMe box 1+2 to type-a controller

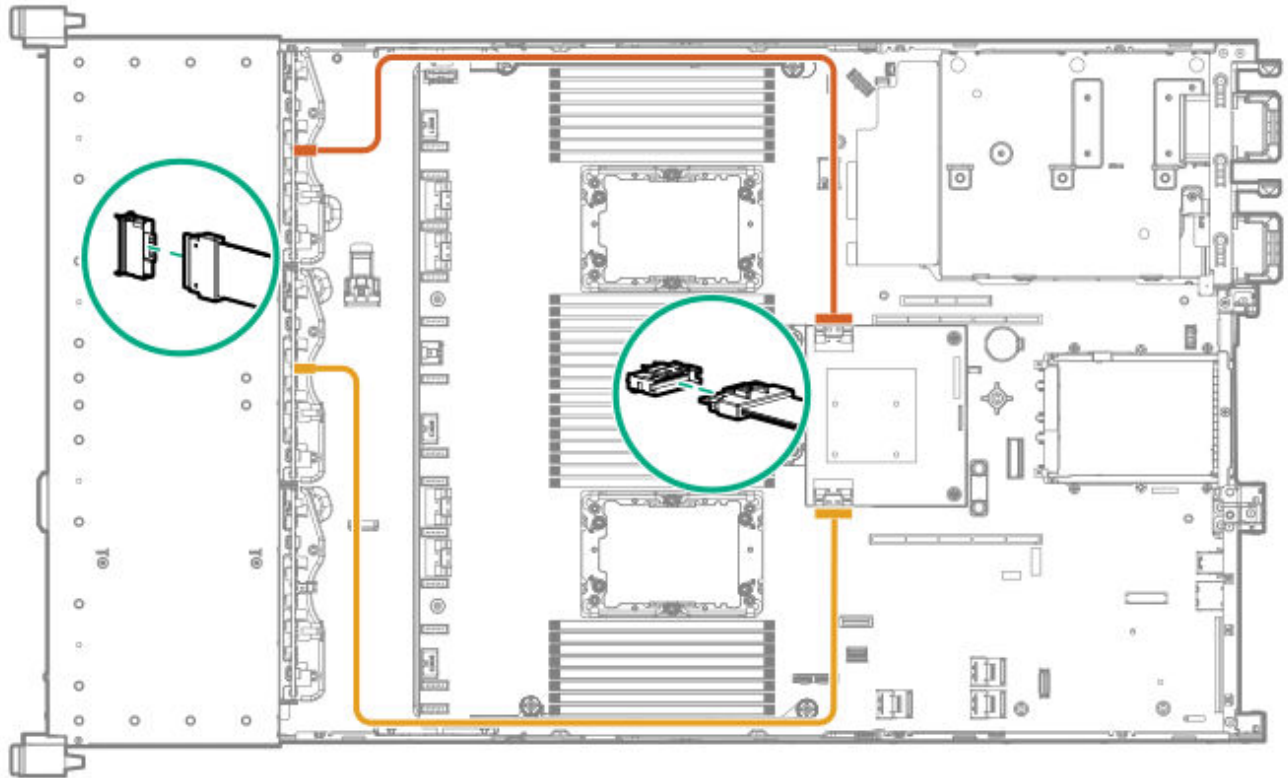


## Cable routing: 8SFF box 2 to type-a controller

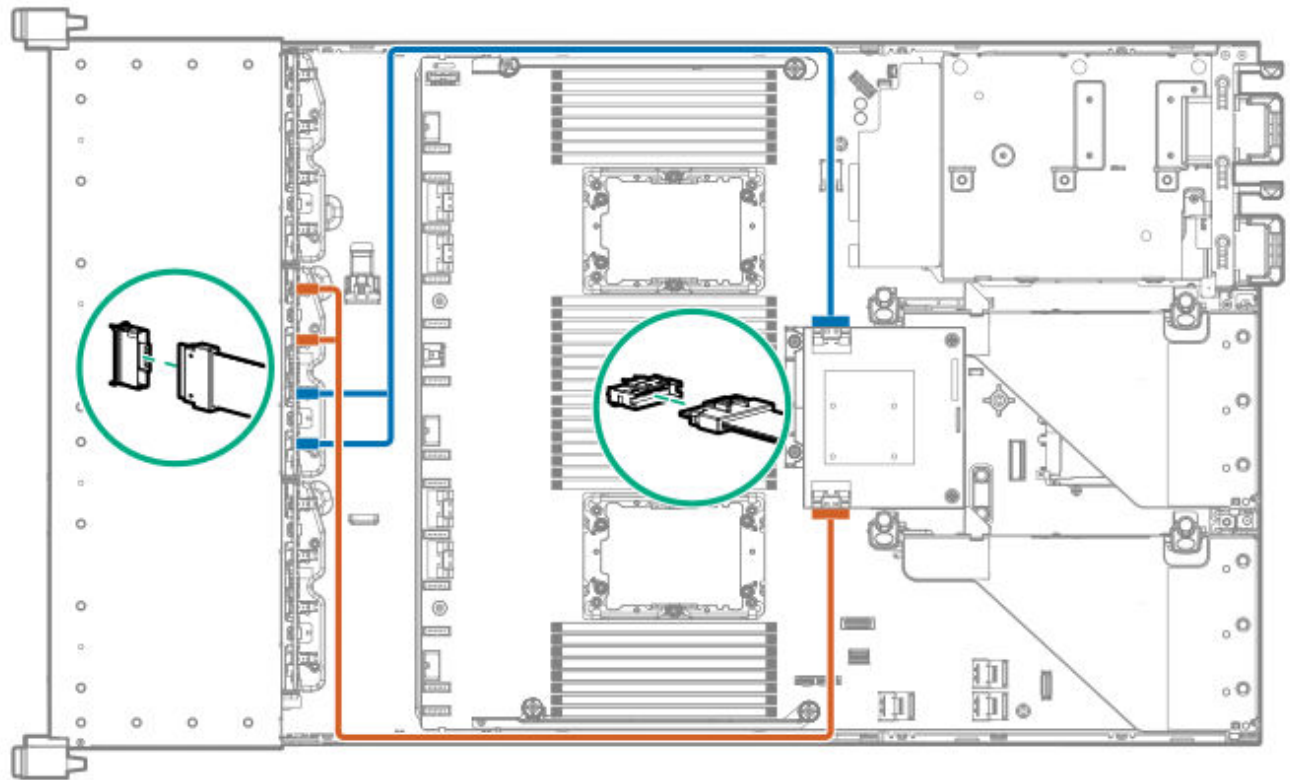


## Cable routing: 8SFF box 3 to 2-port primary type-p controller

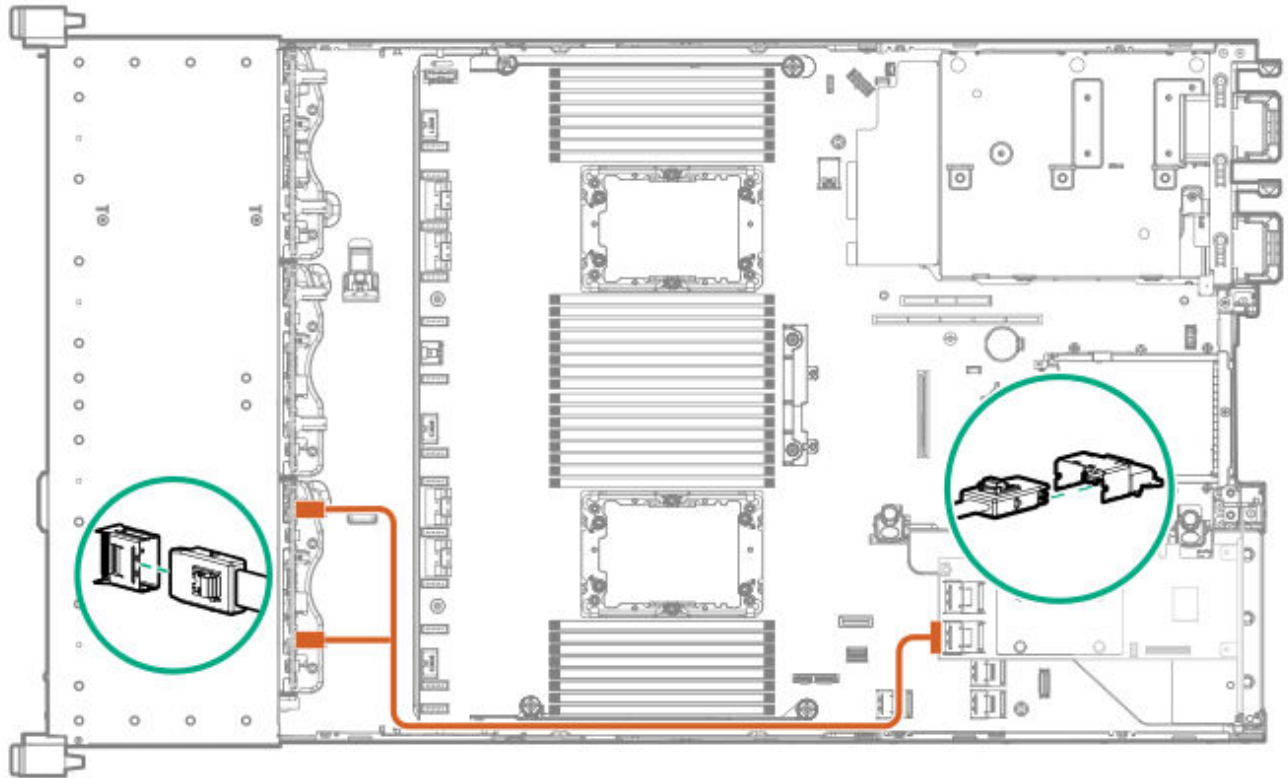


## Cable routing: 8SFF box 2 to 2-port primary type-p controller

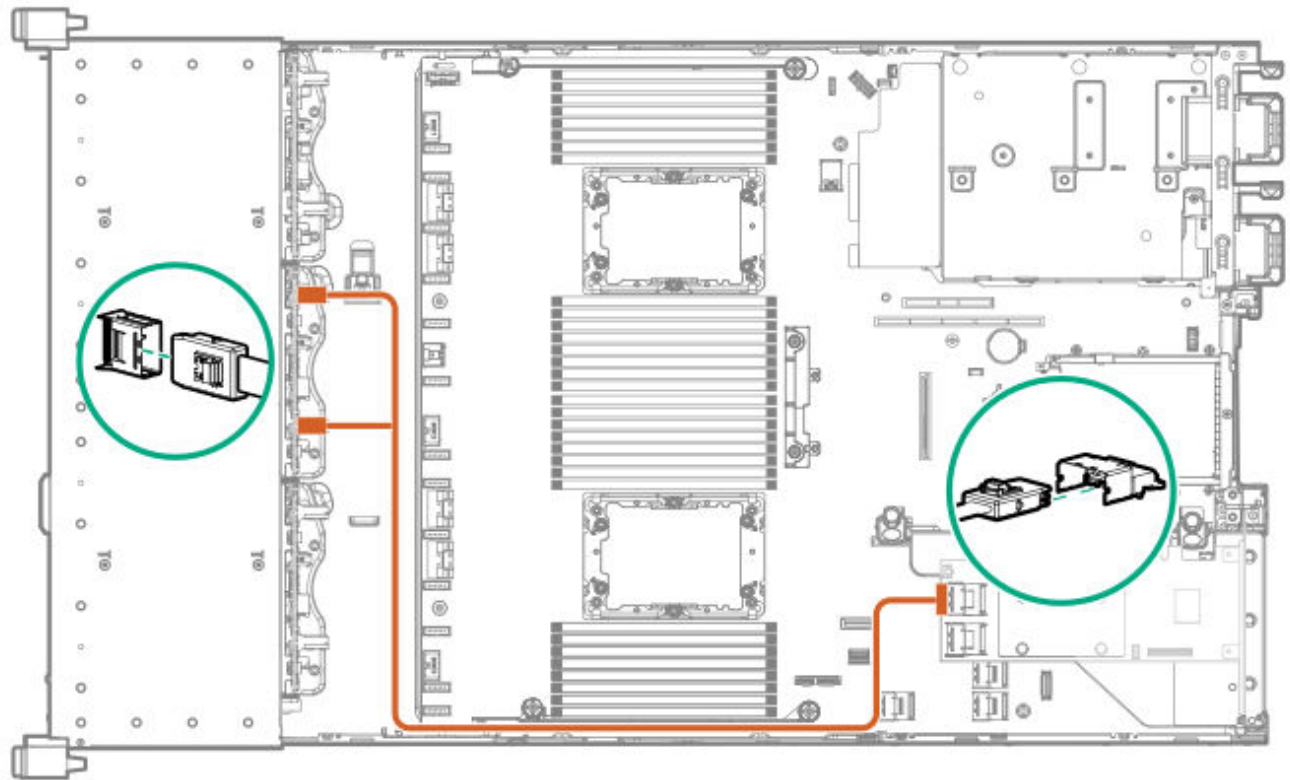


## Cable routing: 2SFF side-by-side to primary type-p controller

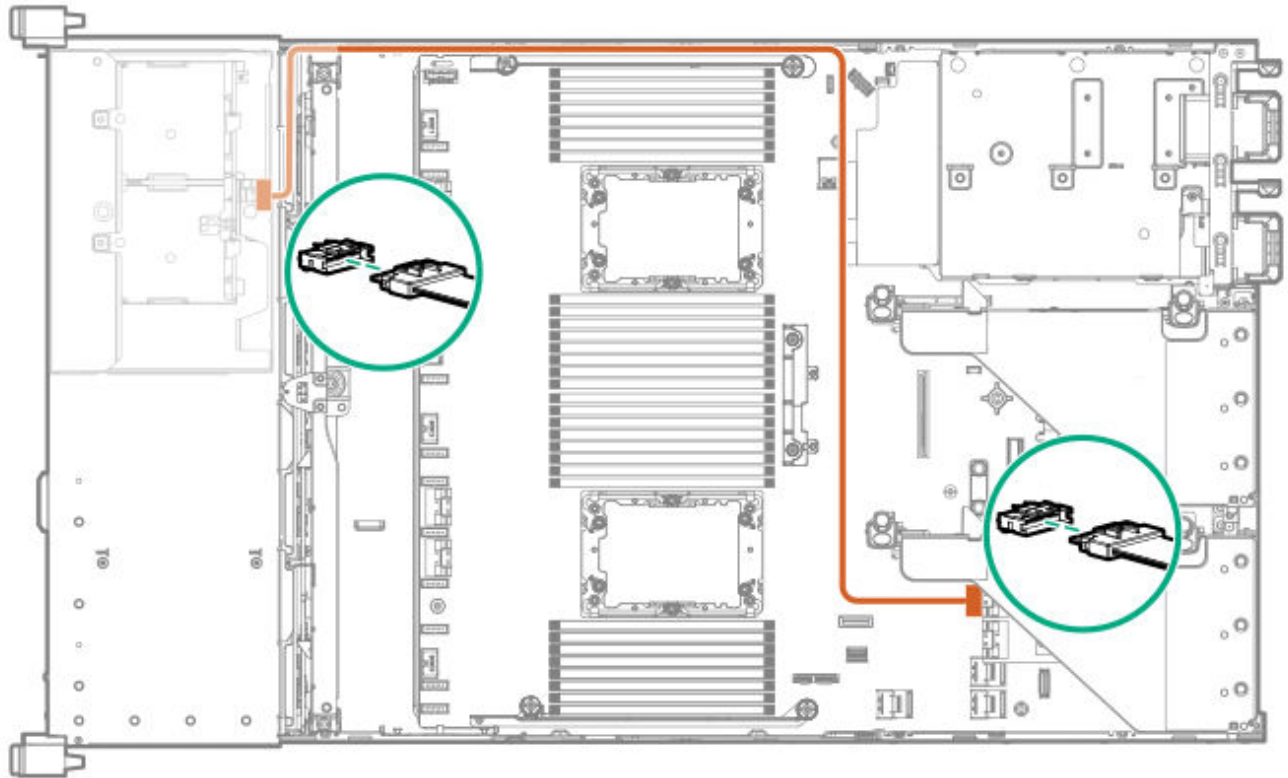


## Cable routing: 8SFF 4-port box 1 to 4-port secondary type-p controller

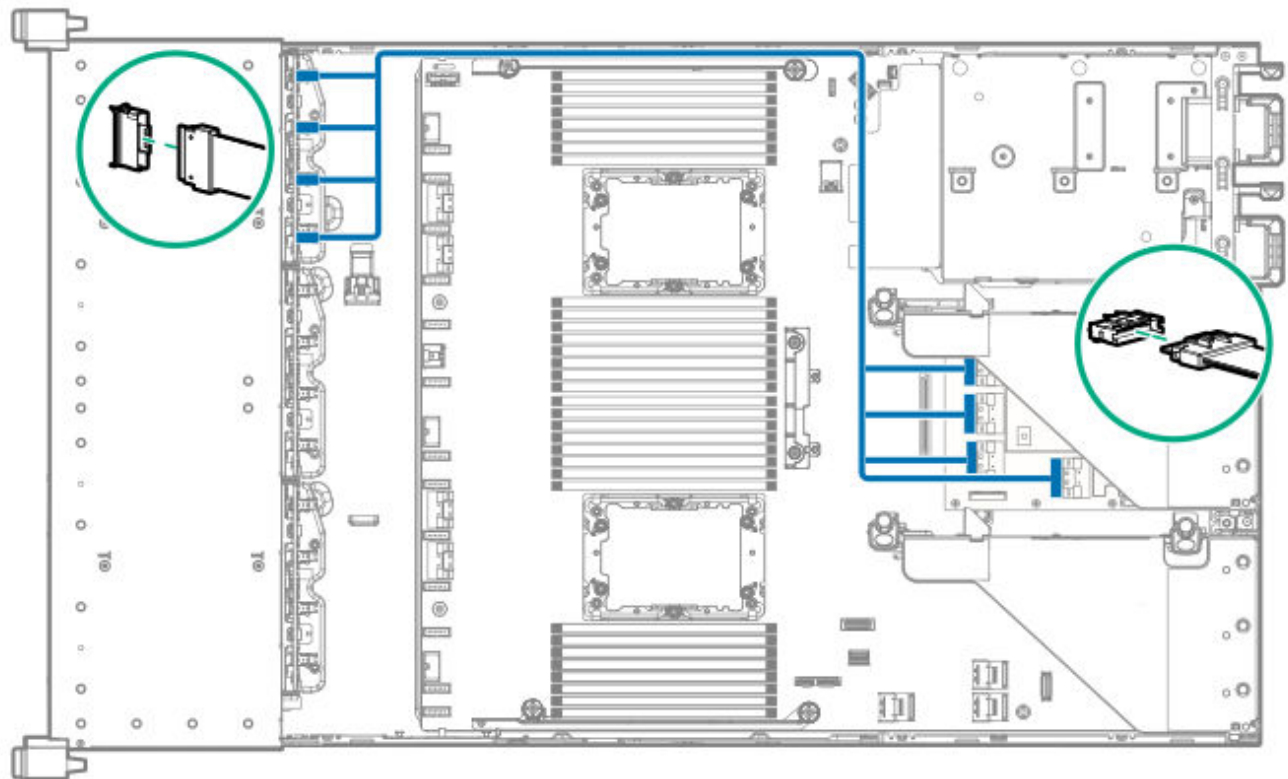


## Cable routing: 8SFF 4-port box 2 to 4-port primary type-p controller

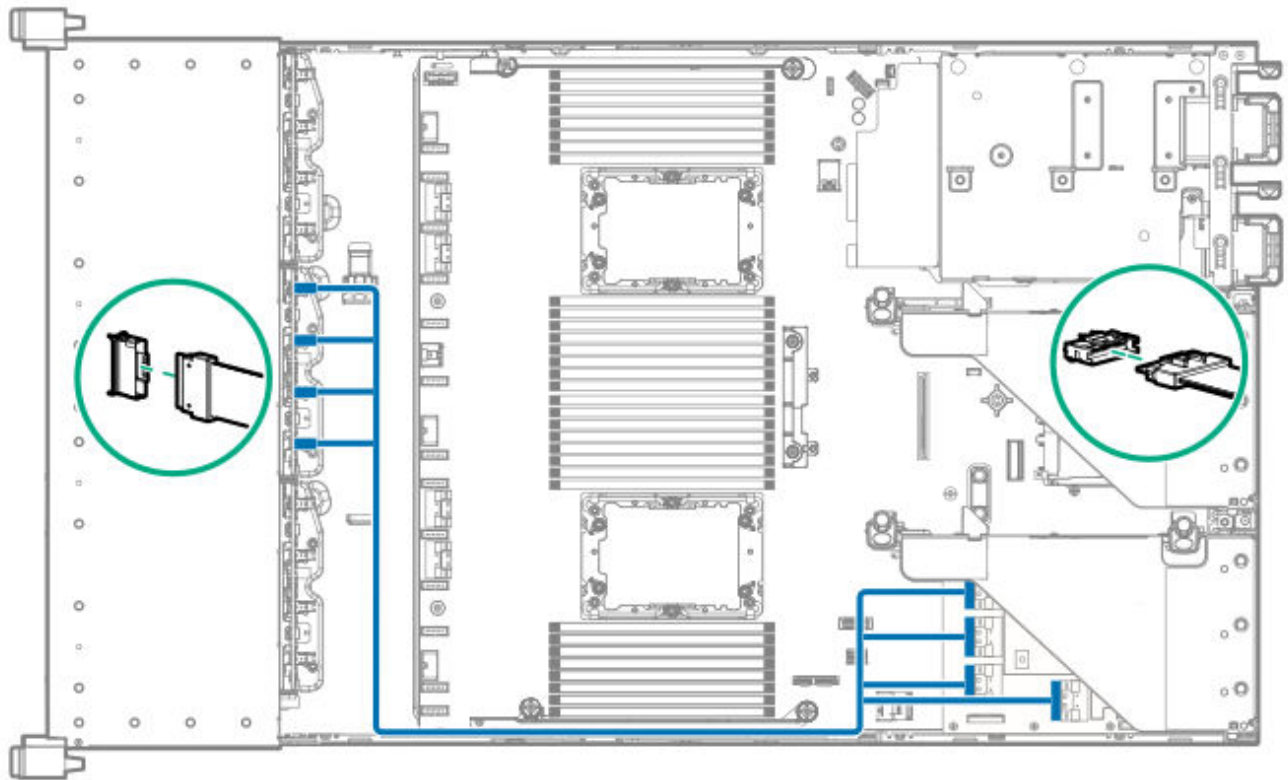

# Cable routing: 8SFF 4-port box 3 to 4-port primary type-p controller

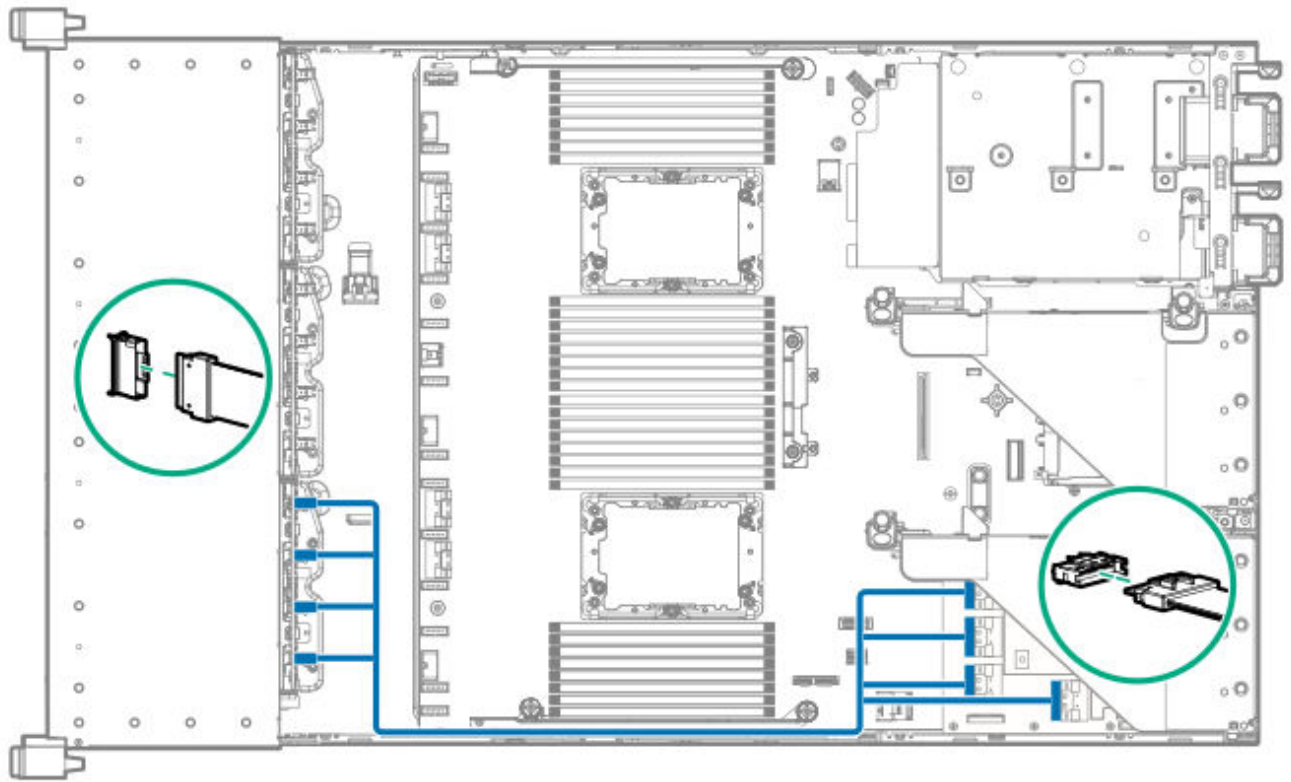


# Cable routing: 8SFF box 1+2+3 to 4-port secondary type-p controller

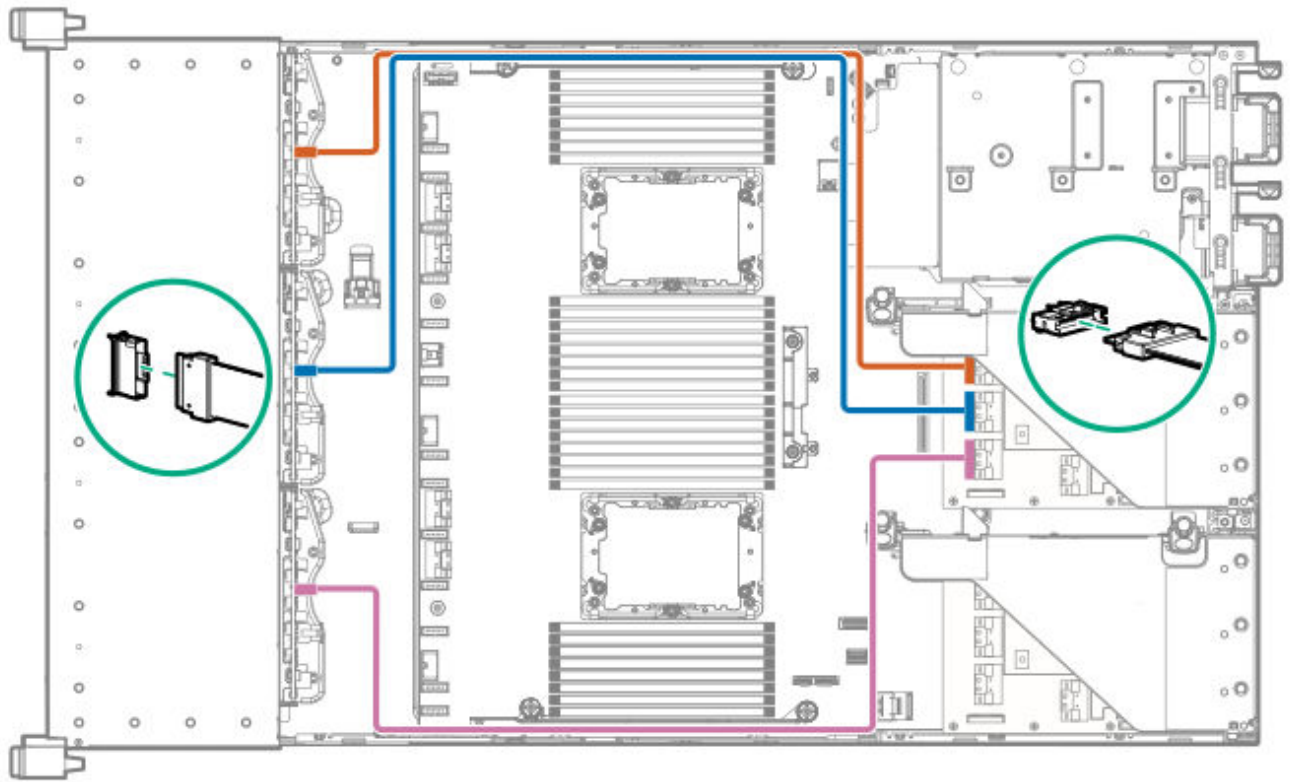


# Cable routing: 8SFF box 1+2+3 to 4-port primary type-p controller

8SFF

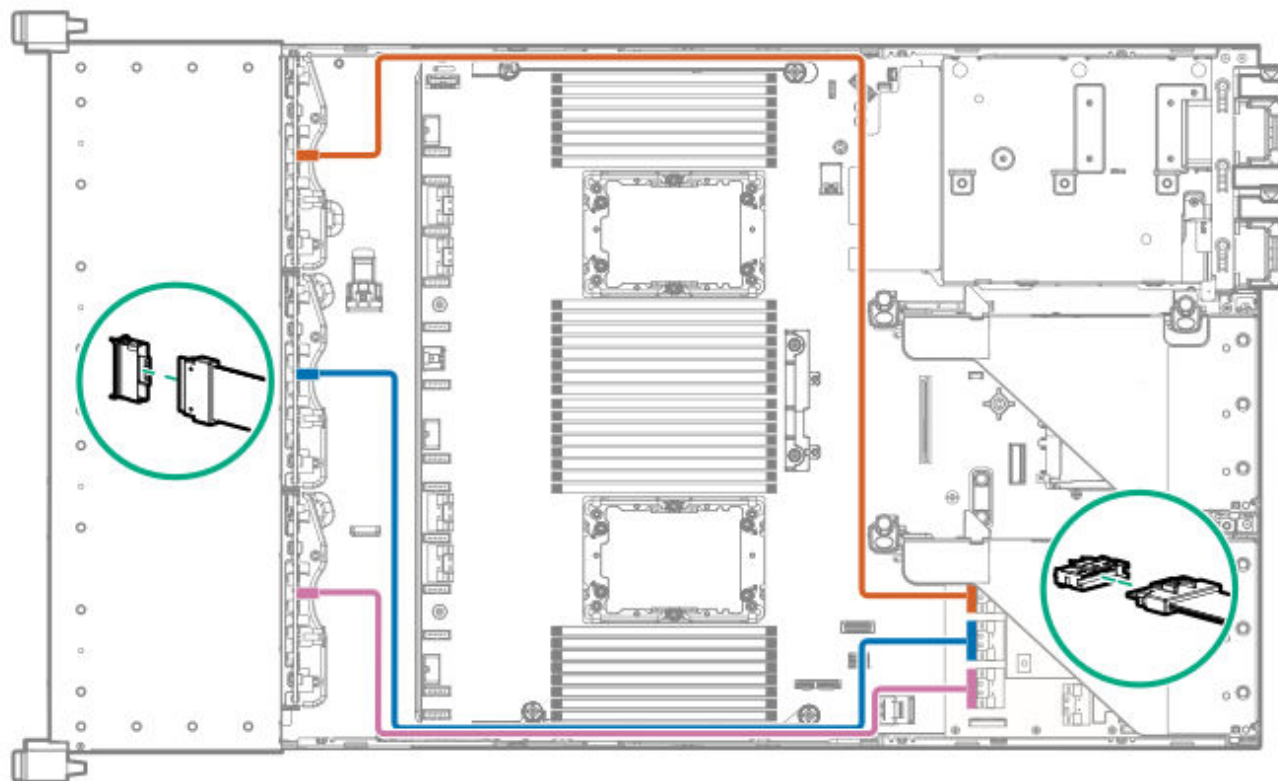


# Cable routing: 8SFF boxes 1, 2, and 3 to MR type-p/a controllers


## Box 1 to type-a controller

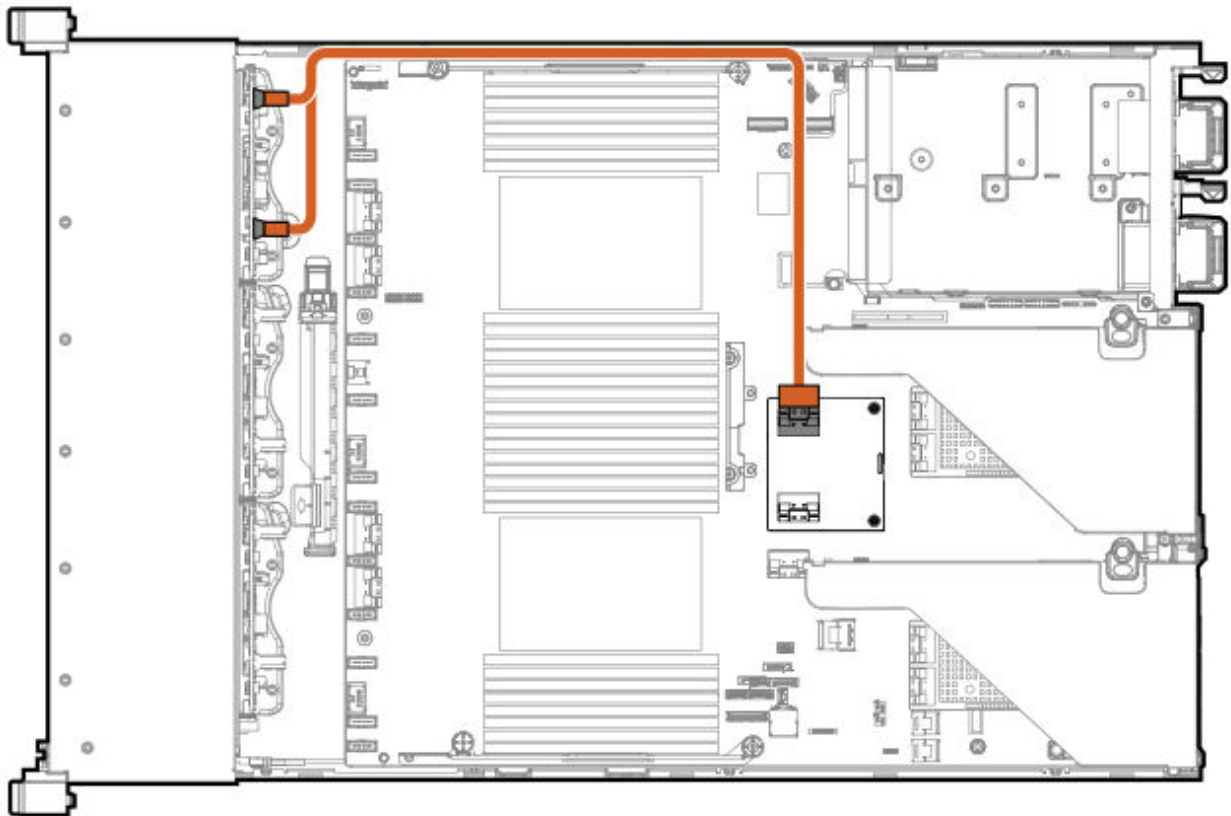


**Box 2 to type-p controller**

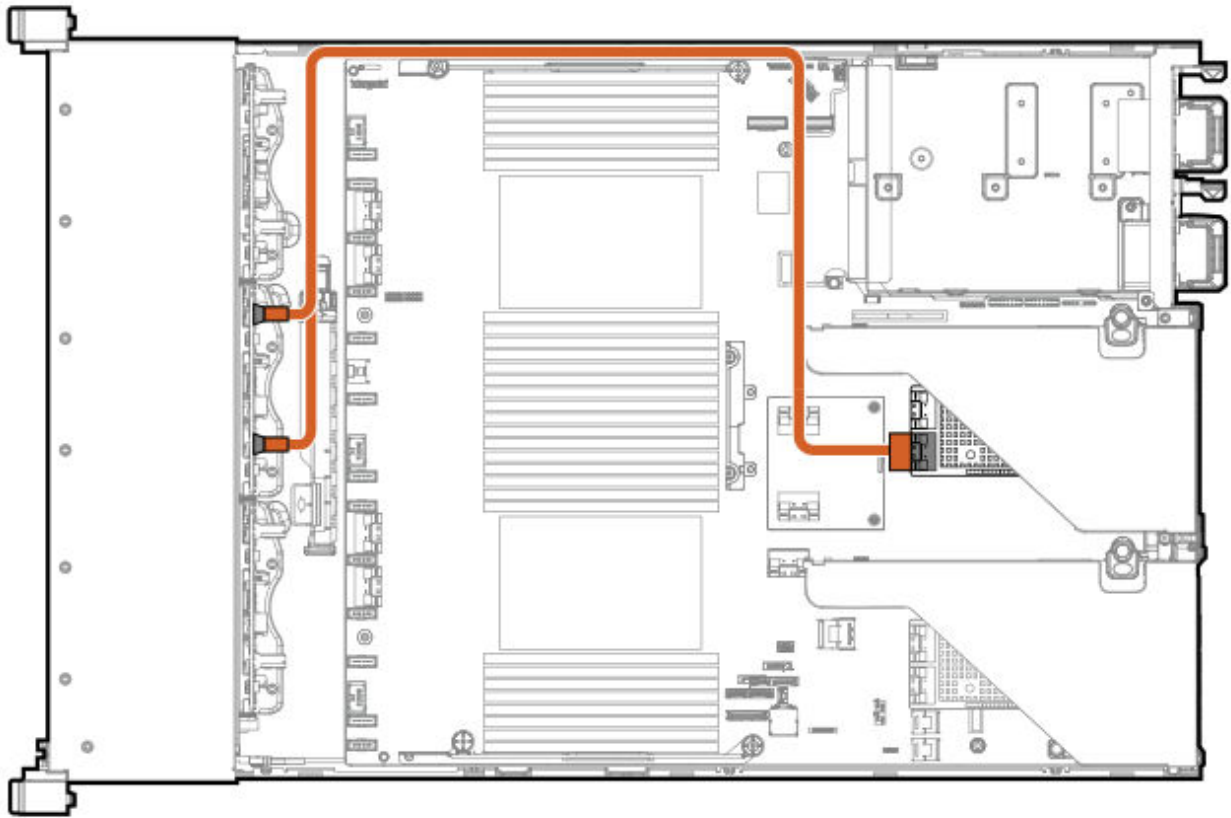


**Box 3 to type-p controller**

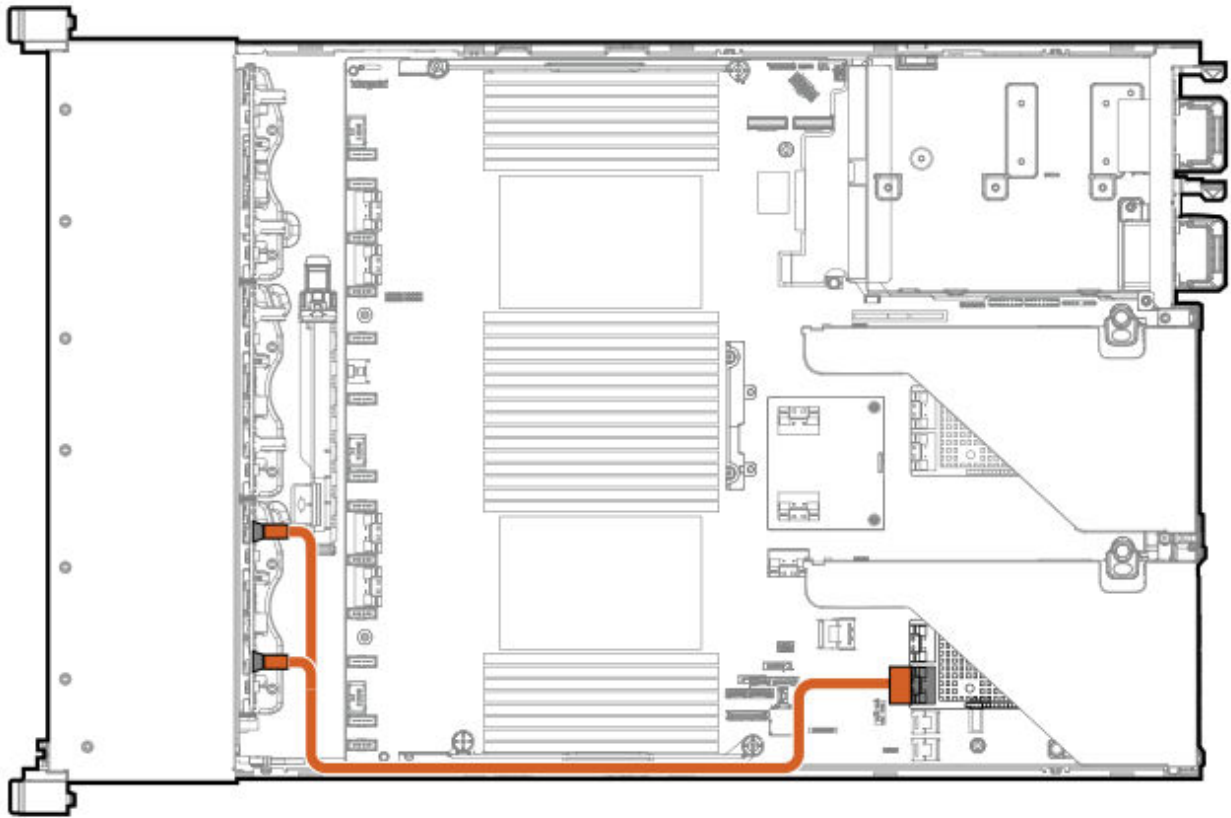


**Box 2 to type-a controller**

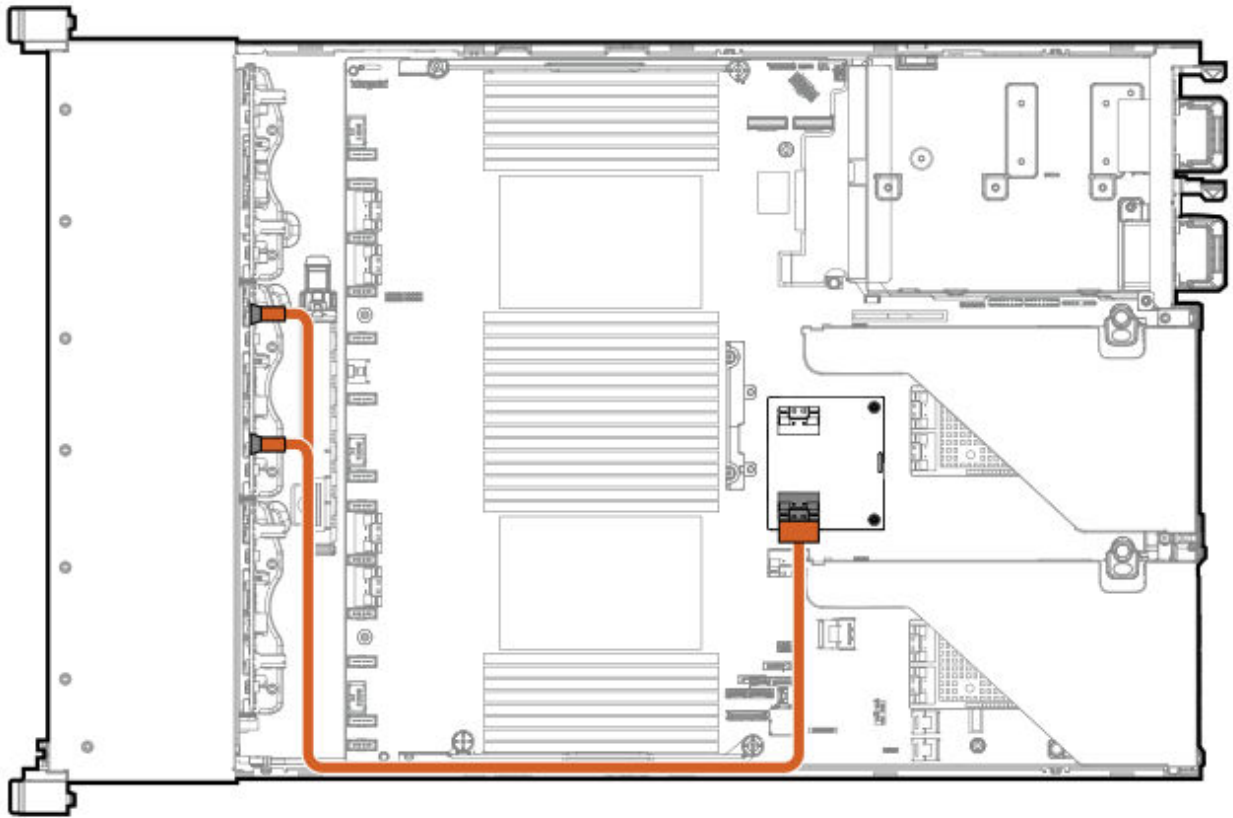


## Box 4 to type-p controller

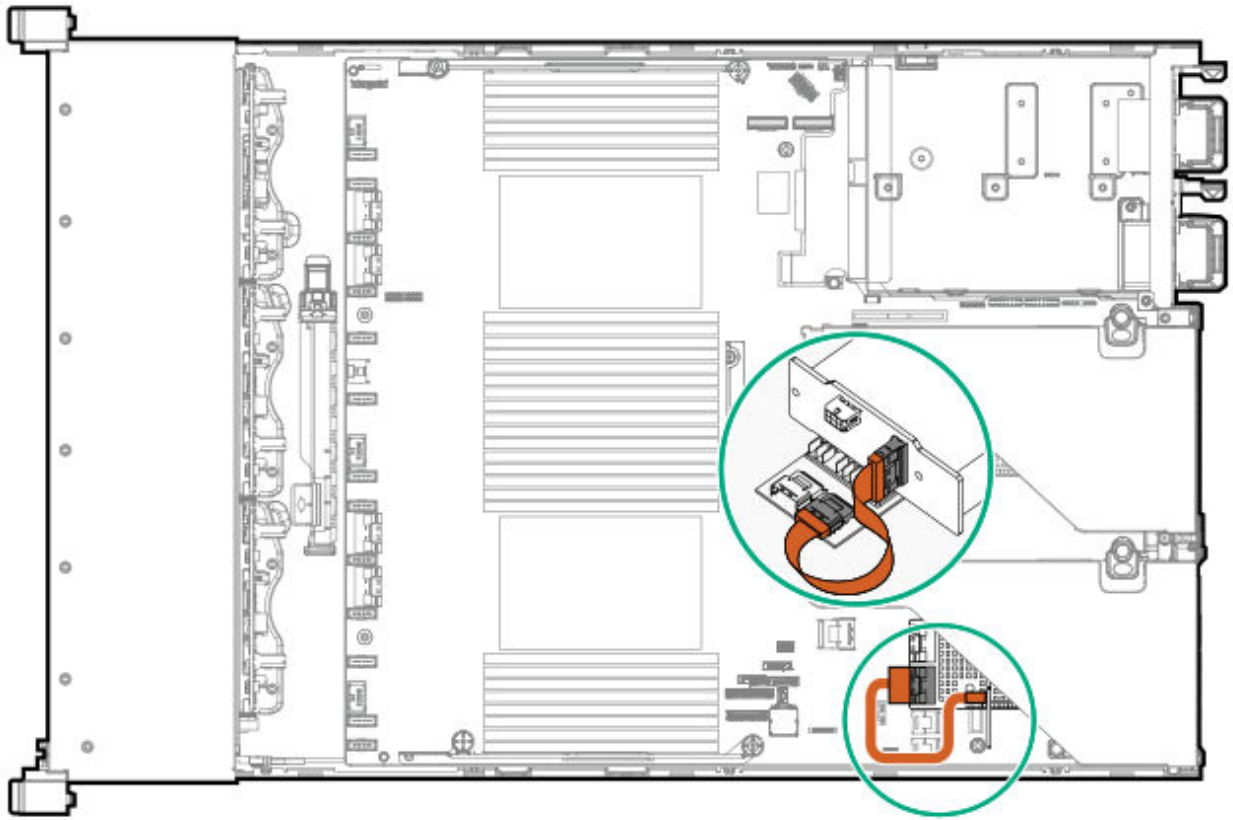


**Box 5 to type-p controller**

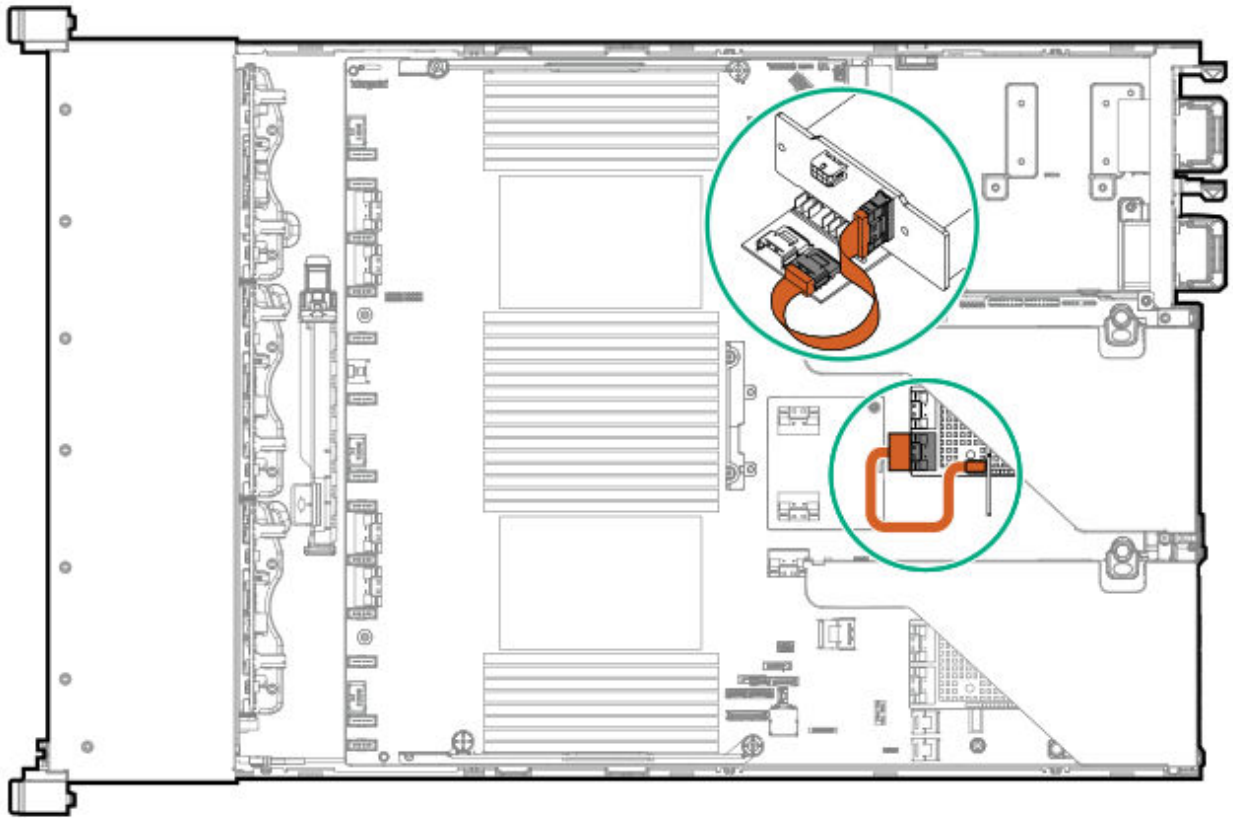


**Box 6 to type-a controller**

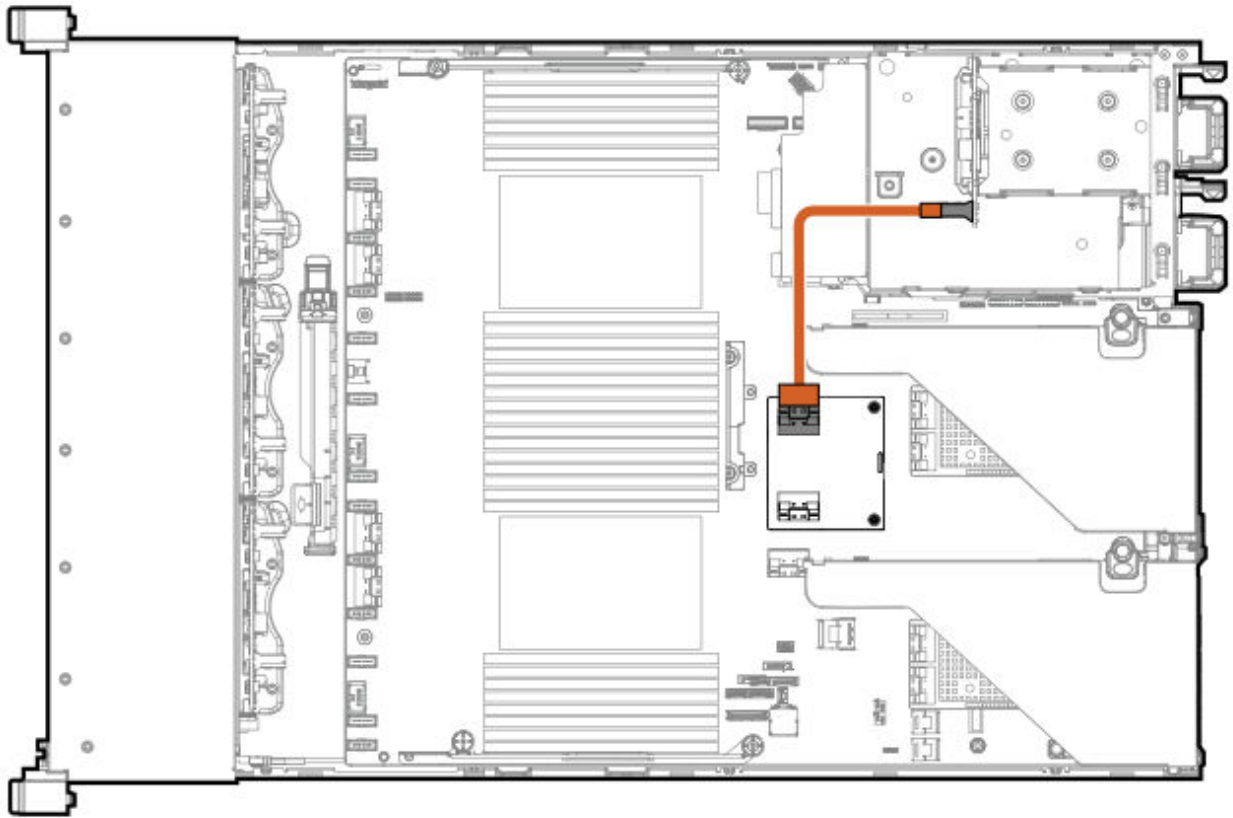


## Cable routing: 8SFF box 1+2+3 to type-a/p MR controller

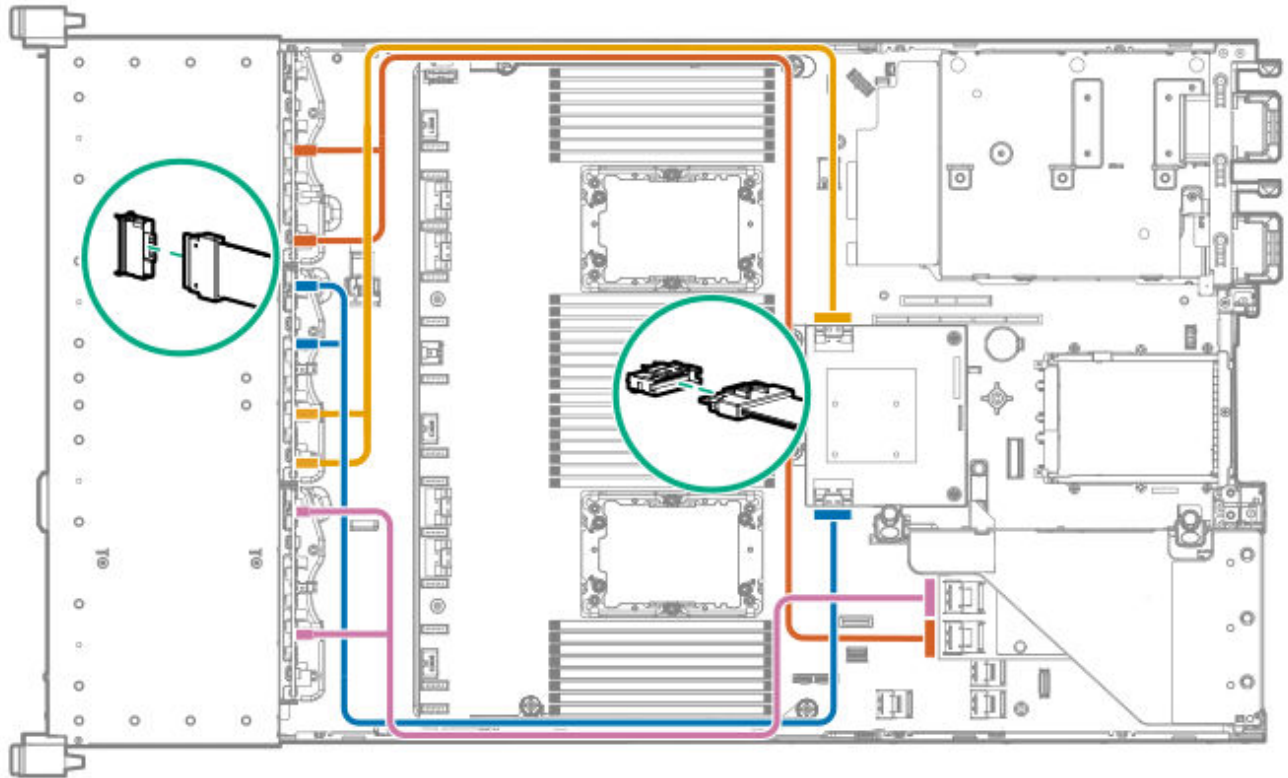

## Cable routing: 12LFF box 1+2+3 to type-a MR controller

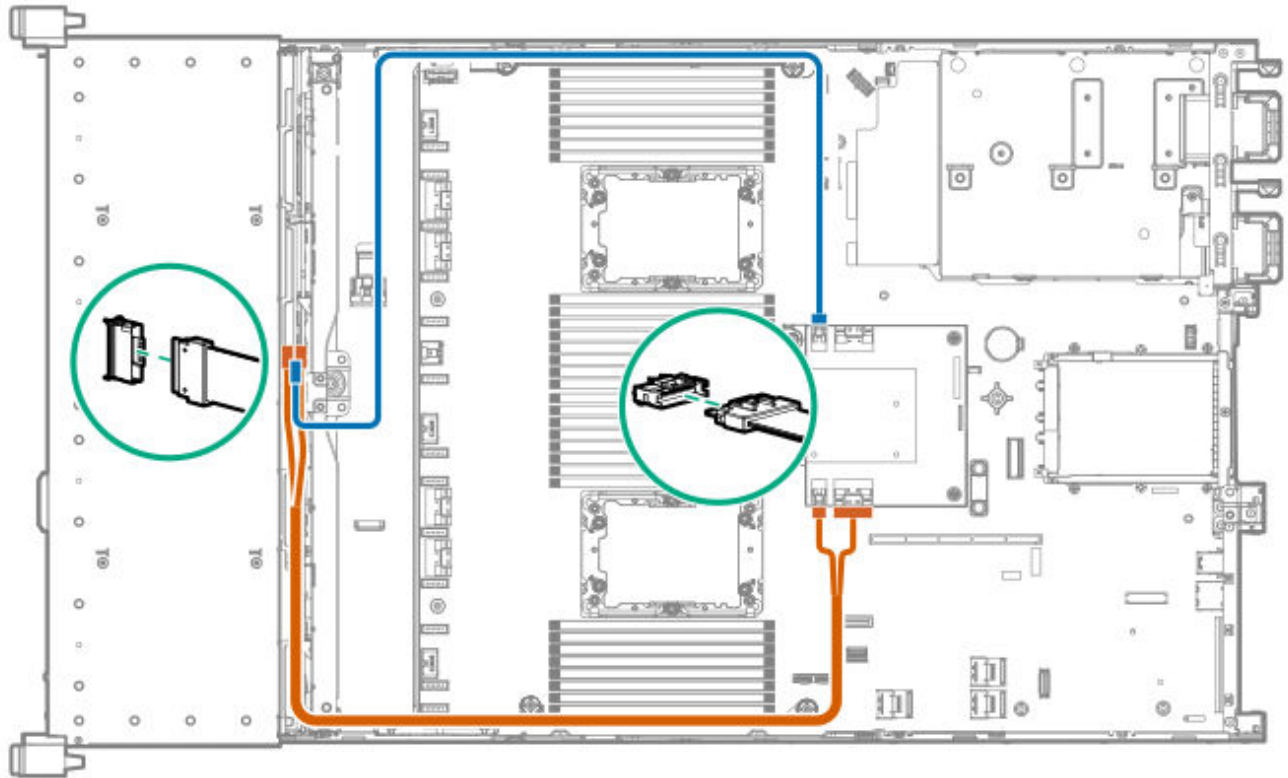


## Cable routing: 4LFF SAS/SATA box 7 to 4-port type-a controller

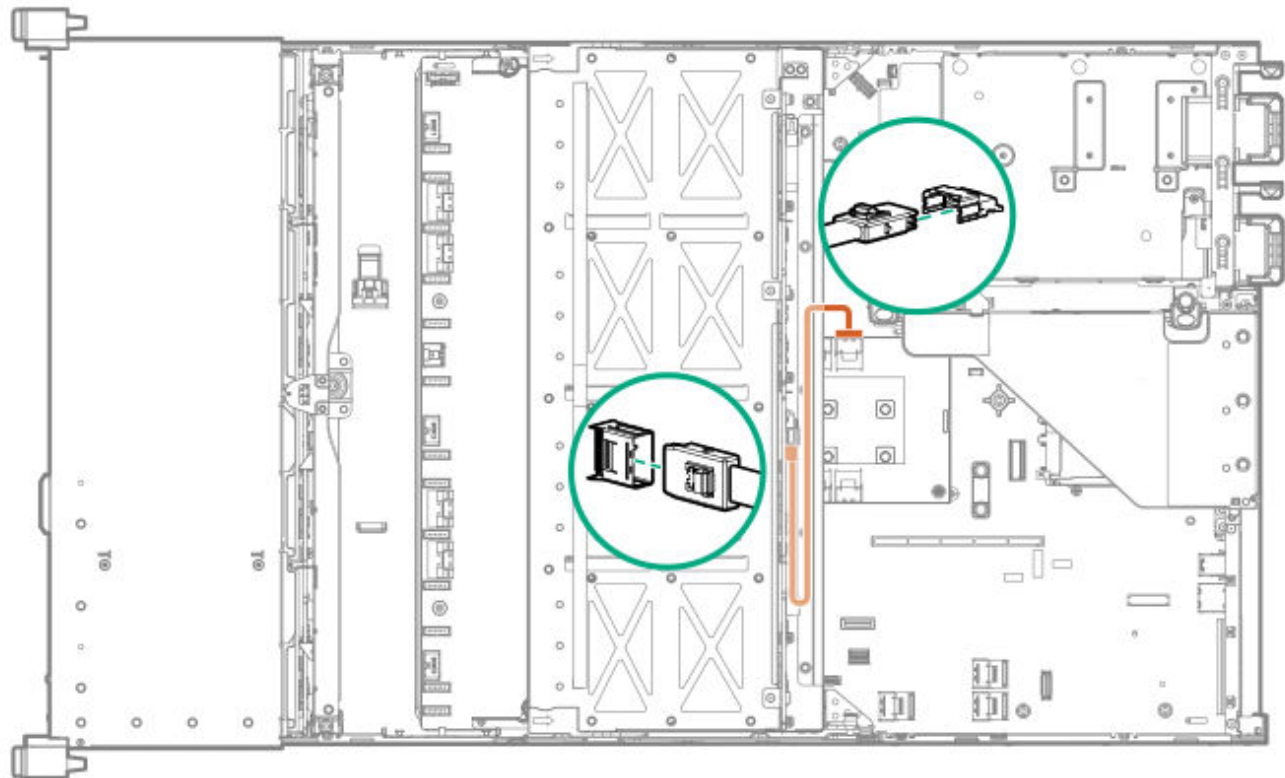


## Cable routing: Front I/O cabling


### SFF Universal Media Bay Display Port

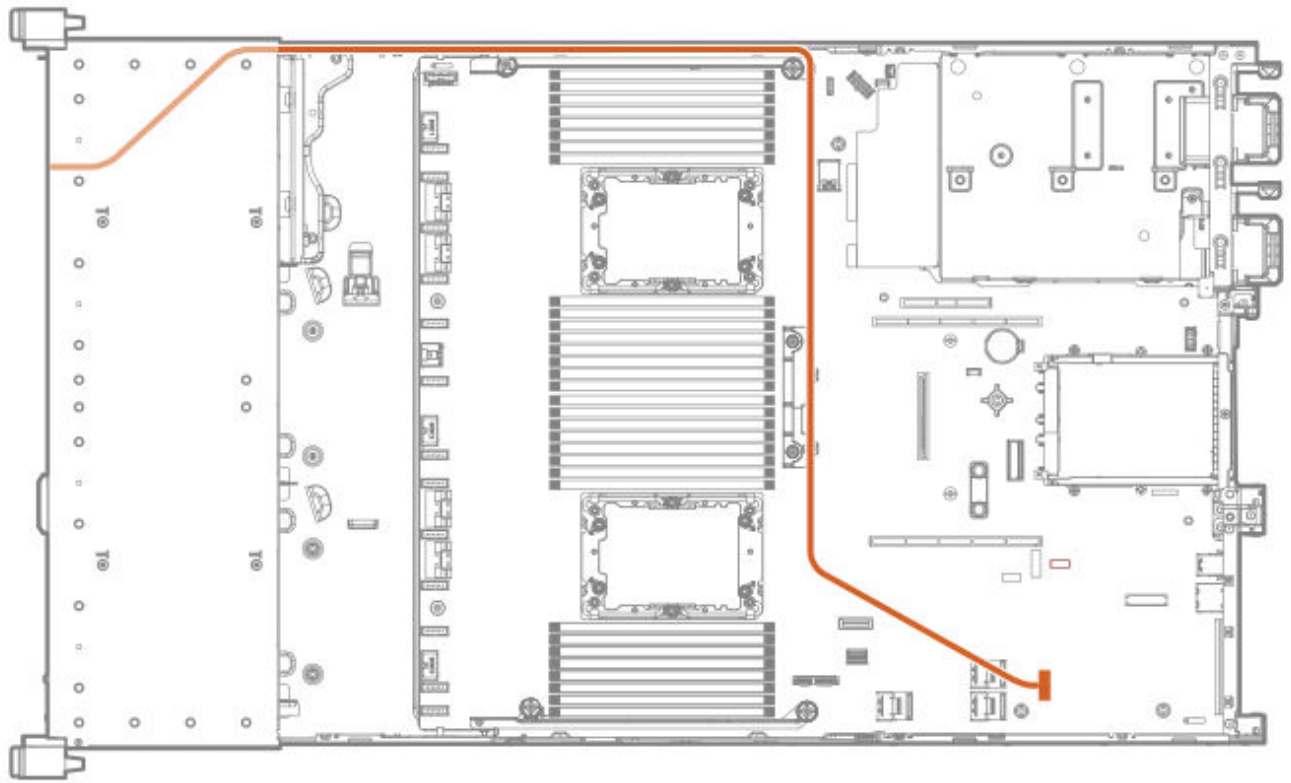


**SFF Universal Media Bay USB to system board**

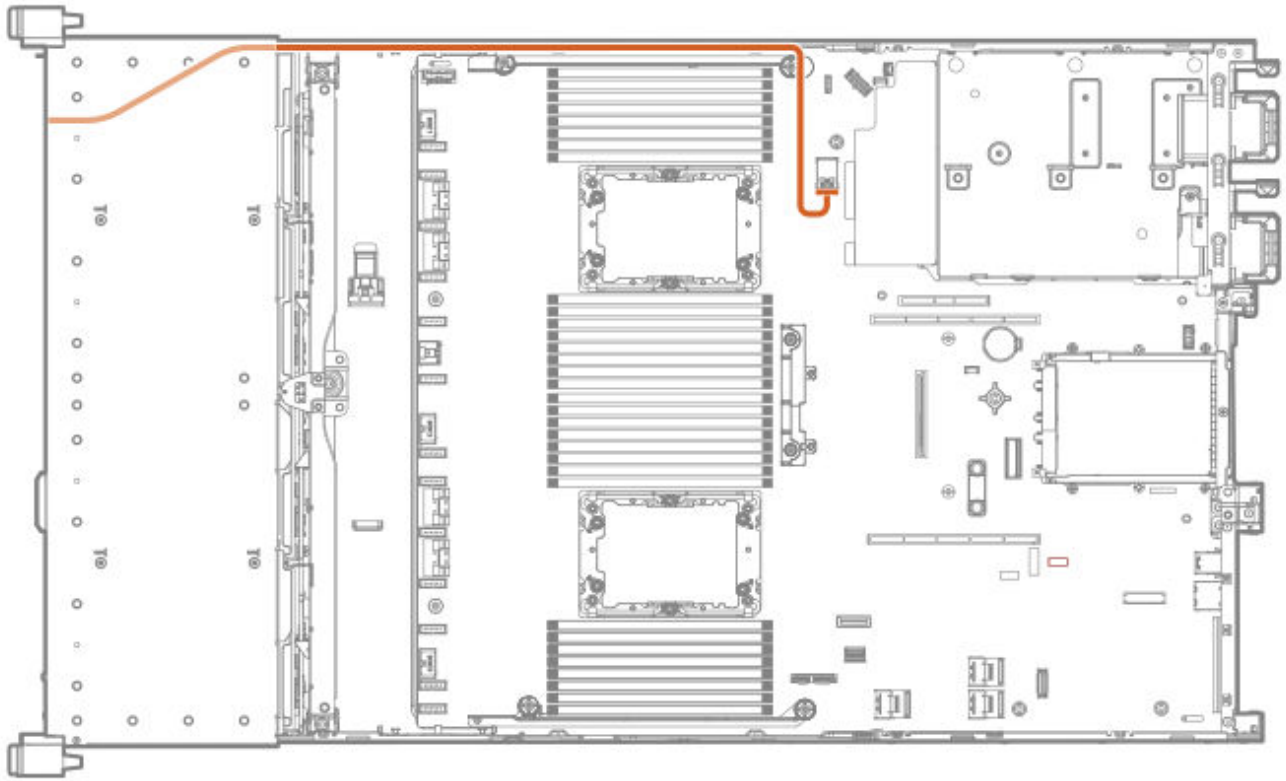


**SFF Universal Media Bay optical disk drive**

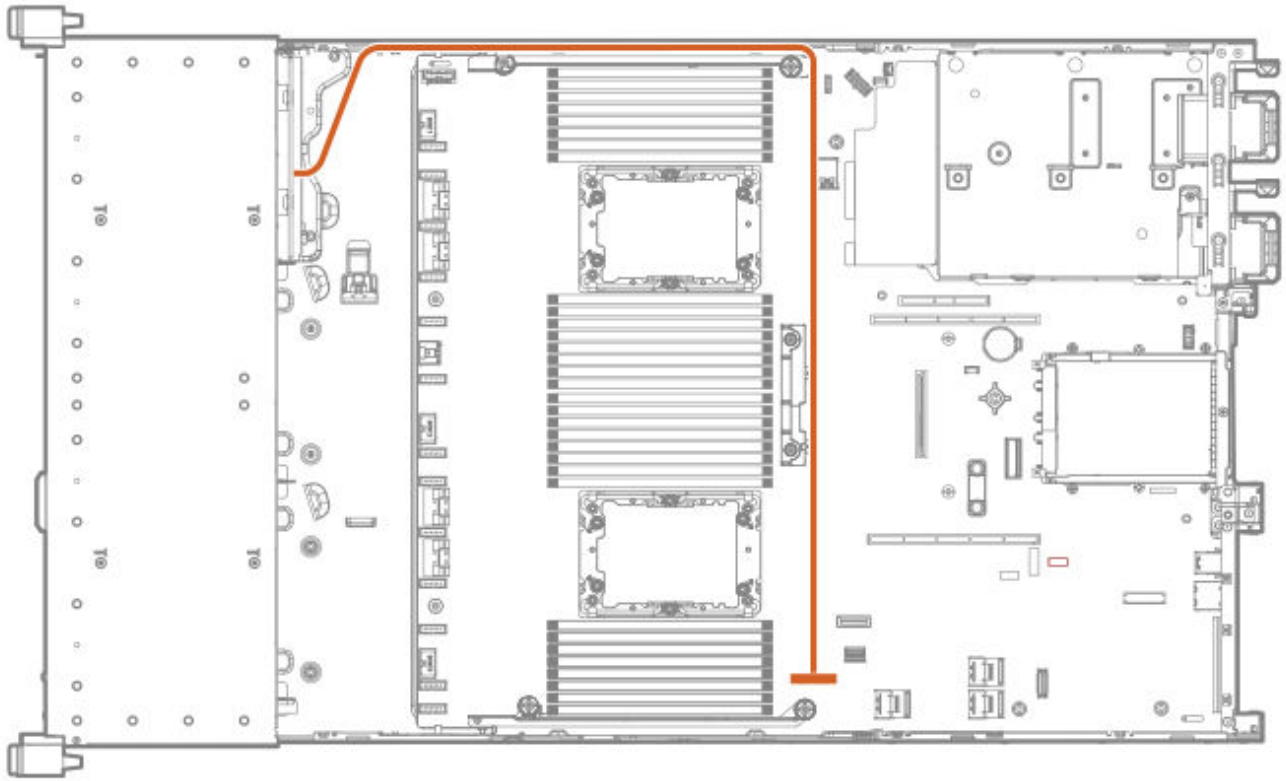


**SFF/LFF power switch**

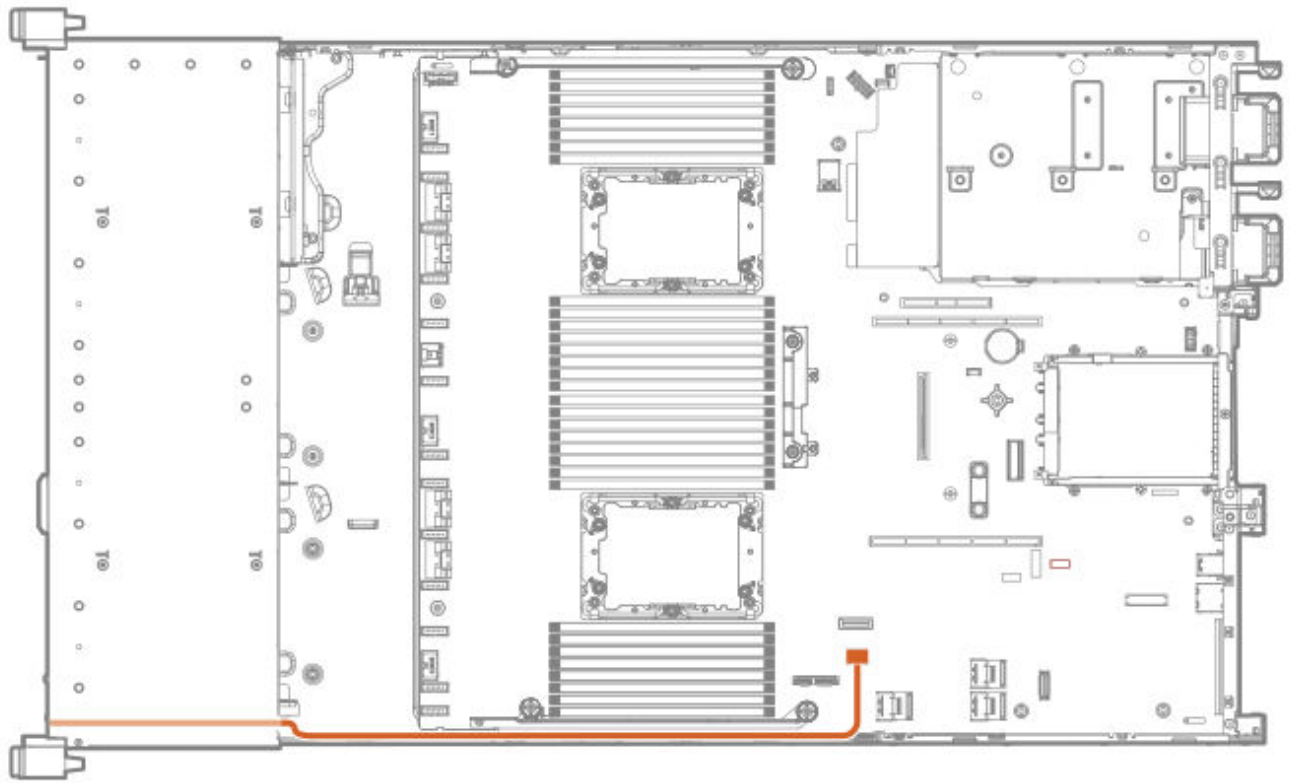


**SFF/LFF Systems Insight Display**

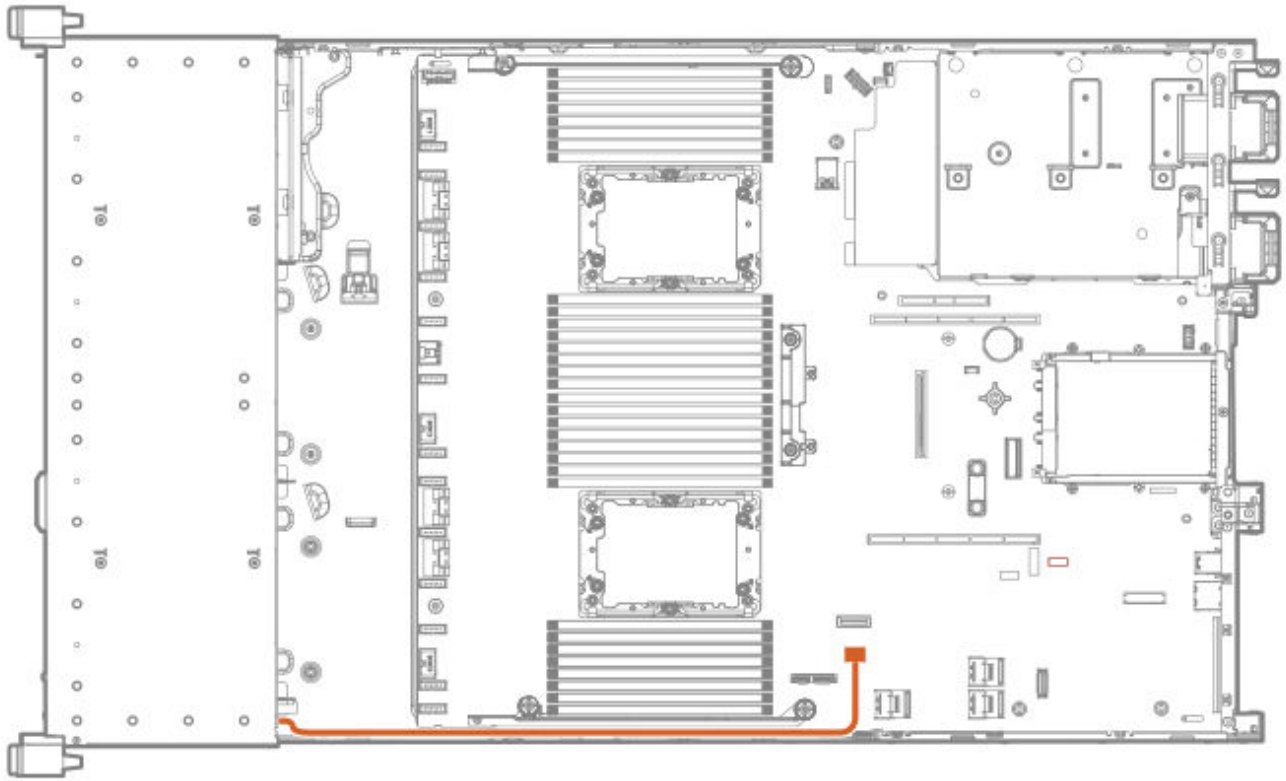


**LFF optical disk drive**

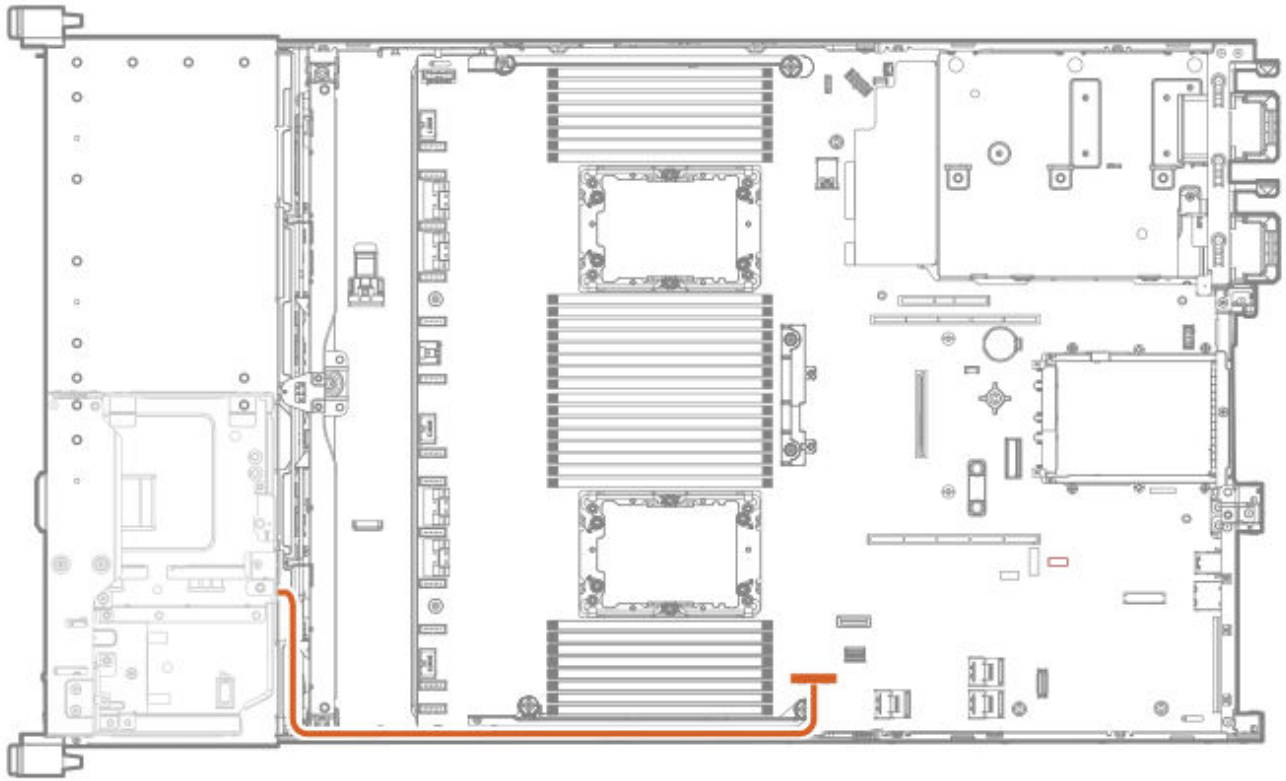

**LFF display port**

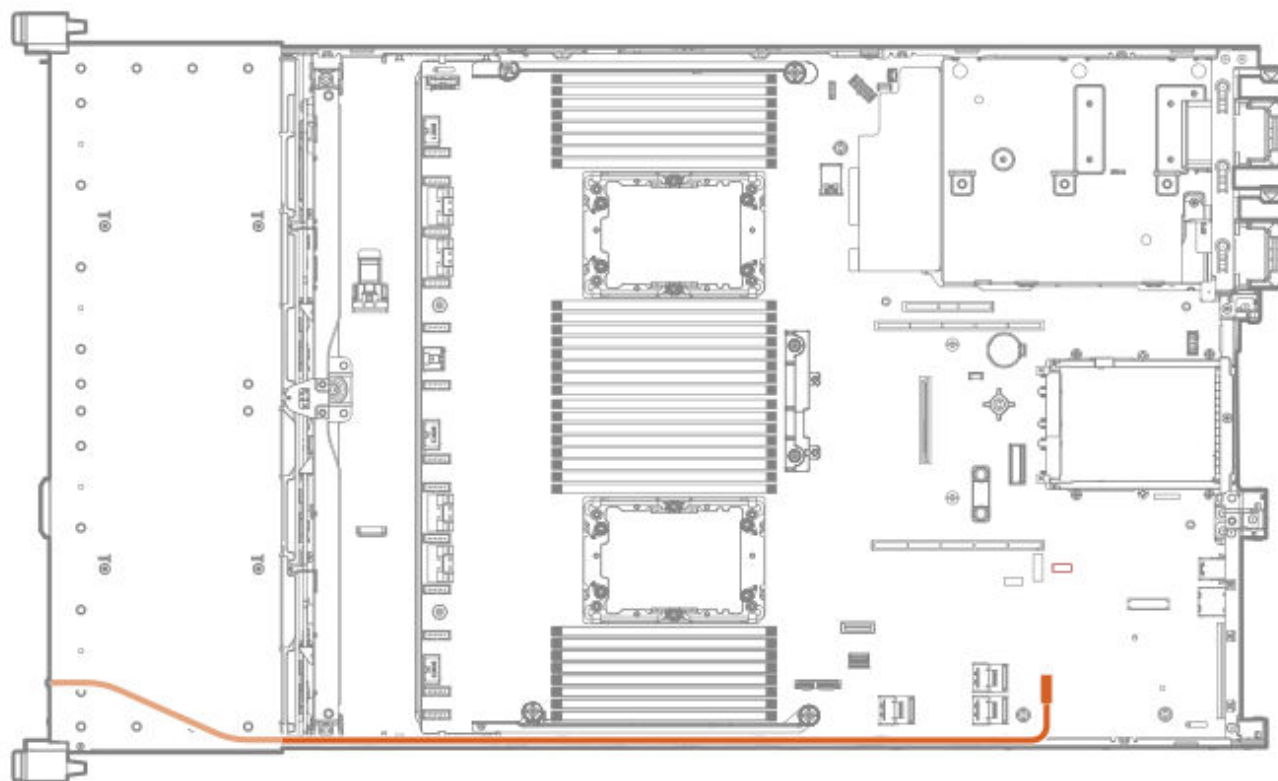


**LFF power switch module**

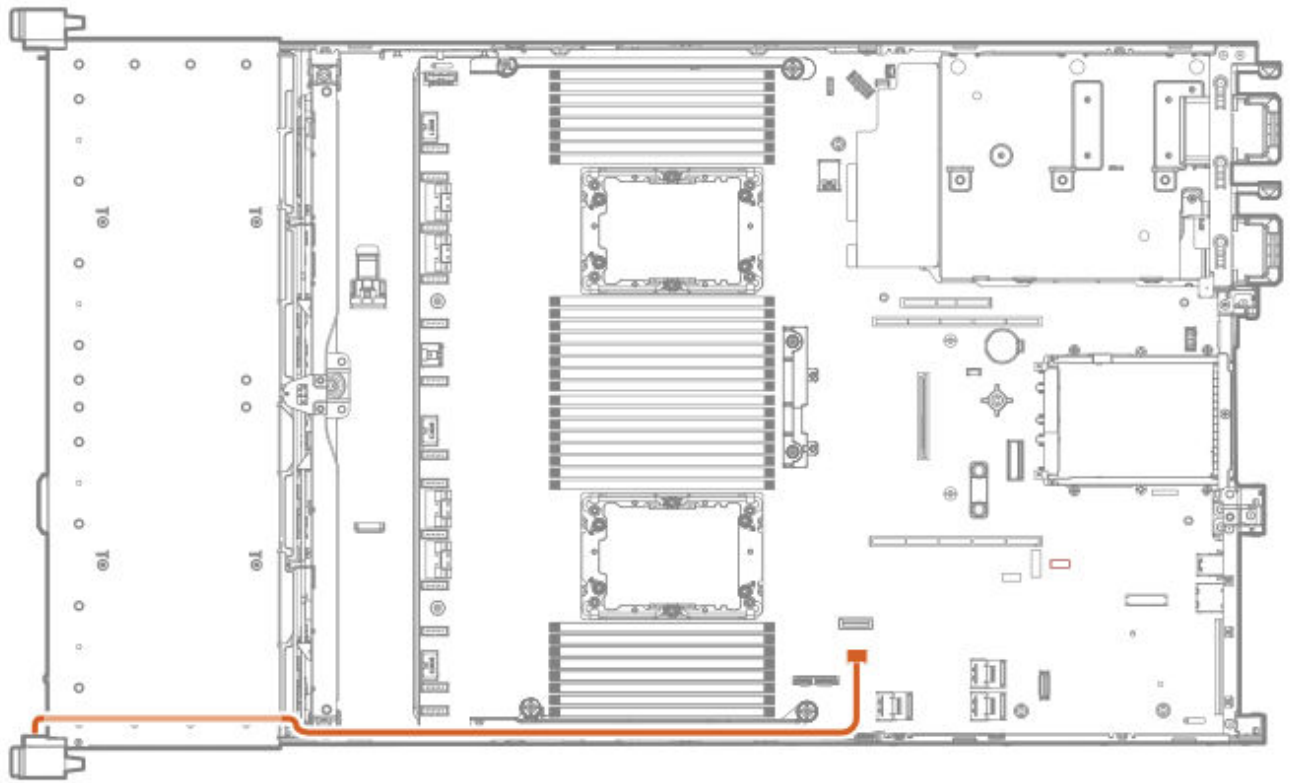


## Cable routing: Serial port


Standard

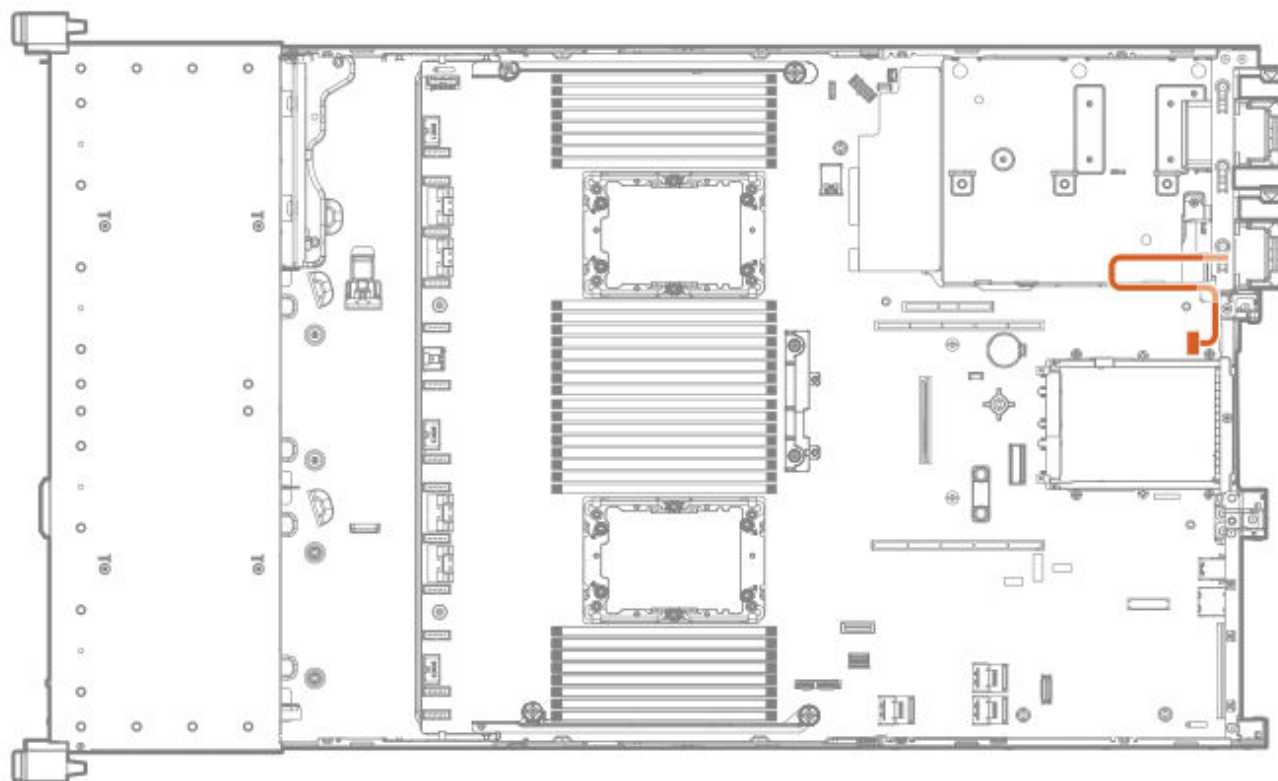

**Tertiary riser**

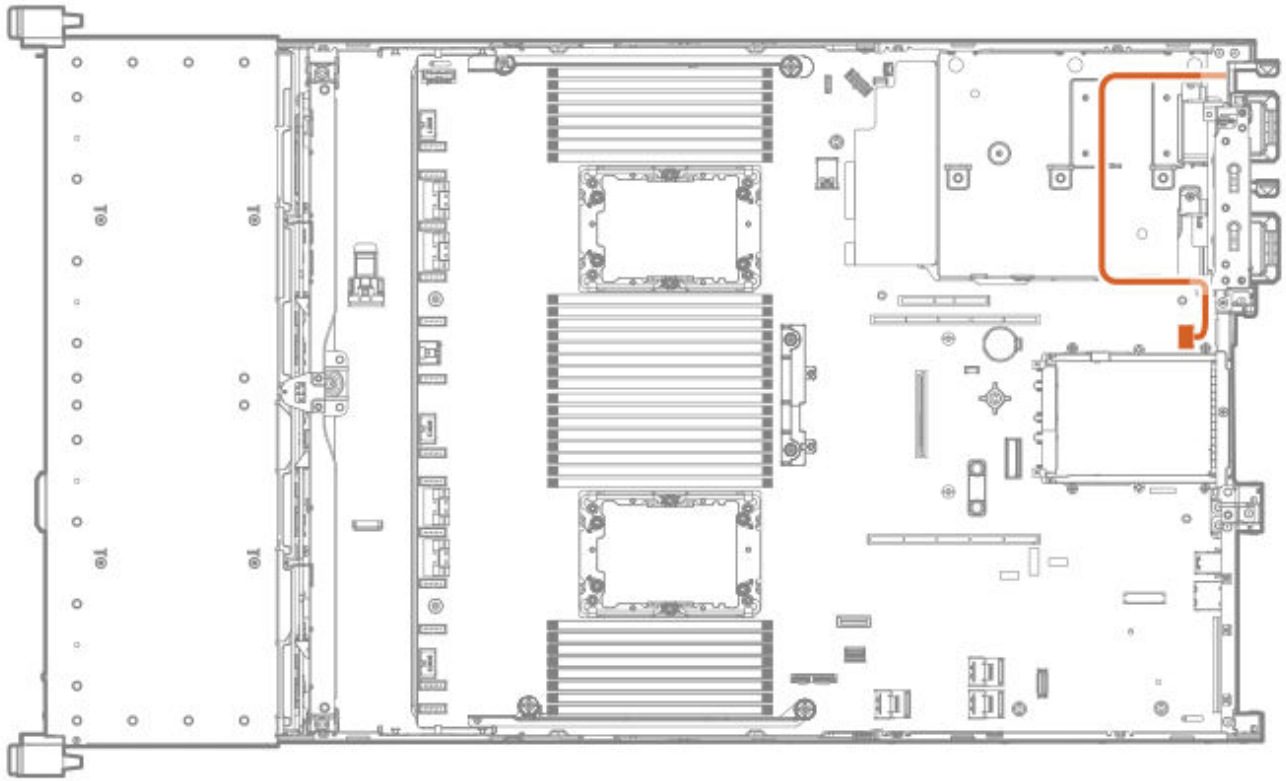

## Cable routing: OCP NVMe enablement

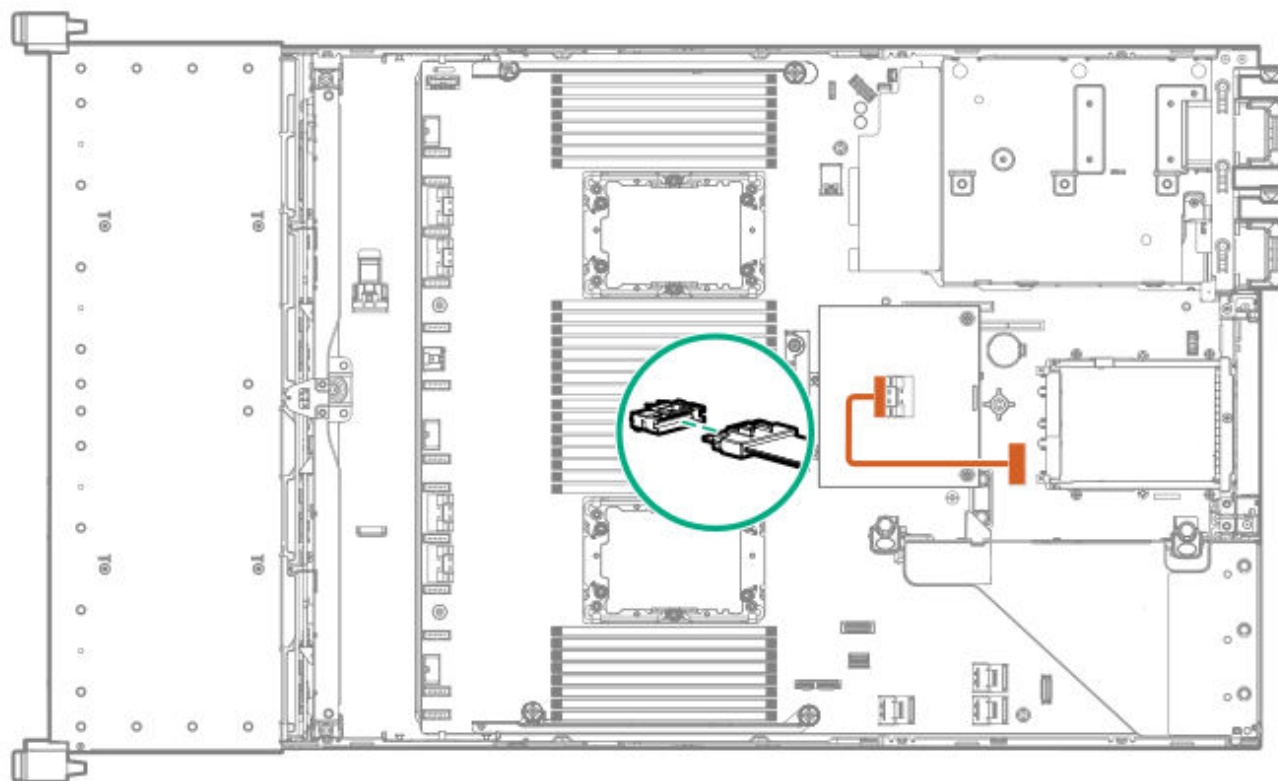

## Configuration resources

Use the following resources to find documentation for configuring and managing your server.

- Some utilities might not apply to your server. For information about server compatibility with the products listed in this chapter, see the product QuickSpecs (<https://buy.hpe.com/us/en/p/1013291298>).
- Products ordered from HPE Factory Express might have already been configured with some or all the configurations in this chapter. To determine if any additional setup is required, see your HPE Factory Express order.
- For the most recent changes, feature enhancements, and bug fixes, see the latest product release notes.

### Subtopics

**Updating firmware or system ROM**  
**Configuring the server**

**Configuring storage controllers**

**Deploying an OS**

**Configuring security**

**Optimizing the server**

**Server management**

**Managing Linux-based high performance compute clusters**

## Updating firmware or system ROM

To	Use
Download service packs	Service Pack for ProLiant (SPP) <a href="https://www.hpe.com/servers/spp/download">https://www.hpe.com/servers/spp/download</a>
Deploy service packs to a single server	Smart Update Manager (SUM) <a href="https://www.hpe.com/info/sum-docs">https://www.hpe.com/info/sum-docs</a>
Deploy service packs to multiple servers	HPE OneView <a href="https://www.hpe.com/support/oneview-docs">https://www.hpe.com/support/oneview-docs</a>
<ul style="list-style-type: none"><li>• Enable policy-based management of server or server group firmware for distributed server infrastructure</li><li>• Monitor server compliance with a configured firmware baseline</li><li>• Receive automatic iLO firmware updates</li><li>• Receive baseline update alerts</li></ul>	HPE GreenLake for Compute Ops Management <a href="https://www.hpe.com/info/com-docs">https://www.hpe.com/info/com-docs</a>

# Configuring the server

To configure	Use
Single server (GUI)	<ul style="list-style-type: none"><li>• Intelligent Provisioning <a href="https://www.hpe.com/info/intelligentprovisioning/docs">https://www.hpe.com/info/intelligentprovisioning/docs</a></li><li>• iLO remote console or web interface <a href="https://www.hpe.com/support/ilo5">https://www.hpe.com/support/ilo5</a></li><li>• UEFI System Utilities <a href="https://www.hpe.com/info/UEFI-manuals">https://www.hpe.com/info/UEFI-manuals</a></li><li>• HPE GreenLake for Compute Ops Management <a href="https://www.hpe.com/info/com-docs">https://www.hpe.com/info/com-docs</a></li></ul>
Single server (scripting)	<ul style="list-style-type: none"><li>• RESTful Interface Tool <a href="https://www.hpe.com/support/restfulinterface/docs">https://www.hpe.com/support/restfulinterface/docs</a></li><li>• Python iLO Redfish Library (python-ilo-rest-library) <a href="https://github.com/HewlettPackard/python-ilo-rest-library">https://github.com/HewlettPackard/python-ilo-rest-library</a></li><li>• Scripting Tools for Windows Powershell <a href="https://www.hpe.com/info/powershell/docs">https://www.hpe.com/info/powershell/docs</a></li><li>• iLO RESTful API <a href="https://hewlettpackard.github.io/ilo-rest-api-docs/ilo5/">https://hewlettpackard.github.io/ilo-rest-api-docs/ilo5/</a></li><li>• HPE GreenLake for Compute Ops Management API <a href="https://developer.greenlake.hpe.com/">https://developer.greenlake.hpe.com/</a></li></ul>
Multiple servers (either UI or scripting)	<ul style="list-style-type: none"><li>• HPE OneView <sup>1</sup><sub>—</sub></li></ul>

## To configure

## Use

<https://www.hpe.com/support/oneview-docs>

- HPE GreenLake for Compute Ops Management

<https://www.hpe.com/info/com-docs>

- **Server settings:** Define server-specific parameters such as firmware baselines, and then apply them to server groups.
- **Server groups:** Organize servers into custom-defined sets with associated server settings, and then apply group-specific policies to create a consistent configuration across the servers in the group.

<sup>1</sup> For servers running HPE OneView, do not use another tool, such as iLO, to delete or change certain settings. For more information about using HPE OneView and iLO to manage the same server, see the iLO user guide at <https://www.hpe.com/support/ilo5>.

## Configuring storage controllers

### Controller type

### Documentation

#### SR controllers

—

Gen10 Plus

HPE SR Gen10 Plus Controller User Guide

<https://www.hpe.com/info/SR-Gen10Plus-UG>

Gen10

HPE Smart Array SR Controller Gen10 User Guide

<https://www.hpe.com/support/SR-Gen10-UG>

Cross-generation SR guides

- HPE SR Storage Administrator User Guide  
<https://www.hpe.com/support/SSA-UG>
- HPE SR Storage Administrator CLI User Guide  
<https://www.hpe.com/support/SSA-UG>

<b>Controller type</b>	<b>Documentation</b>
<b>MR controllers</b>	—
Gen10 Plus	HPE MR Gen10 Plus Controller User Guide <a href="https://www.hpe.com/info/MR-Gen10Plus-UG">https://www.hpe.com/info/MR-Gen10Plus-UG</a>
Cross-generation MR guides	HPE MR Storage Administrator User Guide <a href="https://www.hpe.com/support/MRSA">https://www.hpe.com/support/MRSA</a> HPE MR StorCLI User Guide
<b>Software RAID</b>	—
HPE SR100i Gen10 Plus Software RAID	HPE SR Gen10 Plus Software RAID User Guide <a href="https://www.hpe.com/support/SSC-SRGen10Plus-ug">https://www.hpe.com/support/SSC-SRGen10Plus-ug</a>
HPE Smart Array S100i SR Gen10 Software RAID	HPE Smart Array SR Controller Gen10 User Guide <a href="https://www.hpe.com/support/SR-Gen10-UG">https://www.hpe.com/support/SR-Gen10-UG</a>
<b>Intel Virtual RAID on CPU</b>	—
Intel VROC for HPE Gen10 Plus	OS-specific Intel VROC user guide: <a href="https://www.hpe.com/support/IntelVROC-Gen10Plus-docs">https://www.hpe.com/support/IntelVROC-Gen10Plus-docs</a>  OS-specific configuration guides: <ul style="list-style-type: none"> <li>Intel Virtual RAID on CPU (Intel VROC) for Windows User Guide <a href="https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/338065_Intel_VROC_UserGuide_Windows.pdf">https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/338065_Intel_VROC_UserGuide_Windows.pdf</a></li> <li>Intel Virtual RAID on CPU (Intel VROC) for Linux User Guide <a href="https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/linux-intel-vroc-userguide-333915.pdf">https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/linux-intel-vroc-userguide-333915.pdf</a></li> <li>Intel Volume Management Device Driver for VMware ESXi User Guide</li> </ul>

**Controller type****Documentation**

<https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/ESXi-Intel-VROC-UserGuide.pdf>

---

## Deploying an OS

For a list of supported operating systems, see the HPE Servers Support & Certification Matrices:

<https://www.hpe.com/support/Servers-Certification-Matrices>

<b>To</b>	<b>See</b>
Configure the server to boot from a SAN	HPE Boot from SAN Configuration Guide <a href="https://www.hpe.com/info/boot-from-san-config-guide">https://www.hpe.com/info/boot-from-san-config-guide</a>
Configure the server to boot from a PXE server	UEFI System Utilities User Guide for HPE ProLiant Gen10, ProLiant Gen10 Plus Servers and HPE Synergy <a href="https://www.hpe.com/support/UEFIGen10-UG-en">https://www.hpe.com/support/UEFIGen10-UG-en</a>
Deploy an OS using iLO virtual media	iLO user guide <a href="https://www.hpe.com/support/ilo5">https://www.hpe.com/support/ilo5</a>
Deploy an OS using Intelligent Provisioning	Intelligent Provisioning user guide <a href="https://www.hpe.com/info/intelligentprovisioning/docs">https://www.hpe.com/info/intelligentprovisioning/docs</a>

---

## Configuring security

To	See
Implement server security best practices.	<ul style="list-style-type: none"><li>• HPE Gen10, Gen10 Plus, and Gen11 Security Reference Guide <a href="https://www.hpe.com/info/server-security-reference-en">https://www.hpe.com/info/server-security-reference-en</a></li><li>• HPE iLO 5 Security Technology Brief <a href="https://www.hpe.com/support/ilo5-security-en">https://www.hpe.com/support/ilo5-security-en</a></li></ul>
Configure and use the Server Configuration Lock feature on HPE Trusted Supply Chain servers and other servers that have the Server Configuration Lock feature enabled.	Server Configuration Lock User Guide for HPE ProLiant Gen10, Gen10 Plus, and Gen11 servers and HPE Synergy <a href="https://www.hpe.com/info/server-config-lock-UG-en">https://www.hpe.com/info/server-config-lock-UG-en</a>

## Optimizing the server

To	See
Optimize server performance through management and tuning features.	HPE Server Performance Management and Tuning Guide <a href="https://www.hpe.com/info/server-performance-management-tuning-en">https://www.hpe.com/info/server-performance-management-tuning-en</a>
Obtain recommendations for resolving incorrect settings.	HPE InfoSight for Servers User Guide <a href="https://www.hpe.com/support/InfoSight-for-Servers-UG-en">https://www.hpe.com/support/InfoSight-for-Servers-UG-en</a>

# Server management

To monitor	See
Single server	HPE iLO <a href="https://www.hpe.com/support/ilo5">https://www.hpe.com/support/ilo5</a>
Multiple servers	HPE OneView <a href="https://www.hpe.com/support/oneview-docs">https://www.hpe.com/support/oneview-docs</a>
Single or multiple servers	HPE GreenLake for Compute Ops Management <a href="https://www.hpe.com/info/com-docs">https://www.hpe.com/info/com-docs</a>

## Managing Linux-based high performance compute clusters

To	Use
Provision, manage, and monitor clusters.	HPE Performance Cluster Manager <a href="https://www.hpe.com/support/hpcm_manuals">https://www.hpe.com/support/hpcm_manuals</a>
Optimize your applications.	HPE Performance Analysis Tools <a href="https://www.hpe.com/info/perftools">https://www.hpe.com/info/perftools</a>
Optimize software library for low latency and high bandwidth, both on-node and off-node, for point-to-point and collective communications.	HPE Cray Programming Environment User Guide <a href="https://www.hpe.com/info/cray-pe-user-guides">https://www.hpe.com/info/cray-pe-user-guides</a>

## Troubleshooting

### Subtopics

[NMI functionality](#)

[Troubleshooting resources](#)

## NMI functionality

An NMI crash dump enables administrators to create crash dump files when a system is hung and not responding to traditional debugging methods.

An analysis of the crash dump log is an essential part of diagnosing reliability problems, such as hanging operating systems, device drivers, and applications. Many crashes freeze a system, and the only available action for administrators is to cycle the system power. Resetting the system erases any information that could support problem analysis, but the NMI feature preserves that information by performing a memory dump before a hard reset.

To force the OS to initiate the NMI handler and generate a crash dump log, the administrator can use the iLO Generate NMI feature.

## Troubleshooting resources

Troubleshooting resources are available for HPE Gen10 and Gen10 Plus server products in the following documents:

- Troubleshooting Guide for HPE ProLiant Gen10 and Gen10 Plus servers provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance.
- Error Message Guide for HPE ProLiant Gen10 Plus servers and HPE Synergy provides a list of error messages and information to assist with interpreting and resolving error messages.
- Integrated Management Log Messages and Troubleshooting Guide for HPE ProLiant Gen10 and Gen10 Plus servers and HPE Synergy provides IML messages and associated troubleshooting information to resolve critical and cautionary IML events.

To access troubleshooting resources for your product, see the [\*\*Hewlett Packard Enterprise website\*\*](#).

# Battery replacement

If the server no longer automatically displays the correct date and time, you may need to replace the battery that provides power to the real-time clock.




**WARNING:** The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 60°C (140°F).
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the spare designated for this product.

To remove the component:

1. Power down the server.
2. Remove all power:
  - a. Disconnect each power cord from the power source.
  - b. Disconnect each power cord from the server.
3. Do one of the following:
  - Extend the server from the rack.
  - Remove the server from the rack.
4. Remove the access panel.
5. If installed, remove the secondary PCIe riser cage.
6. Locate the battery.
7. Remove the battery.

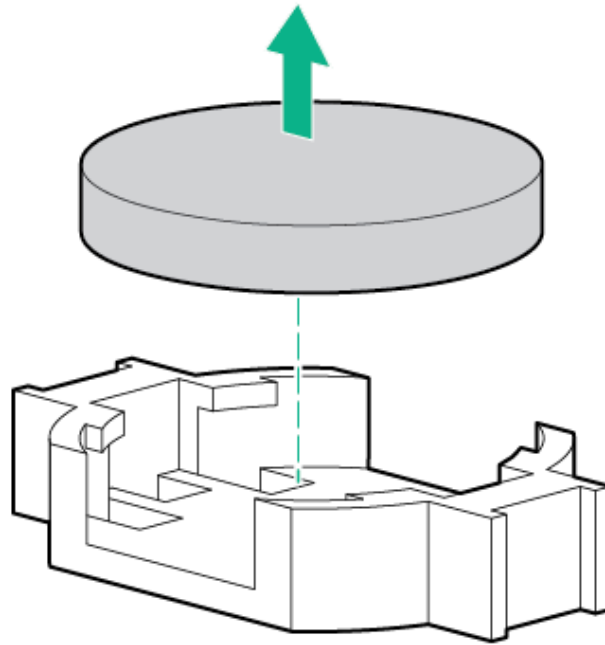

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

## Specifications

### Subtopics

[Environmental specifications](#)

[Mechanical specifications](#)

[Power supply specifications](#)

## Environmental specifications

Specification	Value
<b>Temperature range</b> $\frac{1}{-}$	—
Operating	10°C to 35°C (50°F to 95°F)
Nonoperating	-30°C to 60°C (-22°F to 140°F)

Specification	Value
<b>Relative humidity (noncondensing)</b>	—
Operating	Minimum to be the higher (more moisture) of -12°C (10.4°F) dew point or 8% relative humidity Maximum to be 24°C (75.2°F) dew point or 90% relative humidity
Nonoperating	5% to 95% 38.7°C (101.7°F), maximum wet bulb temperature

<sup>1</sup> All temperature ratings shown are for sea level. An altitude derating of 1.0°C per 304.8 m (1.8°F per 1000 ft) to 3048 m (10,000 ft) is applicable. No direct sunlight allowed. Maximum rate of change is 20°C per hour (36°F per hour). The upper limit and rate of change might be limited by the type and number of options installed.

For certain approved hardware configurations, the supported system inlet temperature range is extended:

- 5°C to 10°C (41°F to 50°F) and 35°C to 40°C (95°F to 104°F) at sea level with an altitude derating of 1.0°C per every 175 m (1.8°F per every 574 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).
- 40°C to 45°C (104°F to 113°F) at sea level with an altitude derating of 1.0°C per every 125 m (1.8°F per every 410 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).

The approved hardware configurations for this system are listed on the [Hewlett Packard Enterprise website](#).

## Mechanical specifications

Specification	Value
Height	8.75 cm (3.44 in)
Depth, SFF	71.2 cm (28.00 in)
Depth, LFF	74.9 cm (29.50 in)
Width	44.54 cm (17.54 in)
Weight, SFF minimum	16.12 kg (35.54 lbs)
Weight, SFF maximum	28.77 kg (63.43 lbs)
Weight, LFF minimum	22.48 kg (49.56 lbs)

Specification	Value
Weight, LFF maximum	33.99 kg (74.94 lbs)

## Power supply specifications

Depending on the installed options and the regional location where the server was purchased, the server can be configured with one of the following power supplies:

- [HPE 800 W Flex Slot Universal Hot-plug Low Halogen Power Supply](#)
- [HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)
- [HPE 800 W Flex Slot Titanium Hot-plug Low Halogen Power Supply](#)
- [HPE 800 W Flex Slot -48 VDC Hot-plug Low Halogen Power Supply](#)
- [HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)
- [HPE 1600 W Flex Slot -48 VDC Hot-plug Power Supply](#)

For detailed power supply specifications, see the QuickSpecs on the [Hewlett Packard Enterprise website](#).

### Subtopics

[HPE 800 W Flex Slot Universal Hot-plug Low Halogen Power Supply](#)

[HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

[HPE 800 W Flex Slot Titanium Hot-plug Low Halogen Power Supply](#)

[HPE 800 W Flex Slot -48 VDC Hot-plug Low Halogen Power Supply](#)

[HPE 1000 W Flex Slot Titanium Hot-plug Power Supply](#)

[HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

[HPE 1600 W Flex Slot -48 VDC Hot-plug Power Supply](#)

## HPE 800 W Flex Slot Universal Hot-plug Low Halogen Power Supply

Specification	Value
<b>Input requirements</b>	—
Rated input voltage	200 VAC to 277 VAC 380 VDC

<b>Specification</b>	<b>Value</b>
Rated input frequency	50 Hz to 60 Hz
Rated input current	4.4 A at 200 VAC 3.8 A at 230 VAC 2.3 A at 380 VDC
Maximum rated input power	869 W at 200 VAC 865 W at 230 VAC 861 W at 277 VAC 863 W at 380 VDC
BTUs per hour	2964 at 200 VAC 2951 at 230 VAC 2936 at 277 VAC 2943 at 380 VDC
<b>Power supply output</b>	—
Rated steady-state power	800 W at 200 VAC to 277 VAC input
Maximum peak power	800 W at 200 VAC to 277 VAC input

## HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply

<b>Specification</b>	<b>Value</b>
<b>Input requirements</b>	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz Not applicable to 240 VDC
Rated input current	9.1 A at 100 VAC 4.4 A at 200 VAC

<b>Specification</b>	<b>Value</b>
	3.6 A at 240 VDC for China only
Maximum rated input power	899 W at 100 VAC 867 W at 200 VAC 864 W at 240 VDC for China only
BTUs per hour	3067 at 100 VAC 2958 at 200 VAC 2949 at 240 VAC for China only
<b>Power supply output</b>	—
Rated steady-state power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only
Maximum peak power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only

## HPE 800 W Flex Slot Titanium Hot-plug Low Halogen Power Supply

<b>Specification</b>	<b>Value</b>
<b>Input requirements</b>	—
Rated input voltage	200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz Not applicable to 240 VDC
Rated input current	4.3 A at 200 VAC 3.6 A at 240 VAC 3.6 A at 240 VDC for China only
Maximum rated input power	851 W at 200 VAC

Specification	Value
	848 W at 240 VAC
	848 W at 240 VDC for China only
BTUs per hour	2905 at 200 VAC
	2893 at 240 VAC
	2893 at 240 VDC for China only
<b>Power supply output</b>	—
Rated steady-state power	800 W at 200 VAC to 240 VAC input
	800 W at 240 VDC input for China only
Maximum peak power	800 W at 200 VAC to 240 VAC input
	800 W at 240 VDC input for China only

## HPE 800 W Flex Slot -48 VDC Hot-plug Low Halogen Power Supply

Specification	Value
<b>Input requirements</b>	—
Rated input voltage	-40 VDC to -72 VDC
	-48 VDC nominal input
Rated input current	22.1 A at -40 VDC input
	18.2 A at -48 VDC input, nominal input
	12.0 A at -72 VDC input
Rated input power (W)	874 W at -40 VDC input
	865 W at -48 VDC input, nominal input
	854 W at -72 VDC input
Rated input power (BTUs per hour)	2983 at -40 VDC input
	2951 at -48 VDC input, nominal input
	2912 at -72 VDC input
<b>Power supply output</b>	—

Specification	Value
Rated steady-state power (W)	800 W at -40 VDC to -72 VDC
Maximum peak power (W)	800 W at -40 VDC to -72 VDC
Maximum peak power	800 W at -40 VDC to -72 VDC input



**WARNING:** To reduce the risk of electric shock or energy hazards:

- This equipment must be installed by trained service personnel.
- Connect the equipment to a reliably grounded secondary circuit source. A secondary circuit has no direct connection to a primary circuit and derives its power from a transformer, converter, or equivalent isolation device.
- The branch circuit overcurrent protection must be rated 27 A.



**CAUTION:** This equipment is designed to permit the connection of the earthed conductor of the DC supply circuit to the earthing conductor at the equipment.

If this connection is made, all of the following must be met:

- This equipment must be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus to which the DC supply system earthing electrode conductor is connected.
- This equipment must be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, and also the point of earthing of the DC system. The DC system must be earthed elsewhere.
- The DC supply source is to be located within the same premises as the equipment.
- Switching or disconnecting devices must not be in the earthed circuit conductor between the DC source and the point of connection of the earthing electrode conductor.

## HPE 1000 W Flex Slot Titanium Hot-plug Power Supply

Specification	Value
<b>Input requirements</b>	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz
Rated input current	11.3 A at 100 VAC 6.1 A at 200 VAC
Maximum rated input power	1103 W at 100 VAC 1064 W at 200 VAC
BTUs per hour	3764 at 100 VAC 3629 at 200 VAC
<b>Power supply output</b>	—
Rated steady-state power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC input
Maximum peak power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC

## HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply

Specification	Value
<b>Input requirements</b>	—
Rated input voltage	200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz

<b>Specification</b>	<b>Value</b>
Rated input current	8.7 A at 200 VAC
	7.5 A at 230 VAC
Maximum rated input power	1734 W at 200 VAC
	1727 W at 230 VAC
BTUs per hour	5918 at 200 VAC
	5891 at 230 VAC
<b>Power supply output</b>	—
Rated steady-state power	1600 W at 200 VAC to 240 VAC input
	1600 W at 240 VDC input
Maximum peak power	2200 W for 1 ms (turbo mode) at 200 VAC to 240 VAC input

## HPE 1600 W Flex Slot -48 VDC Hot-plug Power Supply

<b>Specification</b>	<b>Value</b>
<b>Input requirements</b>	—
Rated input voltage	-40 VDC to -72 VDC
Rated input frequency	DC
Nominal input current	44.2 A DC at -40 VDC input
	36.6 A DC at -48 VDC input
	24.4 A DC at -72 VDC input
Maximum Rated Input Wattage Rating	1766 W at -40 VDC input
	1758 W at -48 VDC input
	1755 W at -72 VDC input
BTUs per hour	6026 at -40 VDC input
	6000 at -48 VDC input input
	5989 at -72 VDC input

<b>Specification</b>	<b>Value</b>
<b>Power supply output</b>	—
Rated steady-state power	1600 W at -40 VDC to -72 VDC
Maximum peak power	1600 W at -40 VDC to -72 VDC

## Support and other resources

### Subtopics

[Accessing Hewlett Packard Enterprise Support](#)

[Accessing updates](#)

[Remote support](#)

[Warranty information](#)

[Regulatory information](#)

[Documentation feedback](#)

## Accessing Hewlett Packard Enterprise Support

- For live assistance, go to the Contact Hewlett Packard Enterprise Worldwide website:

<https://www.hpe.com/info/assistance>

- To access documentation and support services, go to the Hewlett Packard Enterprise Support Center website:

<https://www.hpe.com/support/hpesc>

### Information to collect

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version
- Error messages
- Product-specific reports and logs

- Add-on products or components
- Third-party products or components

## Accessing updates

- Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.
- To download product updates:

### Hewlett Packard Enterprise Support Center

<https://www.hpe.com/support/hpesc>

### Hewlett Packard Enterprise Support Center: Software downloads

<https://www.hpe.com/support/downloads>

### My HPE Software Center

<https://www.hpe.com/software/hpesoftwarecenter>

- To subscribe to eNewsletters and alerts:

<https://www.hpe.com/support/e-updates>

- To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center **More Information on Access to Support Materials** page:

<https://www.hpe.com/support/AccessToSupportMaterials>



#### **IMPORTANT:**

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HPE Passport set up with relevant entitlements.

## Remote support

Remote support is available with supported devices as part of your warranty or contractual support agreement. It provides intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which initiates a fast and accurate resolution based on the

service level of your product. Hewlett Packard Enterprise strongly recommends that you register your device for remote support.

If your product includes additional remote support details, use search to locate that information.

#### **HPE Get Connected**

<https://www.hpe.com/services/getconnected>

#### **HPE Pointnext Tech Care**

<https://www.hpe.com/services/techcare>

#### **HPE Datacenter Care**

<https://www.hpe.com/services/datacentercare>

## **Warranty information**

To view the warranty information for your product, see the links provided below:

#### **HPE ProLiant and IA-32 Servers and Options**

<https://www.hpe.com/support/ProLiantServers-Warranties>

#### **HPE Enterprise and Cloudline Servers**

<https://www.hpe.com/support/EnterpriseServers-Warranties>

#### **HPE Storage Products**

<https://www.hpe.com/support/Storage-Warranties>

#### **HPE Networking Products**

<https://www.hpe.com/support/Networking-Warranties>

## **Regulatory information**

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

#### **Additional regulatory information**

Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No

1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

**<https://www.hpe.com/info/reach>**

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

**<https://www.hpe.com/info/ecodata>**

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

**<https://www.hpe.com/info/environment>**

## **Documentation feedback**

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, use the **Feedback** button and icons (located at the bottom of an opened document) on the Hewlett Packard Enterprise Support Center portal (<https://support.hpe.com/hpesc>) to send any errors, suggestions, or comments. All document information is captured by the process.